

Rittal – The System.

Faster – better – everywhere.



WKDH Deep Hinged Window Kit

Assembly and operating instructions

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES


FRIEDHELM LOH GROUP



Window Kit Instructions

1. Make a Rectangular cutout of appropriate size where the Window Kit is to be installed (see table below).
2. Drill 8mm holes to match Stud layout.
3. Assemble studs through drilled holes, and tighten supplied washers and nuts to 21 – 30 in-lbs.
4. Before any circuits are energized, all internal and external electrical and mechanical clearances must be checked to assure all assembled and mounted equipment function safely and properly.

Window Kit Size	Max Cutout for Installation
WKDH1212	220mm (H) x 220mm (W)
WKDH1612	320mm (H) x 220mm (W)
WKDH2016	420mm (H) x 320mm (W)
WKDH2416	520mm (H) x 320mm (W)
WKDH2420	520mm (H) x 420mm (W)
WKDH3024	680mm (H) x 520mm (W)
WKDH3624	820mm (H) x 520mm (W)

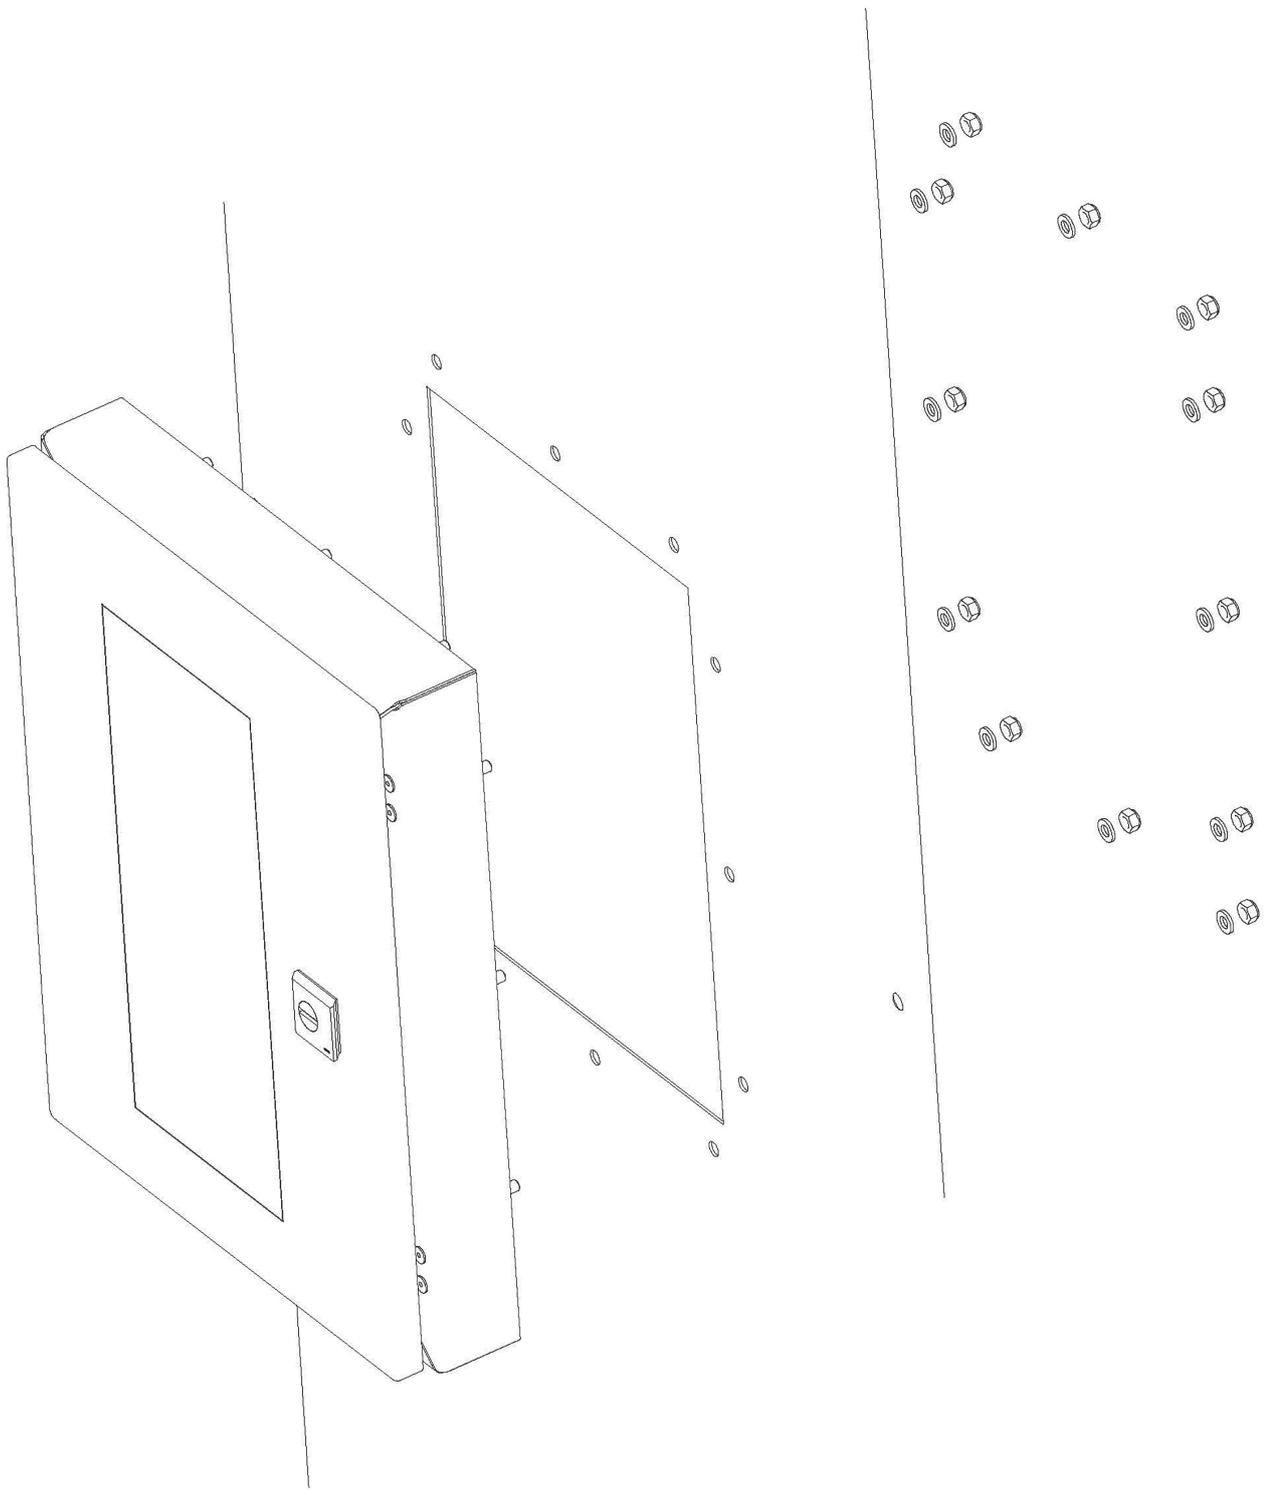

Rittal – The System.

Faster – better – everywhere.

- Enclosures
- Power distribution
- Climate Control
- IT infrastructure
- Software & services

US382 ■ 7/17

Rittal Corporation

Woodfield Corporate Center
425 North Martingale Road, Suite 400 • Schaumburg,
Illinois 60173 • USA
Phone: 937-399-0500 • Toll-free: 800-477-4000
Email: rittal@rittal.us • Website: www.rittal.us

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP

