


Rittal – The System.

Faster – better – worldwide.

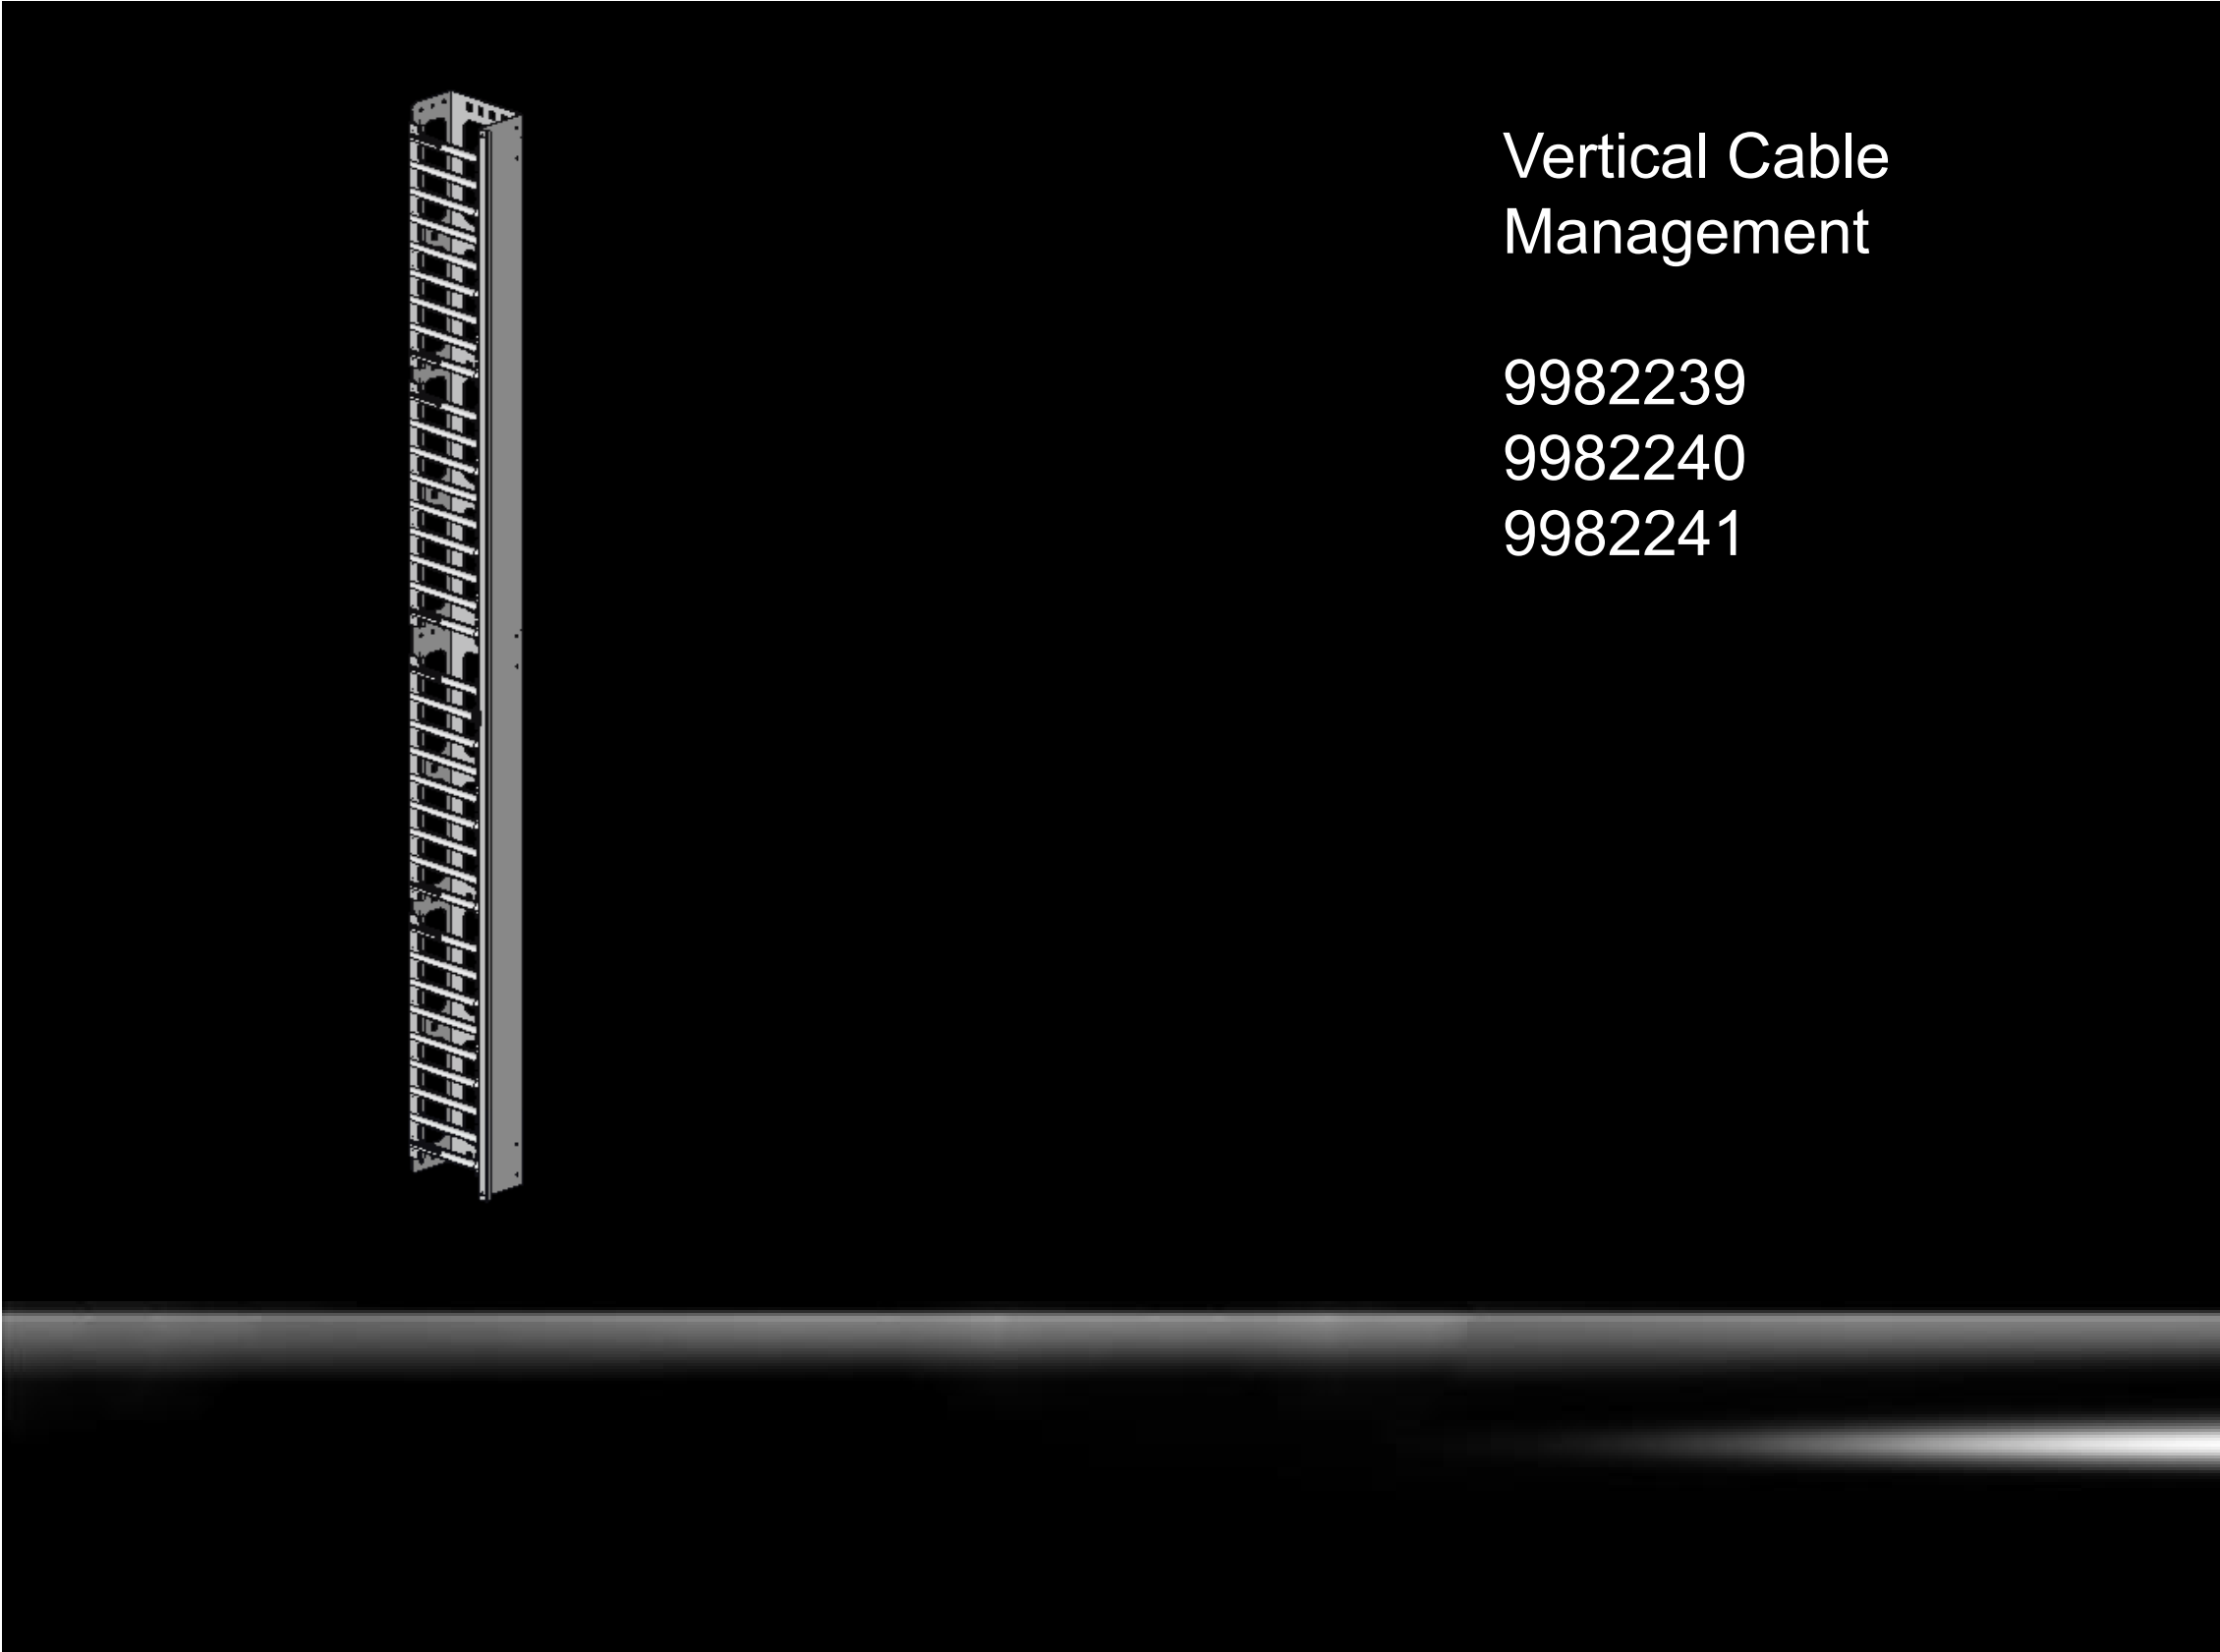

Assembly and operating instructions







Intended use:
Accessory for channeling and structuring the installed cabling


Parts list

Note: General hardware list, Components vary based on kit.

Object Description	Quantity
Vertical Cable Manager	1
Mounting Bracket	2
Screw 5.5 x 13 Pan Torx (recommended torque 51-65 IN-LB (6 Nm))	4
Screw M5 x 12 Pan Torx (recommended torque 51-65 IN-LB (6 Nm))	4
Nut M5 Hex	4
Washer, Oversized	4

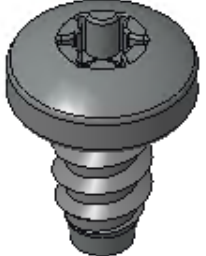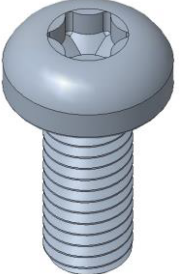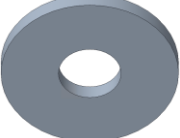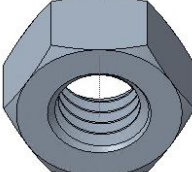			
SCREW 5.5x 13 PAN TORX (P/N 232470)	Screw M5 x 12 Pan Torx (P/N 244462)	Washer, Oversized (P/N 91100A140)	Nut M5 Hex (P/N 200202)

Tools Required

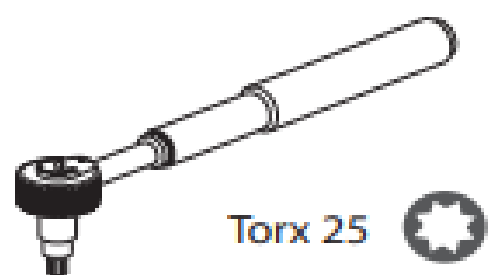

TORX DRIVER







6-Point Standard Socket,
1/4" Square Drive,
5mm Size




Ratchet Wrench,
1/4" Square Drive

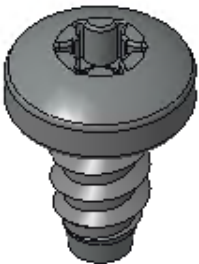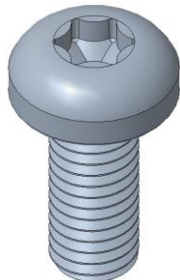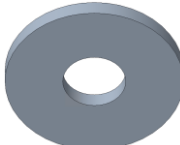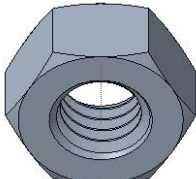

			
SCREW 5.5x 13 PAN TORX (P/N 232470)	Screw M5 x 12 Pan Torx (P/N 244462)	Washer, Oversized (P/N 91100A140)	Nut M5 Hex (P/N 200202)


VERTICAL CABLE MANAGER, 9982239 CONFIGURATION

1. ALIGN THE ROUND HOLES IN THE CABLE MANAGER WITH THE SLOT IN THE MOUNTING BRACKET.
2. USING HARDWARE PROVIDED, ATTACH 2 BRACKETS TO THE CABLE MANAGER.
3. PLACE CABLE MANAGER AGAINST EIA RAIL.
4. USING HARDWARE PROVIDED, ATTACH THE CABLE MANAGER WITH THE MOUNTING BRACKETS TO HOLES IN EIA RAIL (SEE LOCATION "A", 2 PLACES).

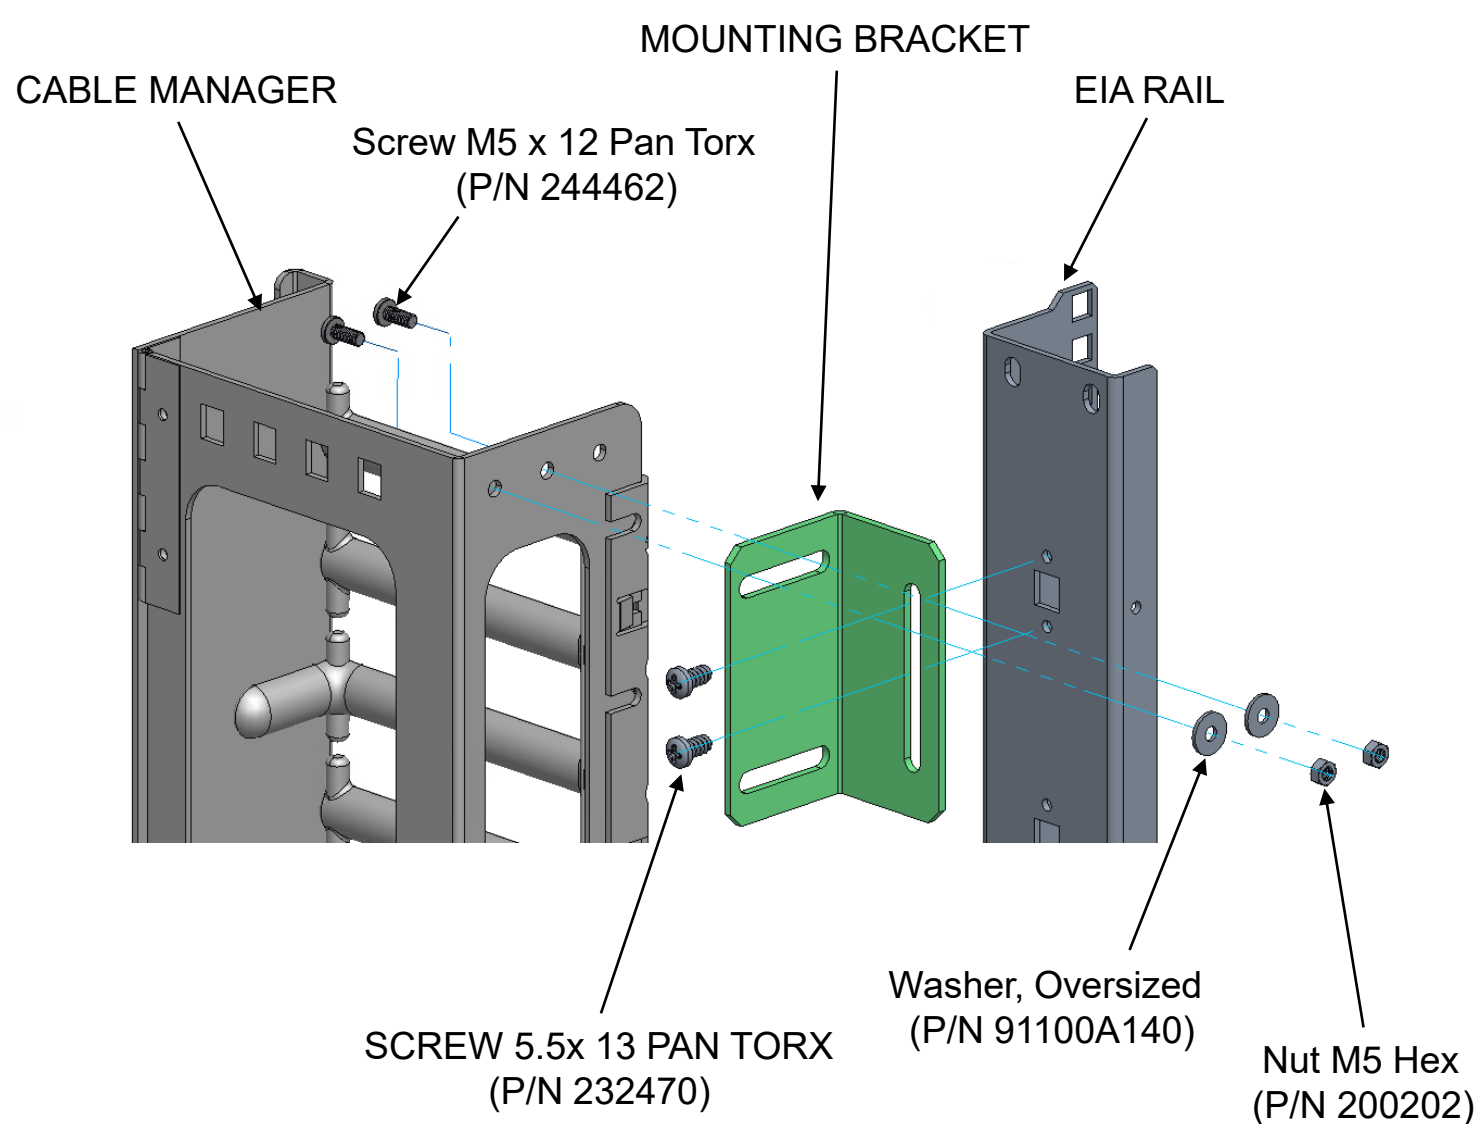

CABLE MANAGER INSTALLATION INSTRUCTIONS

TS RAIL CONFIGURATUION

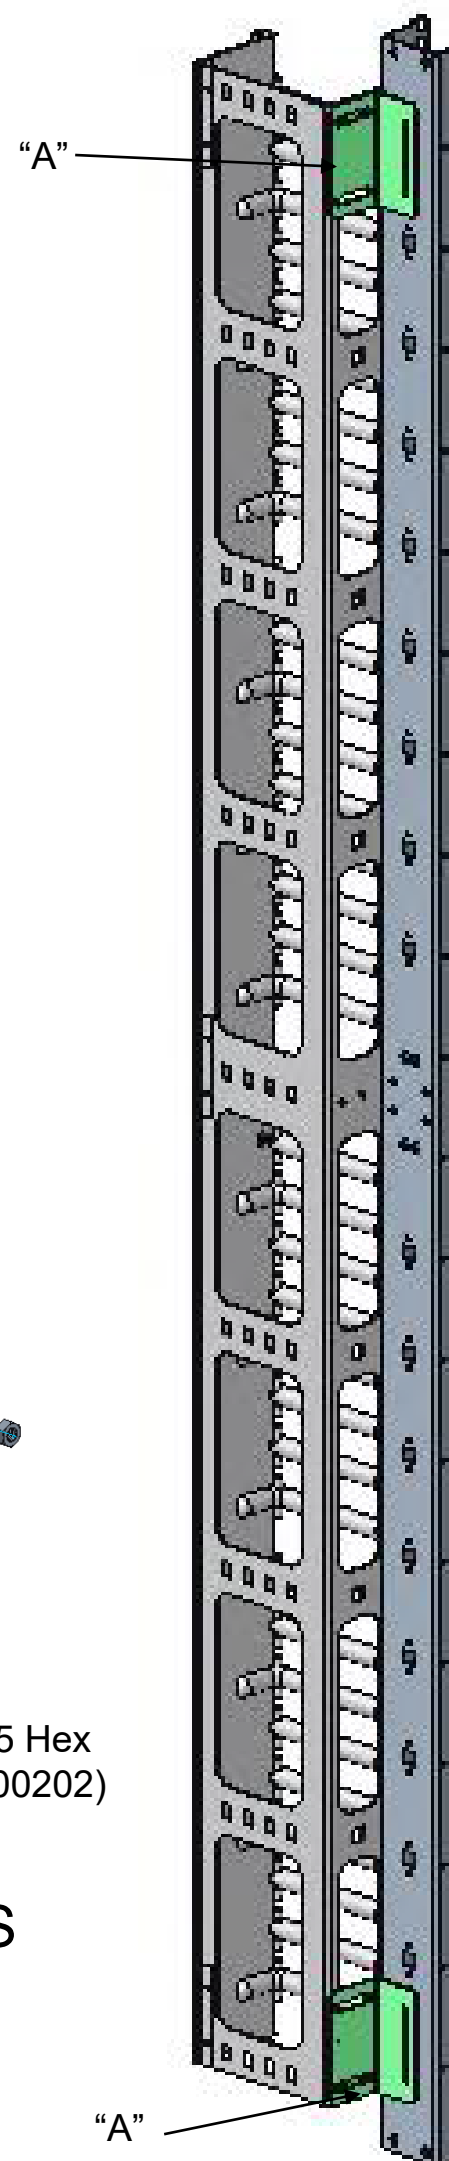

Rittal – The System.

Faster – better – worldwide.

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

Rittal North America LLC is the U.S subsidiary of Rittal GmbH & Co. KG and manufactures the worlds leading Industrial and IT enclosures, racks and accessories, including climate control and power management systems For industrial, data center, outdoor and hybrid applications. For more information about Rittal and its products, Please visit www.rittal.us or call 1-800-447-4000.

Rittal North America LLC
1 Rittal Place • Urbana, Ohio 43078 • USA
Phone: 937-399-0500 • Fax: 937-390-5599 • Toll-free: 800-477-4000
Email: rittal@Rittal.us • Website: <http://www.rittal.us>

Rittal Systems Ltd.
6485 Ordan Drive • Mississauga Ontario L5T 1X2 • Canada
Phone: 905-795-0777 • Fax: 905-795-9548 • Toll-free: 800- 399-0748
Email: marketing@rittal.ca • Website: <http://www.rittal.ca>