


# Rittal – The System.

Faster – better – everywhere.

## CMC III Processing Unit 19" Edition

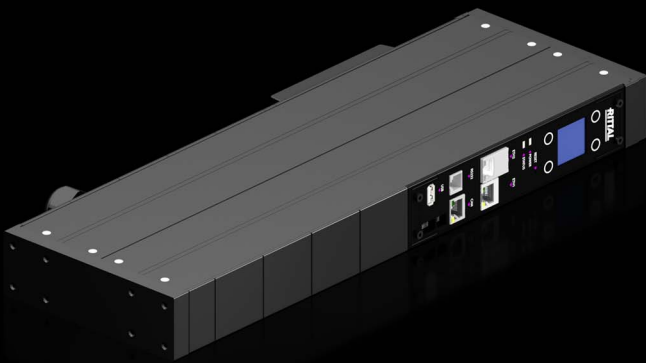

DK 7030.022

## Assembly, installation and operating instructions

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP



# Safety instructions



## DE Bestimmungsgemäße Verwendung

Dieses Produkt dient ausschließlich als Schaltschrank-Überwachungssystem und zur Administrierung verschiedener Schaltschrank-Parameter. Vorgesehene Einsatzorte sind Schränke und Schrank-Anreihungen sowie Rahmengerüste zur Aufnahme von Server- und Netzwerktechnik in Sicherheits- und Technikräumen. Bei abweichender Anwendung ist mit Rittal Rücksprache zu halten. Die Produkte dürfen ausschließlich mit dem von Rittal vorgesehenen Systemzubehör kombiniert und betrieben werden.

### Sicherheitshinweise

Das Gehäuse dieses Produktes darf nicht geöffnet werden! Das Produkt darf nur innerhalb der in den technischen Daten spezifizierten Grenzen betrieben werden! Das Produkt darf nicht in Kontakt mit Wasser, aggressiven oder entzündbaren Gasen und Dämpfen geraten!

## EN Intended use

This product is used exclusively as an enclosure monitoring system and for the administration of various enclosure parameters. Envisaged deployment locations are enclosures and enclosure systems, as well as racks for the installation of server and network technology in secure and technology rooms. Please consult Rittal prior to implementing other applications. These products must be combined and operated only with the system accessories envisaged by Rittal.

### Safety instructions

The casing of this product must not be opened! The product can be used only within the limits of the specified technical data! The product must not come into contact with water, aggressive or flammable gases and vapours!

## FR Utilisation correcte

Ce produit est utilisé exclusivement comme système de surveillance des baies IT et pour la gestion de différents paramètres des baies. Les conditions d'intégration prévues sont les baies individuelles ou juxtaposées, les racks pour applications serveurs et réseaux dans des locaux techniques, dédiés et sécurisés. Pour toute autre application, veuillez contacter Rittal. Les produits doivent être combinés et utilisés exclusivement avec les accessoires Rittal prévus.

### Consignes de sécurité

Le boîtier du produit ne doit pas être ouvert ! Le produit doit être utilisé uniquement dans les limites spécifiées dans les caractéristiques techniques. Le produit ne doit pas être en contact avec de l'eau, des gaz et vapeurs agressifs ou inflammables !

## NL Voorgescreven gebruik

Dit product wordt uitsluitend gebruikt als monitoring systeem voor schakelkasten en voor het beheer van verschillende schakelkast parameters. Beoogde gebruikslocaties zijn kasten en kastsystemen, evenals frames voor de montage van server- en netwerktechniek in beveiligings- en technische ruimten. Bij gebruik dat hiervan afwijkt, dient u contact op te nemen met Rittal. De producten mogen uitsluitend met de door Rittal aangegeven systeemtoebehoren worden gecombineerd en gebruikt.

### Veiligheidsvoorschriften

De behuizing van dit product mag niet worden geopend. Het product mag uitsluitend binnen de in de technische gegevens aangegeven grenzen worden gebruikt. Het product mag niet in contact komen met water of met bijtende of ontvlambare gassen en dampen.

## SE Ändamålsenlig användning

Denna produkt används uteslutande som ett kapslingsövervakningssystem och för administration av olika kapslingsparametrar. Avsedda användningsplatser är skåp eller ihopbyggda skåpsystem samt ramstativ för server- och nätverksteknik i säkerhets- och teknikrum. All annan användning är endast tillåten efter samråd med Rittal. Produkterna får endast kombineras och användas med de systemtillbehör som föreskrivits av Rittal.

## Säkerhetsinstruktioner

Denna produkts hölje får inte öppnas! Produkten får endast köras inom de angivna gränser som specificeras i avsnittet om tekniska data! Produkten får inte komma i kontakt med vatten eller aggressiva eller brännbara gaser och ångor!

## IT Impiego conforme alle norme

Questo prodotto viene utilizzato esclusivamente come sistema di monitoraggio e per la gestione dei diversi parametri dell'armadio. Il suo impiego è previsto all'interno di armadi di comando, anche in batteria, nonché in rack per l'alloggiamento di server e apparecchi di rete nei locali tecnici e di sicurezza. Per un uso diverso da quello specificato, rivolgersi al proprio referente Rittal. I prodotti devono essere combinati e utilizzati unicamente con gli accessori di sistema previsti da Rittal.

### Istruzioni di sicurezza

Non aprire l'alloggiamento del prodotto. Il prodotto deve essere utilizzato rispettando i valori limite specificati nei dati tecnici. Evitare che il prodotto venga a contatto con acqua, gas aggressivi o infiammabili e vapore.

## ES Uso correcto

Este producto se utiliza exclusivamente como sistema de monitorización del armario de control y para la administración de diversos parámetros del mismo. El montaje debe realizarse en armarios de distribución y armarios ensamblados, así como en racks para alojar servidores y equipos de redes en salas técnicas y de seguridad. Para otro tipo de aplicación debe consultarse previamente a Rittal. Estos productos deben combinarse y utilizarse exclusivamente con los accesorios previstos para ello por parte de Rittal.

### Instrucciones de seguridad

¡No abrir la carcasa del producto! ¡El producto debe utilizarse exclusivamente dentro de los límites especificados en los datos técnicos! ¡El producto no debe entrar en contacto con agua, ni con gases y vapores agresivos o inflamables! ¡

## FI Määräystenmukainen käyttö

Tätä tuotetta käytetään yksinomaan kotelon valvontajärjestelmänä ja erilaisten kotelon parametrien hallintaan. Tarkoitettuja käyttöalueita ovat kaapit ja rivitetyt kaapit sekä runkoalustat palvelin- ja verkkotekniikan käyttämiseen turva- ja tekniikkatiloissa. Muunlaisesta käytöstä on sovittava Rittalin kanssa. Näitä tuotteita saa yhdistellä ja käyttää vain Rittalin tarkoittamien järjestelmällisävarusteiden kanssa.

### Turvallisuusohjeet

Älä avaa tämän tuotteen koteloa. Käytä tuotetta vain teknisissä tiedoissa mainittujen rajojen sisällä. Tuote ei saa joutua kosketuksiin veden tai aggressiivisten tai syttyvien kaasujen tai höyryjen kanssa.

## DK Forskriftsmæssig anvendelse

Dette produkt bruges udelukkende som et skabsovervågningssystem og til administration af forskellige skabsparametre. Anvendelsesstedet er skabe og skabsrækker samt IT-racket til montering af server- og netværkskomponenter i sikkerheds- og teknikrum. Enhver anden anvendelse må kun ske efter aftale med Rittal. Produkterne må kun kombineres og ibrugtages sammen med systemtilbehør, der er godkendt af Rittal.

### Sikkerhedsanvisninger

Produktets kabinet må ikke åbnes! Produktet må kun anvendes inden for de grænseværdier, der er angivet i de tekniske data. Produktet må ikke komme i kontakt med vand, skadelige eller letantændelige gasser eller dampe!

## PL Używać zgodnie z przeznaczeniem

Ten produkt jest używany wyłącznie jako system monitorowania szaf sterowniczych i do zarządzania różnymi parametrami szaf sterowniczych. Przewidywanymi miejscami zastosowań są szafy i szeregi szaf, a także stelaże ramowe do montażu techniki serwerowej i sieciowej w

pomieszczeniach bezpieczeństwa i technicznych. W przypadku innych zastosowań należy skontaktować się z Rittal. Produkty można łączyć i użytkować wyłącznie z przewidzianymi akcesoriami systemowymi Rittal.

## Wskazówki dotyczące bezpieczeństwa

Nie wolno otwierać obudowy tego produktu. Produkt może być użytkowany tylko w granicach określonych w danych technicznych. Produkt nie może mieć kontaktu z wodą, agresywnymi lub łatwopalnymi gazami i oparami.

## 🇨🇿 Použití v souladu s určením

Tento produkt slouží výhradně jako monitorovací systém rozváděčů a pro správu různých parametrů rozváděčů. Instalace a umístění jen výhradně v aplikacích k tomu určených. Jiné použití konzultujte se společností Rittal. Produkty se smí kombinovat a provozovat pouze se systémovým příslušenstvím společnosti Rittal.

## Bezpečnostní pokyny

Zařízení se nesmí otevírat! Provozovat se smí pouze v rozsahu určenému technickými parametry! Produkt se nesmí dostat do kontaktu s vodou, agresivními nebo vznítilnými plyny a výparý!

## 🇧🇬 За правилна употреба

Този продукт се използва изключително за наблюдение на системата и администриране на различни параметри в раковете. Предвидените места на употреба са шкафове и системи от шкафове, както и носещи рамки за поставяне на съвършно и мрежово оборудване в помещения за защита и съхранение на техника. За друго приложение трябва да се консултирате с Rittal. Продуктите може да се комбинират и използват само с предвидените от Rittal принадлежности.

## Инструкции за безопасност

Корпусът на този продукт не трябва да се отваря! Продуктът може да се използва само в рамките на определените в техническите данни граници! Продуктът не трябва да влиза в контакт с вода, агресивни или запалими газове и пари!

## 🇷🇺 Использование согласно назначению

Этот продукт используется исключительно в качестве системы мониторинга корпуса и для управления различными параметрами корпуса. Соответствующими областями применения являются шкафы и ряды шкафов, а также рамные каркасы для размещения серверов и сетевого оборудования в помещениях безопасности и технических помещениях. При иных условиях применения необходимо проконсультироваться с Rittal. Продукты могут комбинироваться и эксплуатироваться исключительно с совместимыми комплектующими Rittal.

## Меры безопасности

Корпус продукта открывать нельзя! Продукт можно эксплуатировать только при соблюдении граничных условий, заданных в технических характеристиках! Не допускается контакт продукта с водой, агрессивными или легковоспламеняющимися газами или парами!

## 🇬🇷 Προβλεπόμενη χρήση

Αυτό το προϊόν χρησιμοποιείται αποκλειστικά ως σύστημα παρακολούθησης και για τη διαχείριση διαφόρων παραμέτρων του ερμαρίου. Προβλεπόμενοι χώροι χρήσης είναι ερμάρια και συνδυασμοί ερμαρίων, καθώς και πλαίσια τοποθέτησης συστημάτων διακομιστών και δικτύων σε χώρους εξοπλισμού ασφαλείας και τεχνικού εξοπλισμού. Για χρήση πέραν της προβλεπόμενης απαιτείται συνεννόηση με την Rittal. Τα προϊόντα επιτρέπεται να συνδυαστούν και να χρησιμοποιηθούν αποκλειστικά με τον πρόσθετο εξοπλισμό που προβλέπεται από την Rittal.

## Υποδείξεις ασφαλείας

Δεν επιτρέπεται το άνοιγμα του περιβλήματος του συγκεκριμένου προϊόντος! Το προϊόν επιτρέπεται να τεθεί σε λειτουργία μόνον εντός των ορίων που ορίζονται στα τεχνικά χαρακτηριστικά! Το προϊόν δεν επιτρέπεται να έρθει σε επαφή με νερό και δραστικά ή εύφλεκτα αέρια και αναθυμιάσεις!

## 🇷🇴 Domeniul de utilizare

Acest produs este utilizat exclusiv ca sistem de monitorizare a dulapurii de control și pentru administrarea diversilor parametri ai dulapului de control. Locurile de utilizare prevăzute sunt dulapuri și sisteme de dulapuri precum și rackuri destinate instalării serverelor și rețelisticii în camere tehnologice sau de securitate. Pentru o utilizare diferită, contactați mai întâi Rittal. Produsele pot fi combinate și exploatate exclusiv cu accesoriile prevăzute de Rittal.

## Instrucțiuni de siguranță

Este interzisă deschiderea carcasei acestui produs! Produsul poate fi utilizat doar între limitele specificate în datele tehnice! Produsul nu poate intra în contact cu apă, gaze și vapori agresivi sau inflamabili!

## 🇭🇷 Predviđena uporaba

Ovaj se proizvod koristi isključivo kao sustav za nadzor ormara i za upravljanje različitim parametrima ormara. Predviđena mjesta primjene su ormari i skupine ormara kao i okvirna postolja za prihvatanje serverske i mrežne tehnike u sigurnosnim i tehničkim prostorijama. U slučaju odstupanja od navedene primjene potreban je prethodni dogovor s tvrtkom Rittal. Proizvodi se smiju kombinirati i puštati u rad isključivo uz pribor sustava koji predviđa tvrtka Rittal.

## Sigurnosne upute

Kućiče ovog proizvoda ne smije se otvarati! Proizvod se smije puštati u rad isključivo u granicama koje su definirane u tehničkim podacima! Proizvod ne smije doći u dodir s vodom, agresivnim ili zapaljivim plinovima i parama!

## 🇭🇺 Rendeltetésszerű használat

Ez a termék kizárólag a szekrény-felügyeleti rendszer részeként, valamint különböző szekrényparaméterek adminisztrációjára használható. Rendeltetésszerű alkalmazási helyek biztonsági és műszaki termekben a szerver- és hálózati technika rögzítésére szolgáló szekrények és sorolt szekrények, valamint vázkeretek. Ettől eltérő alkalmazás esetén a Rittal-lal kell konzultálni. A termékek kizárólag a Rittal által előírt rendszertartozékkal kombinálhatók és üzemeltethetők.

## Biztonsági utasítások

A termék házát felnyitni tilos! A termék csak a műszaki adatokban megadott határértékeken belül üzemeltethető! A termék nem léphet érintkezésbe vízzel, agresszív vagy gyúlékony gázokkal és gőzökkel!

## 🇱🇹 Naudojimas pagal paskirtį

Šis produktas naudojamas išskirtinai kaip spintos stebėjimo sistema ir įvairių spintos parametrų administravimui. Šie įrenginiai montuoti skyduose / spintose ir į eilę sujungtuose skyduose / spintose, ar remų konstrukcijose, skirtose talpinti duomenų tinklo įrengimus ar serverius, esančius atskirtose saugumo zonose ir techninėse patalpose. Norėdami produktą naudoti kitaip, nei nurodyta, pasitarkite su „Rittal“ atstovais. Šiuo produktas galima jungti ir eksploatuoti tik su „Rittal“ nurodytais sisteminiiais priedais.

## Saugos nurodymai

Negalima atidaryti šio produkto gaubto! Eksploatuojant produktą griežtai laikytis techninių duomenų skyriuje nurodytų normų! Ant produkto negali patekti vanduo, negarantuojama neleistinas kontaktas su agresyviomis ar degiomis dujomis, reikia jį saugoti nuo garų!

## 🇪🇪 Sihtotstarbeline kasutus

Seda toodet kasutatatakse ainult jaotuskapi seiresüsteemina ja erinevate juhtkapi parameetrite haldamiseks. Seade on ettenähtud kasutamiseks selleks ettenähtud tehnilistes ruumidesse paigaldatud kappides, kapiridades ja avatud raamides, mis on ettenähtud serverite ja võrguseadmete paigaldamiseks. Teistes ruumidesse paigaldamine tuleb kooskõlastada Rittal-i ga. Tooteid tohib komplekteerida, kombineerida ja kasutada ainult Ritalli lisatarvikutega.

## Ohutusjuhised

Toote korpuse avamine on keelatud! Toode tohib kasutada vaid tehnilistes andmetes täpsustatud piirides! Toode ei tohi kokku puutuda vee, agressiivsete või tuleohtlike gaaside ja aurudega!

## 🇱🇻 Paredzētais lietošanas veids

Šo produktu izmanto gan kā skapju monitoringa sistēmu, gan kā da-

# Safety instructions

---

žādu parametru uzraudzībai. To ir paredzēts lietot skapjos un skapju sistēmās, kā arī serveru un tīklu ierīču statnēs drošības un tehniskajās telpās. Ja lietošanas veids atšķiras, jāsaazinās ar Rittal. Šos produktus drīkst kombinēt un lietot tikai ar Rittal norādītajiem sistēmas piederumiem.

## **Drošības norādījumi**

Šī produkta korpusu nedrīkst atvērt! Lietojot produktu, nedrīkst pārņiegt tehniskajos datos norādītās robežvērtības! Produkts nedrīkst saskarties ar ūdeni, agresīvām vai viegli uzliesmojošām gāzēm un tvaikiem!

### **SI Predvidena uporaba**

Ta izdelek se uporablja izključno kot sistem za spremljanje nadzorne omare in za upravljanje različnih parametrov nadzorne omare. Predvidena mesta uporaba so omarice in nizi omaric ter ogrodja za opremo strežnikov in omrežij v varnostnih in tehničnih prostorih. Glede uporabe, ki ni v skladu s predvideno, se posvetujte s podjetjem Rittal. Izdelek lahko združujete in uporabljate izključno z dodatno opremo, ki jo za to predvideva podjetje Rittal.

### **Varnostni napotki**

Ohišja tega izdelka ni dovoljeno odpirati. Izdelek lahko uporabljate samo v okviru omejitvev, ki so določene v tehničnih podatkih. Izdelek ne sme priti v stik z vodo, agresivnimi in vnetljivimi plini ter parami.

### **SK Používanie v súlade s účelom**

Tento produkt sa používa výhradne ako monitorovací systém rozvádzača a na správu rôznych parametrov rozvádzačovej skrine. Zamýšľaná oblasť použitia zahŕňa skrine a zostavy skriň, ako aj rámové podstavce pod serverovú a sieťovú techniku v bezpečnostných a technických miestnostiach. Iné použitie je nutné konzultovať so spoločnosťou Rittal. Produkty je povolené kombinovať a prevádzkovať výlučne so systémovým príslušenstvom, ktoré schválila spoločnosť Rittal.

### **Bezpečnostné pokyny**

Nie je povolené otvárať kryt tohto produktu! Produkt je povolené prevádzkovať len v rámci hraničných hodnôt uvedených v technickej špecifikácii! Produkt nesmie prísť do kontaktu s vodou, agresívnymi alebo horľavými plynmi a výparmi!

### **PT Utilização**

Este produto é utilizado exclusivamente como um sistema de monitorização de armário e para a administração de vários parâmetros sobre o armário. Locais previstos para aplicação são armários e módulos de armários, bem como racks destinados ao acondicionamento de equipamentos de servidores e redes montados em salas de segurança e técnica. Outras aplicações apenas são permitidas após consultar a Rittal. Os produtos só devem ser combinados e utilizados com os acessórios do sistema Rittal.

### **Instruções de segurança**

Não é permitido abrir a carcaça deste produto! O produto só deve ser utilizado nos limites especificados nos dados técnicos! O produto não deve entrar em contato com a água, gases e vapores tóxicos, agressivos ou inflamáveis!

---

## Foreword

Dear Customer!

Thank you for choosing a CMC III Processing Unit 19" Edition (hereafter referred to as "CMC III PU 19" Edition") from Rittal!

We wish you every success.

Yours,  
Rittal GmbH & Co. KG

Rittal GmbH & Co. KG  
Auf dem Stuetzelberg

35745 Herborn  
Germany

Tel.: +49(0)2772 505-0  
Fax: +49(0)2772 505-2319

E-mail: [info@rittal.com](mailto:info@rittal.com)  
[www.rittal.com](http://www.rittal.com)  
[www.rittal.de](http://www.rittal.de)

We are always happy to answer any technical questions regarding our entire range of products.

## Contents

1	Documentation notes .....	8	7.3.2	Establishing the connection via Standard-IP .....	21
1.1	CE labelling .....	8	7.3.3	Changing the network settings .....	21
1.2	Storing the documents .....	8	7.3.4	Settings .....	22
1.3	Symbols used in these operating instructions	8	7.4	Telnet/SSH connection .....	22
1.4	Associated documents .....	8	7.4.1	Establishing the connection .....	22
2	Safety instructions .....	9	7.4.2	Login to the CMC III PU 19" Edition .....	22
2.1	General safety instructions .....	9	7.4.3	Menu structure .....	22
2.2	Operating and technical staff .....	9	7.4.4	Navigating through the menu structure .....	23
2.3	IT safety instructions .....	9	7.4.5	Entering values .....	23
2.3.1	Measures for products and systems .....	9	7.4.6	Special settings and remarks .....	24
3	Product description .....	11	7.4.7	Logging off from the CMC III PU 19" Edition .....	24
3.1	Functional description .....	11	8	Operating the CMC III PU	
3.2	Proper use, foreseeable misuse .....	11		19" Edition .....	25
3.3	Supply includes .....	11	8.1	General information .....	25
4	Transport and handling .....	12	8.2	General operation .....	25
4.1	Transport .....	12	8.2.1	Layout of the screen pages .....	25
4.2	Unpacking .....	12	8.2.2	Left-hand navigation area .....	25
5	Installation .....	13	8.2.3	Tabs in the configuration area .....	25
5.1	Safety instructions .....	13	8.2.4	Message display .....	26
5.2	Siting location requirements .....	13	8.2.5	Other displays .....	26
5.3	Assembly procedure .....	13	8.2.6	Changing parameter values .....	27
5.4	Electrical connection of the CMC III PU ^		8.2.7	Undock function .....	28
	19" Edition .....	13	8.2.8	Logging off and changing the password .....	29
5.4.1	Requirements concerning the electrical		8.2.9	Reorganising the connected components .....	29
	connection .....	13	8.3	Monitoring index tab .....	30
5.4.2	Connecting to the mains supply .....	13	8.3.1	Device .....	30
5.4.3	Power over Ethernet (PoE) .....	14	8.3.2	Input .....	30
5.5	Network connection .....	14	8.3.3	Alarm Relay (Output) .....	30
5.6	Connection of sensors .....	14	8.3.4	System .....	30
5.7	Connection of an alarm relay .....	15	8.3.5	System Health .....	31
5.8	Digital input .....	15	8.3.6	Memory .....	31
6	Commissioning the CMC III PU		8.3.7	Webcam .....	32
	19" Edition .....	16	8.3.8	Login .....	33
6.1	Switching on the CMC III PU 19" Edition ....	16	8.4	Configuration index tab .....	33
6.2	Control and display elements .....	16	8.5	Network .....	34
6.3	LED displays .....	16	8.5.1	TCP/IP configuration .....	34
6.3.1	Multi-LED displays .....	16	8.5.2	SNMP Configuration .....	34
6.3.2	LED displays on the CAN bus connection .....	16	8.5.3	HTTP Configuration .....	35
6.3.3	LED displays on the Ethernet interfaces .....	16	8.5.4	File transfer configuration .....	35
6.4	Acknowledging messages .....	17	8.5.5	Console .....	36
7	Configuring the CMC III PU		8.5.6	SMTP Configuration .....	36
	19" Edition .....	18	8.5.7	SMS Configuration .....	36
7.1	General information .....	18	8.5.8	Modbus/TCP Configuration .....	37
7.2	Operating using the control components on		8.5.9	Server Shutdown Configuration .....	37
	the front .....	18	8.5.10	OPC-UA Configuration .....	38
7.2.1	Menu structure .....	18	8.6	System .....	38
7.2.2	Navigating through the menu structure .....	18	8.6.1	Syslog .....	38
7.2.3	Entering the PIN .....	18	8.6.2	Units and Languages .....	38
7.2.4	Entering values .....	19	8.6.3	Details .....	38
7.2.5	Special settings and remarks .....	20	8.6.4	Date/Time .....	38
7.3	HTTP connection .....	20	8.6.5	General .....	39
7.3.1	Establishing the connection via DHCP .....	20	8.6.6	Display .....	39
			8.6.7	Firmware Update .....	39
			8.6.8	WebCam .....	39
			8.6.9	Mobile .....	40
			8.7	Security .....	40
			8.7.1	Groups .....	40
			8.7.2	Users .....	41

8.7.3	LDAP configuration .....	41	12	Technical specifications .....	63
8.7.4	Radius Configuration .....	42	12.1	General technical specifications .....	63
8.8	Device Rights.....	42	13	Accessories .....	65
8.8.1	Inheriting Device Rights .....	43	14	Glossary .....	66
8.8.2	Data types .....	44	15	Customer service addresses .....	67
8.9	Alarm configuration.....	44			
8.9.1	Notifications .....	44			
8.9.2	E-mail receivers .....	45			
8.9.3	Trap Receivers .....	45			
8.9.4	SMS Receivers .....	45			
8.9.5	Alarm simulation .....	45			
8.10	Logging .....	45			
8.10.1	Defining a filter .....	46			
8.10.2	Refreshing the view .....	46			
8.10.3	Printing the display .....	46			
8.10.4	Clearing the display .....	46			
8.11	Tasks.....	47			
8.11.1	Tasks tab .....	47			
8.11.2	Defining the trigger expression .....	47			
8.11.3	Selecting an action .....	48			
8.11.4	Example of creating a task .....	49			
8.11.5	Deactivating or deleting a task .....	49			
8.12	Virtual Devices .....	49			
8.12.1	Types of virtual devices .....	49			
8.12.2	Creating a virtual device .....	50			
8.12.3	Configuring a virtual device .....	50			
8.12.4	Deleting a virtual device .....	51			
8.13	Charts.....	51			
8.13.1	Configuring a chart .....	51			
8.13.2	Diagram view .....	52			
8.13.3	Evaluating the CSV files .....	53			
8.14	Dashboards .....	54			
8.14.1	Basic settings .....	54			
8.14.2	Configuring a dashboard .....	54			
8.14.3	Saving a dashboard .....	56			
8.14.4	Calling a dashboard .....	56			
8.14.5	Calling the website via a mobile terminal .....	57			
8.14.6	Exiting a dashboard .....	57			
9	Updates and data backup .....	58			
9.1	Establishing an FTP connection .....	58			
9.2	Performing an update .....	58			
9.2.1	Notes for performing an update .....	58			
9.2.2	Downloading the software update .....	58			
9.2.3	Update via USB .....	58			
9.2.4	Update via FTP or SFTP .....	59			
9.2.5	Finalizing the update .....	59			
9.3	Performing a data backup.....	59			
9.4	Saving additional information locally .....	60			
10	Inspection and maintenance .....	61			
10.1	Safety instructions.....	61			
10.2	Required work .....	61			
10.2.1	Inspection .....	61			
10.2.2	Servicing .....	61			
11	Storage and disposal .....	62			
11.1	Storage.....	62			
11.2	Disposal.....	62			

## 1 Documentation notes

### 1.1 CE labelling

Rittal GmbH & Co. KG hereby confirms the conformity of its CMC III PU 19" Edition with the provisions of the following Directives:

- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- RoHS2 Directive 2011/65/EU

An appropriate declaration of conformity has been issued and can be supplied on request.



### 1.2 Storing the documents

The assembly, installation and operating instructions, as well as all other applicable documents, are an integral part of the product. They must be issued to everyone who works with the unit and must always be available and on hand for the operating and maintenance personnel.

### 1.3 Symbols used in these operating instructions

The following symbols are used in this documentation:



**Danger!**

**A dangerous situation in which failure to comply with the instructions will result in death or severe injury.**



**Warning!**

**A dangerous situation which may lead directly to death or serious injury if the instructions are not followed.**



**Caution!**

**A dangerous situation which may lead to (minor) injuries if the instructions are not followed.**



**Note:**

Indicates situations that can lead to material damage.

- This symbol indicates an "Action Point" and shows that you should perform an operation/procedure.

### 1.4 Associated documents

- Installation Guide and Short User's Guide
- The assembly, installation and operating instructions for the sensors of the CMC III system connected to the CMC III PU 19" Edition.



## 2 Safety instructions

### 2.1 General safety instructions

Please observe the following general safety instructions for the installation and operation of the system:

- Assembly and installation of the CMC III PU 19" Edition may only be performed by experienced, trained specialists.
- Please observe the valid regulations for electrical installation in the country in which the CMC III PU 19" Edition is installed and operated, and the national regulations for accident prevention. Please also observe any internal company regulations, such as work, operating and safety regulations.
- Use only original Rittal products or products recommended by Rittal in conjunction with the CMC III PU 19" Edition.
- Please do not make any changes to the CMC III PU 19" Edition that are not described in these assembly, installation and operating instructions or other associated manuals.
- The operational safety of the CMC III PU 19" Edition is only warranted if used properly for the intended purpose. The technical specifications and limit values stated must not be exceeded under any circumstances. In particular, this applies to the specified ambient temperature range and IP protection category.
- The CMC III PU 19" Edition must not be opened. It does not contain any parts that need servicing.
- Operating the system in direct contact with water, aggressive materials or inflammable gases and vapours is prohibited.
- Other than these general safety instructions, it is also essential to observe the specific safety instructions when carrying out the tasks described in the following chapters.
- The CMC III PU 19" Edition is connected permanently to the grid and does **not** have a master switch for the all-pole power decoupling.



Note:

Further safety instructions in all EU languages can be found on page 2 to 4.

### 2.2 Operating and technical staff

- The assembly, installation, commissioning, maintenance and repair of this unit must only be performed by qualified mechanics and electricians.
- Only properly instructed personnel may work on a unit while in operation.

### 2.3 IT safety instructions

To ensure the availability, confidentiality and integrity of data, products, networks and systems must be protected against unauthorised access. Such protection can be achieved only with organisational and technical measures.

To satisfy the increased safety requirements, Rittal recommends the observance of the following measures. Furthermore, more detailed information can be found on the websites of Bundesamt für Sicherheit in der Informationstechnik.

#### 2.3.1 Measures for products and systems

##### Embed products and systems not in public networks.

- Do not operate the system directly in the Internet, but only in internal networks protected externally with firewalls.
- If your products and systems must be embedded via a public network, deploy a VPN (Virtual Private Network).

##### Configure the firewall

- To protect your networks, and the embedded products and systems against external effects, configure a firewall.
- Also deploy a firewall for segmentation of a network or to isolate a controller.

##### Disable unused channels

- Disable superfluous communications channels (e.g. SNMP, FTP) for your deployed products.
- Use only secure encrypted protocols and disable insecure protocols (e.g. Telnet, FTP).

##### Consider defence-in-depth mechanisms during the planning phase

- Consider defence-in-depth mechanisms for your system planning.
- Defence-in-depth mechanisms cover several levels of mutually coordinated security measures.

##### Restrict access authorisations

- Restrict access authorisations to networks and systems to only persons that need an authorisation.
- Disable unused user accounts.

##### Protect accesses

- Do not use the default passwords; instead, use secure, long passwords containing numbers, a mix of upper case and lower case letters, symbols and no repetitions. For SNMP, overwrite the default community strings "public".
- Create random passwords with a password manager.
- If possible, deploy central user management systems for user management and login information.

##### Remote accesses

- When remote accesses are deployed, select a secure access path, such as VPN (Virtual Private Network) or HTTPS.

## 2 Safety instructions

---

EN

### **Security-relevant event logging**

- Enable the security-relevant event logging in accordance with the security policies and the statutory regulations for data protection.

### **Deploy the current firmware version**

- Ensure that the current Rittal firmware is deployed on all devices.
- The firmware can be downloaded from the associated product pages in the Internet.
- Observe the associated Release Notes for new firmware versions.

### **Deploy current security software**

- To identify and eliminate security threats, such as viruses, trojans and other malicious software, security software should be installed on all PCs and kept up-to-date.
- Deploy whitelist tools to monitor the device context.
- Deploy an intrusion-detection system to validate the communication of your system.

### **Perform regular threat analyses**

- Rittal recommends that you perform regular threat analyses.
- The threat analyses allow you to determine whether your adopted measures are effective.

### **Protect external storage media against access**

- External storage media (such as USB sticks) must be protected against physical access. Ensure that no unauthorised persons have access to the USB stick.
- Sensitive data can be read in the event of an unauthorised access to USB sticks.

## 3 Product description

### 3.1 Functional description

The CMC III PU 19" Edition is the core product of the Rittal enclosure monitoring and control system for the electronic monitoring of enclosures and server racks. It provides two Ethernet LAN interfaces in conjunction with a website for user communication.

The CAN bus interface allows a wide range of sensors, actuators and systems for access monitoring to be connected. All sensors initialise themselves automatically after connection to the CAN bus system.

A C14 connection is available for the power supply. The system can also be supplied with Power over Ethernet. In this case, the bus cables then supply power to the connected CAN bus sensors.

### 3.2 Proper use, foreseeable misuse

The device is used only as an enclosure monitoring system and for the administration of the various enclosure parameters. Any other use is not permitted.

Rittal must be contacted before using a sensor connected outside of an enclosure.

The units are state of the art and built according to recognised safety regulations. Nevertheless, improper use can pose a threat to the life and limb of the user or third parties, or result in possible damage to the system and other property.

Consequently, the units must only be used properly and in a technically sound condition! Any malfunctions which impair safety should be rectified immediately. Follow the operating instructions!

Proper use also includes the observance of the documentation provided, and compliance with the inspection and maintenance conditions.

Rittal GmbH & Co. KG is not liable for any damage which may result from failure to comply with the documentation provided. The same applies to failure to comply with the valid documentation for any accessories used.

Inappropriate use may be dangerous. Examples of inappropriate include:

- Use of impermissible tools.
- Improper operation.
- Improper rectification of malfunctions.
- Use of accessories not approved by Rittal GmbH & Co. KG.

### 3.3 Supply includes

The scope of the CMC III PU 19" Edition supply is shown in the following illustration.

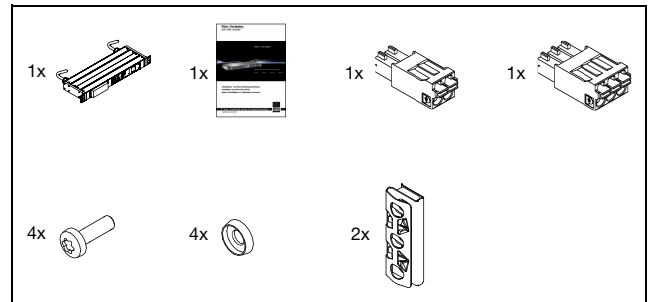


Fig. 1: Scope of supply

# 4 Transport and handling

---

EN

## 4 Transport and handling

### 4.1 Transport

The unit is delivered in a cardboard box.

### 4.2 Unpacking

- Remove the packaging materials from the unit.



Note:

After unpacking, the packaging materials must be disposed of in an environmentally friendly way. They consist of the following materials:

Polyethylene film (PE film), cardboard.

---

- Check the unit for any damage that may have occurred during transport.



Note:

Damage and other faults, e.g. incomplete delivery, should be reported immediately, in writing, to the shipping company and to Rittal GmbH & Co. KG.

---

- Take the unit out of the packaging.
- Remove the protective film from the front cover of the device.

## 5 Installation

### 5.1 Safety instructions

- Please observe the valid regulations for electrical installation in the country in which the CMC III PU 19" Edition is installed and operated, and the national regulations for accident prevention. Please also observe any internal company regulations, such as work, operating and safety regulations.
- The technical specifications and limit values stated must not be exceeded under any circumstances. In particular, this applies to the specified ambient temperature range and IP protection category.
- If a higher IP protection category is required for a special application, the CMC III PU 19" Edition must be installed in an appropriate housing or in an appropriate enclosure with the required IP protection category.

### 5.2 Siting location requirements

To ensure correct functioning of the unit, the conditions for the installation site of the unit specified in section 12 "Technical specifications" must be observed.

#### Electromagnetic interference

- Interfering electrical installations (high frequency) are to be avoided.

### 5.3 Assembly procedure



Note:

Ensure good access to the front of the unit so that the display is easy to read.

The CMC III PU 19" Edition is assembled using the fastening brackets fitted on the side of the device.

- First mount the required captive nuts on the VX IT / TS IT rack.

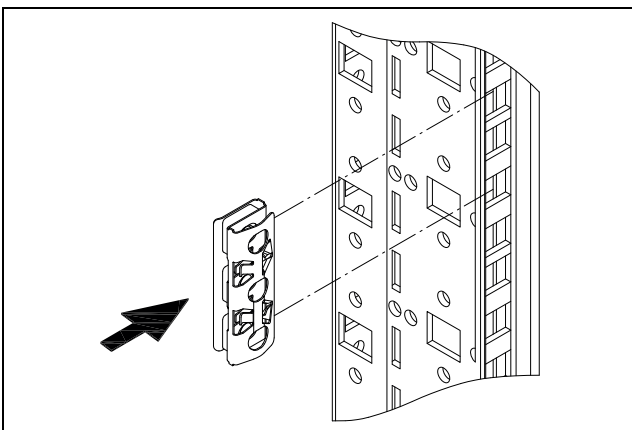


Fig. 2: Mounting captive nuts

- Mount the CMC III PU 19" Edition on the fastening brackets with the supplied screws in the previously installed captive nuts.

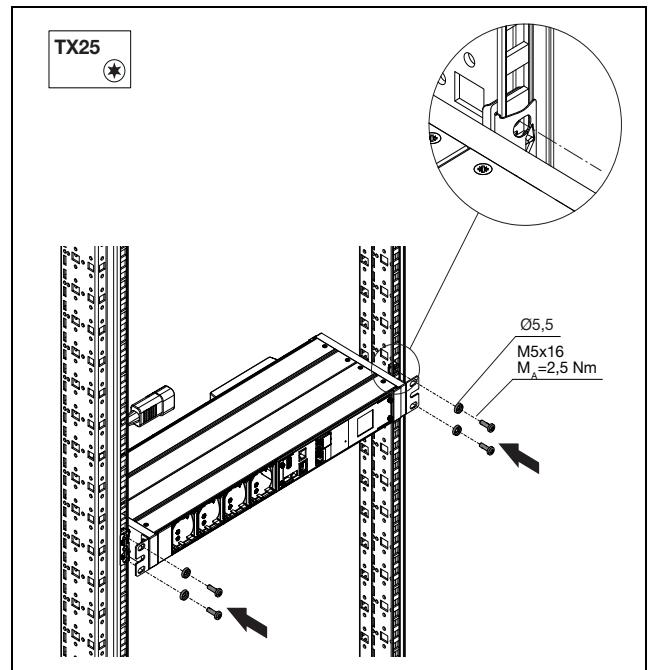


Fig. 3: Mounting the CMC III PU 19" Edition in the 19" level

### 5.4 Electrical connection of the CMC III PU 19" Edition

#### 5.4.1 Requirements concerning the electrical connection

- The electrical connection can only be made on a TN-S or TT network. Please note the detailed information in section 12 "Technical specifications".

#### 5.4.2 Connecting to the mains supply

The CMC III PU 19" Edition is connected to the mains supply using the permanently attached connection cable.

- Route the CMC III PU 19" Edition connection cable out of the IT rack and connect it to the mains supply.

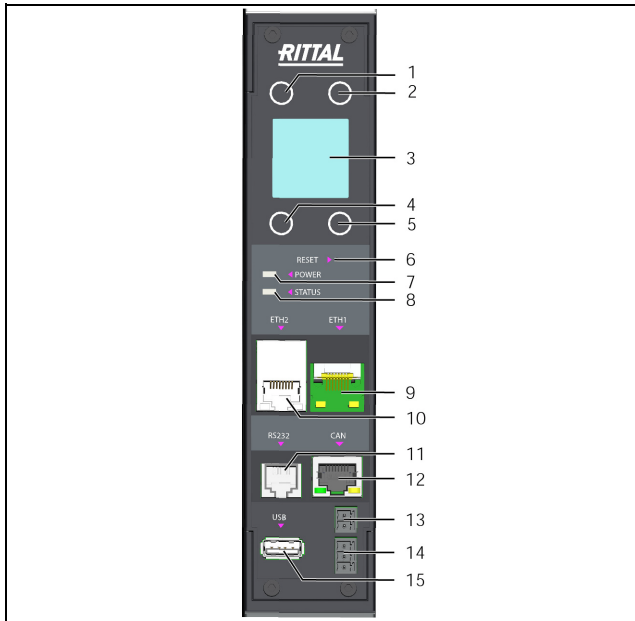


Fig. 4: Control and display elements and connections of the CMC III PU 19" Edition

### Key

- 1 "Esc" key
- 2 "Up", and "+" key when entering the pin
- 3 Display
- 4 "Return" key
- 5 "Down", "Next" key and "-" key when entering the pin
- 6 Reset button to restart the CMC III PU 19" Edition
- 7 Green LED to indicate the power supply
- 8 Multi-LED for status display
- 9 Ethernet interface 1 RJ 45
- 10 Ethernet interface 2 RJ 45
- 11 RS232 serial interface
- 12 CAN bus connection (daisy chain) for CMC III sensors, 24 V  $\overline{\text{---}}$ , 1 A
- 13 Digital input
- 14 Alarm relay output
- 15 USB connection for firmware updates and for data logging

After connecting the CMC III PU 19" Edition to the power supply, the green power LED (fig. 4, item 7) will be illuminated, and the CMC III PU 19" Edition will start to boot automatically.

If connected to a network, the Link and Status LEDs on the RJ 45 jack will be illuminated (fig. 4, item 9 and item 10).

After a few seconds, the multi-LED for status display will start to flash blue, indicating that booting is in progress (fig. 4, item 8).



### Note:

Bootling is complete after around 2 minutes. Only then will the display appear, and the CMC III PU 19" Edition can be operated and configured using the keys (see section 6.2 "Control and display elements"). Network access to the CMC III PU 19" Edition is likewise only possible once booting is complete.

### 5.4.3 Power over Ethernet (PoE)



#### Note:

- For PoE power supply, the CMC III PU Edition may be operated only in closed rooms and in the enclosure.
- The PoE power supply must be laid entirely in closed rooms and is therefore not allowed, even partially, to be laid outdoors.

Instead of using an external power pack, you can also supply the CMC III PU Edition with its operational power via Power over Ethernet.

- Connect a PoE switch to the Ethernet interface "ETH1".



#### Note:

Ensure that the permitted total power consumption of max. 250 mA for the PoE port is not exceeded (refer to the documentation for the PoE switch).

### 5.5 Network connection

The network connection establishes the connection to the network.

- Connect one of the Ethernet interfaces „ETH1“ or „ETH2“ (fig. 4, item 9 or item 10) using a network cable with an RJ 45 connector to the existing network structure.

After connection of the network cable, the green LED on the Ethernet interface illuminates continually. The orange LED also illuminates during data exchange (see section 6.3.3 "LED displays on the Ethernet interfaces").

### 5.6 Connection of sensors

A wide range of sensors, actuators and systems for access monitoring (see section 13 "Accessories") can be connected to the CAN bus interface (see fig. 4, item 12).

- For example, connect a sensor from the accessories range with the CAN bus interface of the CMC III PU 19" Edition using a CAN bus connection cable.

The following CAN bus connection cables from the CMC III accessories range can be used:

- DK 7030.090 (length 0.5 m)
- DK 7030.091 (length 1 m)
- DK 7030.092 (length 1.5 m)
- DK 7030.093 (length 2 m)
- DK 7030.480 (length 3 m)
- DK 7030.490 (length 4 m)
- DK 7030.094 (length 5 m)
- DK 7030.095 (length 10 m)

Further components are connected as daisy chain.

- If necessary, connect another component (e.g. another sensor type) to the second, free CAN bus interface of the first component.
- Proceed similarly for further components.

The CMC III PU 19" Edition automatically detects each connected sensor. After connection of the sensor, the status display of the multi-LED at the front of the CMC III PU 19" Edition changes appropriately. The LED display on the CAN bus connection also changes (see section 6.3.2 "LED displays on the CAN bus connection").

**Note:**

If a sensor is added subsequently, it may have a newer firmware than the CMC III PU 19" Edition supports. In this case, the CMC III PU 19" Edition does not detect the sensor; the CMC III PU 19" Edition must be updated first.

**Note:**

Further information concerning the connection of sensors is contained in the associated documentation of the accessory part.

## 5.7 Connection of an alarm relay

An external signal source for the alarm signalling can be connected to the potential-free relay output (fig. 4, item 14).

- Observe the pin assignment of the connection (see device label).
- Configure according to the connection of the alarm relay (see section 8.6.5 "General").

## 5.8 Digital input

A floating switch contact can be connected to the digital input and so, for example, the fault output of an external device evaluated (fig. 4, item 13).

- Configure the digital input depending on whether a normally closed or normally open contact is connected to the associated connection (see section 8.3.2 "Input").

# 6 Commissioning the CMC III PU 19" Edition

## 6 Commissioning the CMC III PU 19" Edition

### 6.1 Switching on the CMC III PU 19" Edition

Once the electrical connection has been established, the CMC III PU 19" Edition will start automatically (see section 5.4 "Electrical connection of the CMC III PU 19" Edition"). Separate activation is not required.

### 6.2 Control and display elements

The control and display elements are shown in fig. 5.

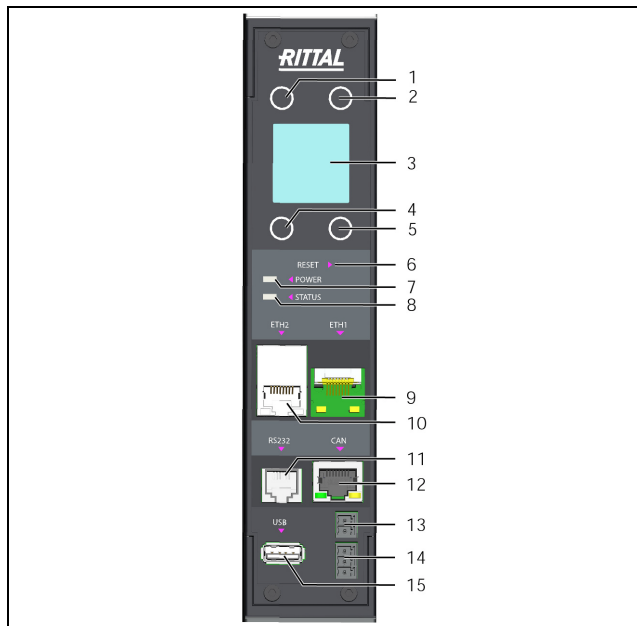


Fig. 5: Control and display elements and connections of the CMC III PU 19" Edition

#### Key

- 1 "Esc" key
- 2 "Up", and "+" key when entering the pin
- 3 Display
- 4 "Return" key
- 5 "Down", "Next" key and "-" key when entering the pin
- 6 Reset button to restart the CMC III PU 19" Edition
- 7 Green LED to indicate the power supply
- 8 Multi-LED for status display
- 9 Ethernet interface 1 RJ 45
- 10 Ethernet interface 2 RJ 45
- 11 RS232 serial interface
- 12 CAN bus connection (daisy chain) for CMC III sensors, 24 V  $\overline{=}$ , 1 A
- 13 Digital input
- 14 Alarm relay output
- 15 USB connection for firmware updates and for data logging

### 6.3 LED displays

A multi-LED for status display is integrated into the front of the CMC III PU 19" Edition (fig. 5, item 8). Further LEDs are also located on the CAN bus connection (fig. 5, item 12) and on the Ethernet interfaces (fig. 5, item 9 and item 10).

#### 6.3.1 Multi-LED displays

Continuous illumination of the multi-LED indicates the status of the CMC III PU 19" Edition and of the connected components.

Colour	Status
Green	The CMC III PU 19" Edition and all devices connected to the CAN bus have the status "OK".
Orange	The CMC III PU 19" Edition or at least one device connected to the CAN bus has the status "Warning".
Red	The CMC III PU 19" Edition or at least one device connected to the CAN bus has the status "Alarm".

Tab. 1: Multi-LED continuous light

The flashing code of the multi-LED indicates a status change in the CMC III PU 19" Edition:

Colour	Status
Cyclically green – orange – red	At least one new device was detected on the CAN bus ("Detected" status).
Alternating red – blue	At least one device has been removed from the CAN bus or can no longer be detected via the CAN bus ("Lost" status).
Blue	The position of at least one device on the CAN bus has been altered (status "Changed").
Red	Update task in progress (so-called heart-beat, alternating long and short).
White	Update of one or more sensors or CMC III PU 19" Edition modules in progress.

Tab. 2: Multi-LED flashing codes

#### 6.3.2 LED displays on the CAN bus connection

A red and a green LED are located on the CAN bus connection. They display the status of the CAN bus.

Colour	Status
Green (continuous light)	Communication via the CAN bus possible.
Red (flashing)	Transmission error.

Tab. 3: LEDs on the CAN bus connection

#### 6.3.3 LED displays on the Ethernet interfaces

There is a green and an orange LED on each Ethernet interface. They display the status of the network connection.



Colour	Status
Green (continuous light)	Communication via the Ethernet interface possible.
Orange (flashing)	Data communication interval via the network.

Tab. 4: LEDs on the Ethernet interface

## 6.4 Acknowledging messages

Generally speaking, messages can be acknowledged in two ways:

1. By right-clicking a message in the message display and left-clicking on the "Acknowledge Alarm" or "Acknowledge Devices" entry in the context menu. If an alarm message has been selected, "Acknowledge Alarm" only confirms the currently selected message. If a message concerning a configuration change has been selected, "Acknowledge Devices" confirms all related messages jointly.
2. By right-clicking on a component entry in the Configuration area and left-clicking on the "Acknowledge Alarms" or "Acknowledge All Devices" entry in the context menu. This will confirm active alarm messages for that particular component or all configuration changes.

Messages that are displayed when connecting additional sensors can also be acknowledged directly on the CMC III PU 19" Edition by confirming the "Acknowledge All Devices" message in the **Sensors** submenu.

# 7 Configuring the CMC III PU 19" Edition

EN

## 7 Configuring the CMC III PU 19" Edition

### 7.1 General information

Basic configuration of the CMC III PU 19" Edition, especially the (one-off) customisation of the network settings, can be performed in several ways:

1. Display and control components directly on the CMC III PU 19" Edition
2. HTTP connection via the Ethernet interface

Settings are usually made via an HTTP connection. For this purpose, the IP address of the CMC III PU 19" Edition must be known. If this address is not known, the device may be accessed directly using the display and the control components directly on the CMC III PU 19" Edition.

■ The following descriptions assume that the CMC III PU 19" Edition is in its delivered state, i.e. no changes have been made to the basic configuration. In particular, the connection type "HTTP" must not be blocked.

### 7.2 Operating using the control components on the front

The following descriptions apply to access via the control components and display directly on the CMC III PU 19" Edition. Access via the CMC III PU 19" Edition website is described in section 8 "Operating the CMC III PU 19" Edition".

#### 7.2.1 Menu structure

Basic CMC III PU 19" Edition settings can be made using the control components and the display based on the following menu structure:

Rittal Menu
Data
Sensor
Alarms
Setup
IP Configuration
Sensors
Display
Controller Infopage

The following main menu appears in the display:



Fig. 6: Rittal main menu

The individual sensor values can be accessed from the **Data** menu. You can view pending warning messages and alarm messages in the **Alarms** menu.

Finally, the basic settings of the CMC III PU 19" Edition can be specified in the **Setup** menu.

You can also use the CMC III PU 19" Edition website to access most of the parameters that can be accessed via the control components directly on the CMC III PU 19" Edition. Corresponding descriptions may be found in section 8 "Operating the CMC III PU 19" Edition". Only the few settings that are not available via the website are described in section 7.2.5 "Special settings and remarks".

#### 7.2.2 Navigating through the menu structure

The individual menu points are selected using the "Down" (fig. 5, item 5) and "Up" arrows (fig. 5, item 2). You can switch between the individual menu levels with the "Esc" (fig. 5, item 1) and "Return" keys (fig. 5, item 4).

Starting at the **Setup** menu, for example, you can select the following seven sub-menus:

- **IP Configuration** sub-menu
- **Sensors** sub-menu
- **Display** sub-menu
- **Controller Infopage** sub-menu

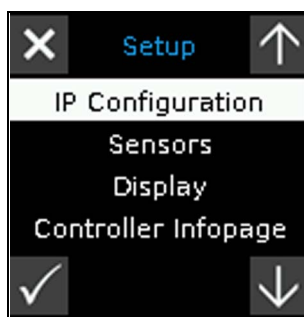


Fig. 7: Menu Setup - page 1

From the **IP Configuration** menu, you can switch back to the **Rittal** main menu by pressing the "Esc" key twice.

#### 7.2.3 Entering the PIN

A PIN must be entered in order to access the sub-menus of the **Setup** menu. The prompt "Please Enter PIN" will appear automatically when one of the sub-menus is selected.

The following menu appears in the display, for example, when selecting the **IP Configuration** submenu:



Fig. 8: PIN input page

- Keep pressing the "Up" arrow (fig. 5, item 2) or the "Down" arrow (fig. 5, item 5) until the required digit is displayed in the first position of the PIN.
- Press the "Return" key (fig. 5, item 4) to move to the second position of the PIN.
- Once again, keep pressing the "Up" arrow or the "Down" arrow until the required digit is displayed in the second position of the PIN.
- Move to the third and fourth positions of the PIN and set them in the same way.



Note:

"1221" is the preset PIN for accessing the configuration menu. This PIN can be modified via the CMC III PU 19" Edition website.

- Make a note of the new PIN number and keep it somewhere safe.

- Finally, press the "Return" key (fig. 5, item 4). The previously selected sub-menu will appear.



Note:

The PIN entry will not be saved. This means that the PIN must be entered every time a sub-menu is activated.

## 7.2.4 Entering values

The stored parameter values are generally displayed below the respective line with the name of the parameter. To change a value, in the same way used for navigating through the menu structure, select the appropriate parameter using the "Down" and "Up" arrows. To accept a changed value, you must always press the "Return" key.

**Example:** Changing the network settings for IPv4

If the display has become dark: Press any key. A menu with the status display appears.

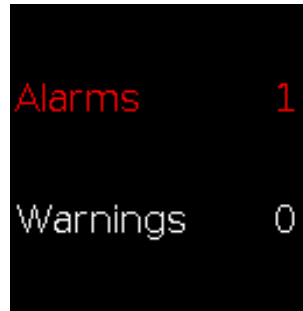


Fig. 9: Start menu

Press the "Esc" key (fig. 5, item 1) to display the **Rittal** main menu.



Fig. 10: Rittal main menu

- Use the "Down" or "Up" arrows to select the "Setup" entry.
- Confirm your selection with "Return". The **Setup** menu will appear.

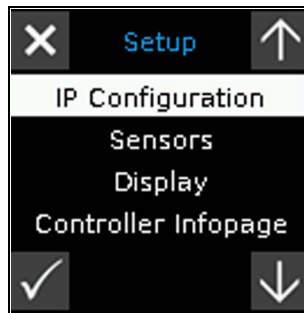


Fig. 11: Setup menu- page 1

- Use the "Down" or "Up" arrows to select the "IP Configuration" entry.
- Confirm your selection with "Return". The menu for entering your security PIN will appear.

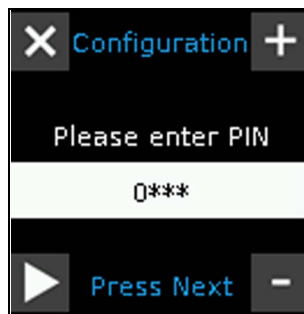


Fig. 12: PIN input page

- Enter the PIN to access the sub-menu (see section 7.2.3 "Entering the PIN").

# 7 Configuring the CMC III PU 19" Edition

The **DHCP** menu will appear. The "✓\*" symbol marks the current DHCP setting.



Fig. 13: DHCP menu

- Press the "Down" arrow or the "Up" arrow to select the DHCP setting "OFF", and press the "Return" key to confirm the selection. The first page of the **IPv4 Setup** menu for setting the IP address appears.



Fig. 14: IPv4 Setup menu - page 1

- In the same way as you entered the PIN, enter an IPv4 address for the "Set IP Address" entry permitted in the network and confirm with the "Return" key.
- On pages 2 and 3 of the **IPv4 Setup** submenu, correct the settings for the subnet mask and gateway, if necessary. Finally, a page will appear showing all the settings collectively.

### 7.2.5 Special settings and remarks

The following settings in the **Display** sub-menu are not available on the website but only via the control components and the display directly on the CMC III PU 19" Edition. The following display appears when selecting the **Display** submenu:

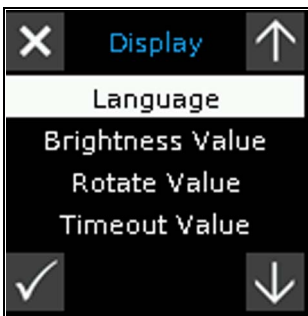


Fig. 15: Display menu

Parameter	Explanation
Language	Change the display language between English, German and French.
Brightness Value	Set the reduced brightness for the display in a range between "0%" and "100%".
Rotate	In the default setting "Auto", the display direction and key assignment will change depending on the direction in which the CMC III PU 19" Edition is installed. The display direction and key assignment may be predefined regardless of the installation direction using the values "0", "90", "180" and "270".
Timeout Values	Duration in seconds after which the brightness of the display is reduced (to the value set at "Brightness Value"). The brightness switches back to 100% when any key is pressed.

Tab. 5: Special settings

Also, if required, the product information (serial number, etc.) on the display of the CMC III PU 19" Edition can be fetched via a QR code. To do this:

- If the display is switched off: Press any key. A menu with the status display appears.
- Press the "Esc" key to display the **Rittal** main menu.
- Keep the "Esc" key pressed for 3 seconds. The QR code is displayed until the display timeout is reached or any key is pressed.

## 7.3 HTTP connection

### 7.3.1 Establishing the connection via DHCP

By default, DHCP is enabled on the CMC III PU 19" Edition. A DHCP server automatically assigns a network configuration to the CMC III PU 19" Edition.

- Navigate as described at 7.2 via the CMC III PU 19" Edition control components on the front via the Setup menu item to the "Controller Infopage" submenu and select it. Among other things, the automatically assigned IP address is now also displayed.

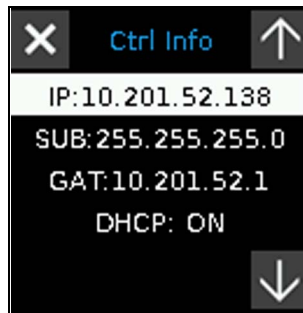


Fig. 16: Controller Infopage menu

- Enter the displayed IP address in the browser. In the example, <http://10.201.52.138> (see fig. 17, item 1). The login dialogue for login on the device is displayed

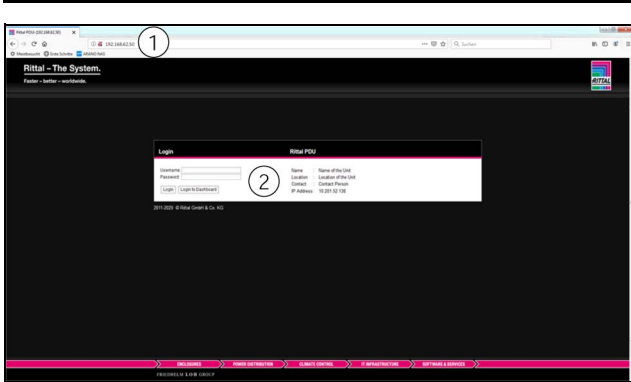



Fig. 17: Login dialogue for login on the device

- Log in with the username **admin** and the password **admin** (fig. 17, item 2).
- Click the Login button to display the website of the device. The overview window for the device will appear (fig. 18).


### 7.3.2 Establishing the connection via Standard-IP

- Using a network cable, connect the device to your computer via the Ethernet interface (fig. 5, item 9).

 **Note:**  
Depending on your computer, you may need to use a crossover cable.

- Change your computer's IP address to any address within the range 192.168.0.xxx, e.g. **192.168.0.191**. The default address **192.168.0.200** of the device must not be used.
- Set the subnet mask to the value **255.255.255.0**.
- If applicable, switch off the proxy server in the browser to enable a direct connection to the device.
- In the browser, enter the address **http://192.168.0.200** (fig. 17, item 1). The logon dialog for logging on to the device will be displayed.
- Log in with the username **admin** and the password **admin** (fig. 17, item 2).
- Click the Login button to display the website of the device.

The overview window for the device will appear (fig. 18).

 **Note:**  
Alternatively, you can also login to a dashboard directly from the login screen by clicking the **Login to Dashboard** button (see section 8.14.4 "Calling a dashboard").

### 7.3.3 Changing the network settings

Generally speaking, you will customise the network settings of the CMC III PU 19" Edition once during commissioning, to link it into your network structure.

- In the left-hand section of the overview window (navigation area), click the **Processing Unit** entry (fig. 18, item 3), and in the right-hand section (configuration area), click the **Configuration** tab (fig. 18, item 4).

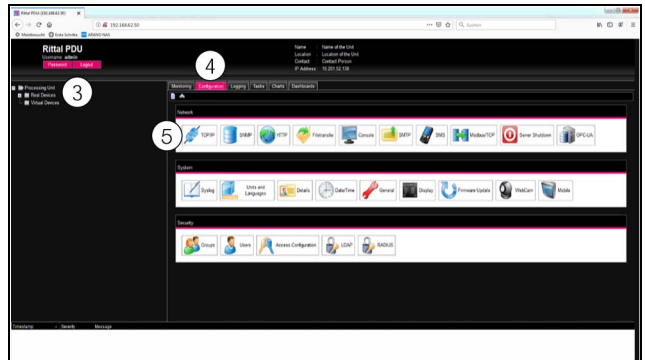


Fig. 18: Customise the TCP/IP settings

- In the **Network** group box, click on the **TCP/IP** button (fig. 18, item 5).

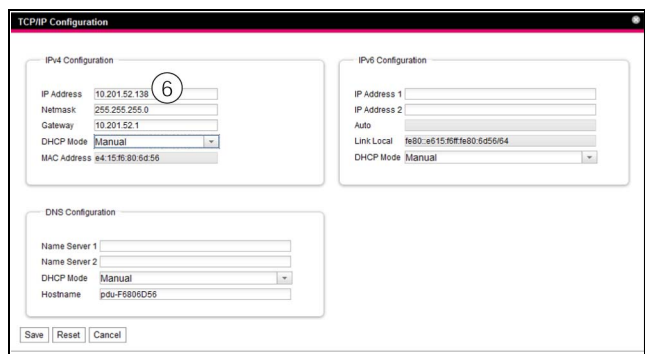




Fig. 19: Customise the TCP/IP settings

 **Note:**  
The following sections describe in detail how to make the setting for the IPv4 protocol. Further information regarding the TCP/IP configuration may be found in section 8.5.1 "TCP/IP configuration".

- In the **TCP/IP Configuration** window, change the device's IP address in the **IPv4 Configuration** group box to an address permitted in the network (fig. 19, item 6).
- If necessary, correct the settings for the subnet mask and the gateway.
- Alternatively, select the "DHCPv4" setting instead of "Manual" for automatic IP allocation. To this end, there must be a DHCP server available in the network to administer and assign the addresses.
- Click on **Save** to save your settings.

 **Note:**  
If the **Save** button cannot be clicked, an incorrect input has been made (see section 8.2.5 "Other displays"). In this case, check your entries and correct as necessary.

# 7 Configuring the CMC III PU 19" Edition

- Change the network settings of your computer to the original values of the IP address and the subnet mask.
- Disconnect the network cable from your computer.
- Connect the CMC III PU 19" Edition to your Ethernet LAN with a network cable (fig. 5, item 5).



**Note:**

If you have activated the automatic IP assignment ("DHCPv4" setting is activated), you can view the IP address of the CMC III PU 19" Edition directly on the display (see section 7.2 "Operating using the control components on the front").

### 7.3.4 Settings

All other possible CMC III PU 19" Edition settings are described in section 8 "Operating the CMC III PU 19" Edition".

### 7.4 Telnet/SSH connection

A Telnet connection can be made using a suitable utility program such as "PuTTY". The following explanations describe establishing an SSH connection. A connection via Telnet is also possible.

#### 7.4.1 Establishing the connection

To establish an SSH connection, proceed as follows:

- Launch the "PuTTY" program.
- Enter the IP address of the CMC III PU 19" Edition, default "192.168.0.200", in the **Host address (or IP address)** field.
- Select the option "SSH" as the **Connection Type**.
- Enter port number "2222" in the Port field.
- If applicable, enter a name for the connection such as "CMC III PU SSH" in the **Saved Sessions** field.
- Click on **Save** to save your settings.

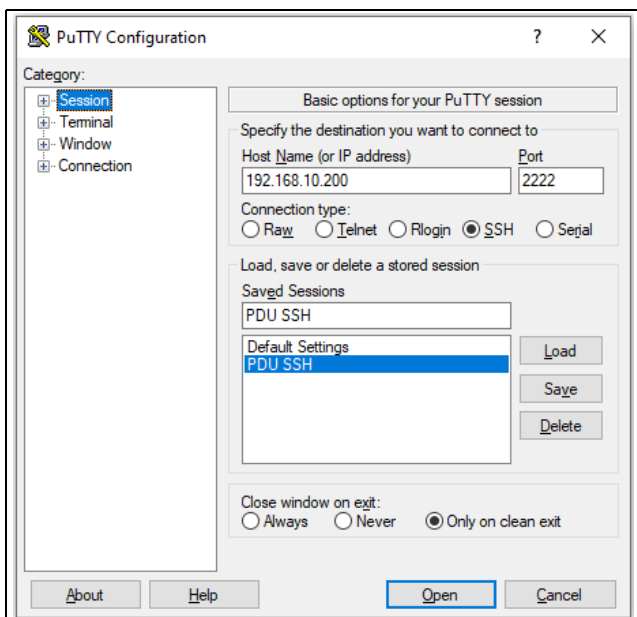


Fig. 20: "CMC III PU SSH" Connection setting

- Click **Open** to establish the connection.

The login screen appears.

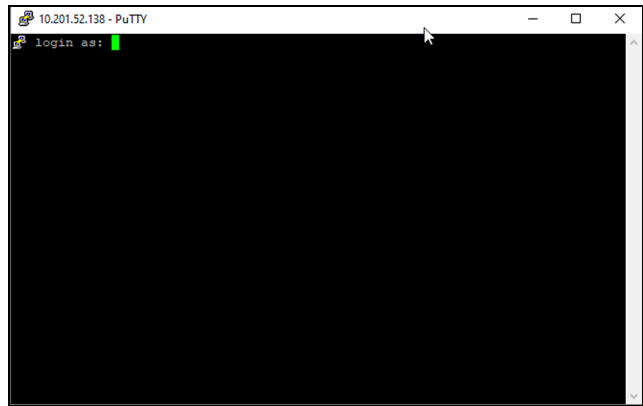


Fig. 21: Login screen

#### 7.4.2 Login to the CMC III PU 19" Edition

Once the connection has been established, the logon screen appears.

- In the line **login as:** enter your user name.
- In the line **Password:** enter the associated password.



**Note:**

The user "admin" with the password "admin" and the user "user" with the password "user" are the factory default settings.

The **Main Menu** will appear.

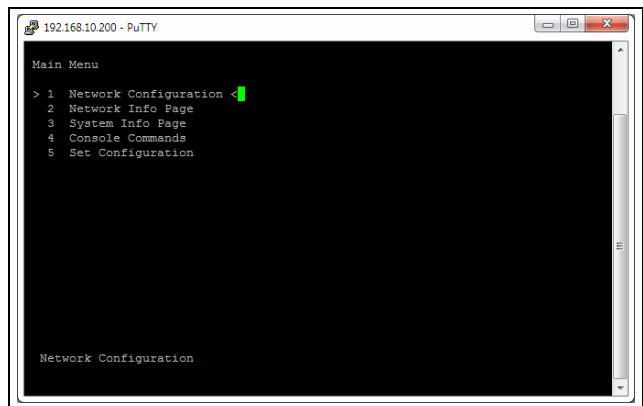


Fig. 22: Main Menu

#### 7.4.3 Menu structure

Basic settings for the CMC III PU 19" Edition can be made via the console menu with the following menu structure:

1	Network Configuration
1	IPv4 Configuration
1	IPv4 Address
2	IPv4 Subnet mask
3	IPv4 Gateway
4	Enable/Disable DHCPv4
2	IPv6 Configuration

# 7 Configuring the CMC III PU 19" Edition

1	IPv6 Address 1
2	IPv6 Address 2
3	IPv6 Configuration
3	DNS Configuration
1	DNS Primary Server
2	DNS Secondary Server
3	DNS Mode
4	Hostname
4	LDAP Configuration
1	LDAP Server
2	Enable/Disable LDAP
5	Radius Configuration
1	Radius Server
2	Enable/Disable Radius
6	Modbus/TCP Configuration
1	Change Server Port
2	Enable/Disable Modbus/TCP
7	Settings Ethernet Port
8	System Name
9	System Contact
A	System Location
B	Actual Date
C	Actual Time
D	Beeper
E	Security
1	Change User Password
2	Enable Web Access
3	Change HTTP Port
4	Change HTTPs Port
5	Enable FTP access
6	FTP Port
7	Enable SSH access
8	SSH Port
9	Enable Telnet access
A	Telnet Port

F	SNMP Configuration
1	Enable SNMP V1 & V2
2	Read Community
3	Write Community
4	Trap Community
5	Enable SNMP V3
G	Reboot Unit
2	Network Info Page
3	System Info Page
4	Console Commands
1	Command (by DescName)
2	Command (by VariableName)
3	RS232 Console
5	Set Configuration
1	Set General Configuration to Default
2	Set all Tasks to Default
3	Set all Charts to Default

Most parameters that can be accessed via the console menu can also be accessed via the website of the CMC III PU 19" Edition. The corresponding descriptions may be found in section 8 "Operating the CMC III PU 19" Edition". Only the few settings that are not available via the website are described in section 7.4.6 "Special settings and remarks".

### 7.4.4 Navigating through the menu structure

The individual menu items are selected with the number that precedes each menu item.

Starting at the **Main Menu**, for example, it is possible to select the following five sub-menus:

- Key "1": **Network Configuration** sub-menu
- Key "2": **Network Info Page** sub-menu
- Key "3": **System Info Page** sub-menu
- Key "4": **Console Commands** sub-menu
- Key "5": **Set Configuration** sub-menu

Alternatively, you can use the "arrow" keys, the "Return" key and the "Esc" key to navigate through the menus.

### 7.4.5 Entering values

The stored parameter values are shown in pointed brackets, ">" and "<", at the end of each line. To change a value, as when navigating through the menu structure, select the appropriate parameter using the associated number. To accept a changed value, you must always press the "Return" key.



# 7 Configuring the CMC III PU 19" Edition

EN

## Example 1: Changing the network settings for IPv4

- In the **Main Menu**, press key "1" to select the **Network Configuration** sub-menu.
- Press key "1" again to select the **IPv4 Configuration** sub-menu.
- Press key "1" again to select the **IPv4 Address** parameter.
- Clear the default address stored there and enter instead a valid network address.
- Press "Return" to confirm your selection.  
The entered address is displayed accordingly at the end of the line.
- Press the "Esc" key to exit the **IPv4 Configuration** menu.

If access to the device was made via Telnet or SSH, changing the IP address means that initially no further communication via the HyperTerminal is possible.

- First terminate the current connection.
- Establish a new connection with the changed IP address.

## Example 2: Changing the name of the contact person

- In the **Main Menu**, press key "1" to select the **Network Configuration** sub-menu.
- Press key "9" to select the **System Contact** parameter.
- Enter the name of the required contact person, e.g. **Contact person PU**.
- Press "Return" to confirm your selection.  
The entered name is displayed accordingly at the end of the line.
- Press the "Esc" key again to exit the **Network Configuration** menu.



Note:

If after changing a value you switch to another sub-menu, the value is **not** accepted.

### 7.4.6 Special settings and remarks

The following settings are not available on the website, but rather only via the console menu.

Parameter	Explanation
Settings Ethernet Port	Set the transmission speed and the duplex procedure or auto-negotiation for the CMC III PU 19" Edition network interface.
Reboot unit	Restart CMC III PU 19" Edition
Set General Configuration to Default	Reset all CMC III PU 19" Edition settings to the factory status
Set all Tasks to Default	Reset all tasks to the factory status (empty)

Tab. 6: Special settings

Parameter	Explanation
Set all Charts to Default	Reset all Charts to the factory status (empty)

Tab. 6: Special settings

If you use the console menu to select the **Automatic DHCP** value for the **DNS mode** parameter in the **DNS configuration** sub-menu, observe the following notes:

- In the **IPv4 Configuration** sub-menu, set the value **Enabled** for the **Enable/Disable DHCPv4** parameter.
- Alternatively or additionally, set the value **DHCPv6** in the **IPv6 Configuration** sub-menu for the **IPv6 Configuration** parameter.
- Under no circumstances should you retrospectively deactivate DHCP for **both** protocols IPv4 and IPv6 once you have implemented the above DNS configuration.

### 7.4.7 Logging off from the CMC III PU 19" Edition

Once you have performed all the required settings on the CMC III PU 19" Edition, log off again. To do this:

- Press the "Esc" key repeatedly until you return to the **Main Menu**.
- Press the "Esc" key again. The following message appears at the lower screen edge:  
Logout? [Y = Yes]
- Press the "Y" key to log off.
- Press any other key if you do not want to log off.



## 8 Operating the CMC III PU 19" Edition

### 8.1 General information

This chapter describes all the settings available via HTTP access.

### 8.2 General operation

#### 8.2.1 Layout of the screen pages

After logging on to the CMC III PU 19" Edition (see section 7.3.2 "Establishing the connection via Standard-IP"), the Web user interface for operating the device is displayed. In principle, the screen is divided into four sections:

1. Top section: Display general information about the device, change the password and log off the current user (see section 8.2.8 "Logging off and changing the password").
2. Left-hand section (navigation area): Select the overall system or respective component for which information is displayed in the right-hand section of the screen (see section 8.2.2 "Left-hand navigation area").
3. Right-hand section (configuration area): Display three tabs (see section 8.2.3 "Tabs in the configuration area") with input options for all settings.
4. Bottom section: Display messages (see section 8.2.4 "Message display").

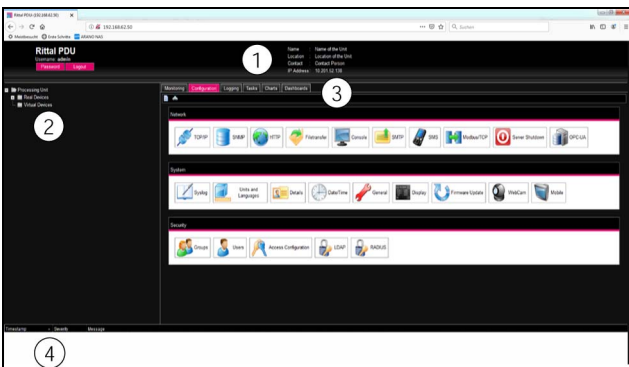


Fig. 23: Layout of the screen pages

#### Key

- 1 General information
- 2 Navigation area
- 3 Configuration area with tabs
- 4 Message display

#### 8.2.2 Left-hand navigation area

The complete system, including all installed components, is displayed as a tree structure in the navigation area of the screen.

Two subgroups are displayed below the complete system.

1. Real Devices: This group lists the CMC III PU 19" Edition itself as well as all hardware-installed devices and sensors.

2. Virtual Devices: This group displays all virtual devices that were created in the CMC III PU 19" Edition (see section 8.12 "Virtual Devices").

Each device can assume different statuses. To allow rapid identification of the current status, the symbol preceding the respective device is colour-coded:

Symbol	Explanation
	Status "OK". There are no warnings or alarm messages.
	Status "Warning". There is at least one warning message.
	Status "Alarm". There is at least one alarm message.
	Status "OK". The additional information symbol indicates that further status information may be displayed. This symbol is displayed only when the logged-in user has at least read access to the data of the associated device (see section 8.7.4 "Radius Configuration").
	Status "Detected". The sensor has recently been added and not yet confirmed. This sensor must still be confirmed via the <b>Acknowledge Sensors</b> sub-menu, either directly on the CMC III PU 19" Edition or on the website.
	Status "Lost". Communication with a sensor is no longer possible. The connection must be checked. Alternatively, the sensor can also be logged off by confirming.
	Status "Changed". The sequence of sensors has been altered and not yet confirmed. This configuration change must still be confirmed via the <b>Acknowledge Sensors</b> sub-menu, either directly on the CMC III PU 19" Edition or on the website (see section 6.4 "Acknowledging messages").

Tab. 7: Symbols for the status display

#### 8.2.3 Tabs in the configuration area

Six tabs are displayed in the right-hand area of the screen:

1. Monitoring: The current data for the CMC III PU 19" Edition or connected devices (see section 8.3 "Monitoring index tab").
2. Configuration: Configuration of basic settings (see section 8.4 "Configuration index tab").
3. Logging: The message archive for the CMC III PU 19" Edition or connected devices (see section 8.10 "Logging").
4. Tasks: Creating links between different values and related actions (see section 8.11 "Tasks")
5. Charts: Diagrams showing the development of variables over time (see section 8.13 "Charts").
6. Dashboards: Creating various views as dashboards (see section 8.14 "Dashboards")

# 8 Operating the CMC III PU 19" Edition

EN

The content of the **Monitoring** and **Configuration** tabs depends on whether the complete system ("Processing Unit" entry) or an individual component, e.g. "CMC III PU 19" Edition-Controller" entry, has been selected in the left-hand area of the screen page.

## 8.2.4 Message display

Current pending messages are displayed in the bottom section of the screen. The message display is structured as follows:

1. Timestamp: The date and time when the error occurred (fig. 24, item 1).
2. Severity: Severity of the error. A distinction is made between Warnings and Alarms (fig. 24, item 2).
3. Message: Error message in plain language (fig. 24, item 3).

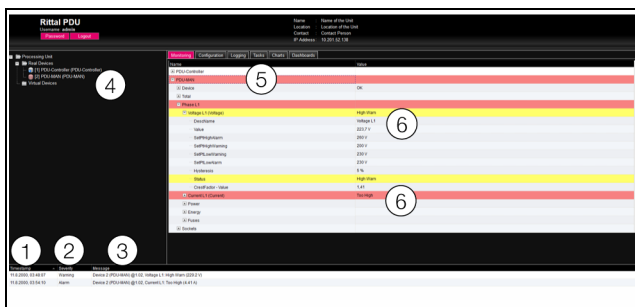


Fig. 24: Layout of message display

### Key

- 1 Date and time
- 2 Error category
- 3 Error message in plain language
- 4 Component with error message
- 5 Component
- 6 Parameter

Additionally, errors occurring are displayed as follows:

- Left-hand section (navigation area): In the navigation area, the symbol preceding the component where the error occurred appears red in the event of an alarm message and yellow in the event of a warning message (fig. 24, item 4).
- Right-hand section (configuration area): On the **Monitoring** index tab, the entire component and the specific parameter to which the warning or alarm applies appears red or yellow (fig. 24, items 5 and 6).
- The multi-LED on the front of the CMC III PU 19" Edition is permanently illuminated red or yellow.

Once the cause of an error message has been rectified, the corresponding message may be automatically deleted from the message display. The status of the respective component may also be reset, and all other displays triggered by the error may disappear. However, this depends on the selected alarm configuration (see section 8.9 "Alarm configuration"). In some cases, error messages and the status may remain in the overview until the messages have been acknowledged (see section 6.4 "Acknowledging messages").

If the device configuration is permanently altered, e.g. a new sensor is connected to the CMC III PU 19" Edition, this is likewise output in the message display as an "Alarm" type error message. Additionally, in such cases, the multi-LED on the front of the CMC III PU 19" Edition will cyclically flash green – orange – red. Such configuration changes are not deleted from the message display until confirmed by the operator (see section 6.4 "Acknowledging messages").

## 8.2.5 Other displays

The operator's entries in the Web interface are automatically checked against preset rules, depending on the parameter entered. This means that changes can only be saved if all values have previously been correctly entered in a dialogue.

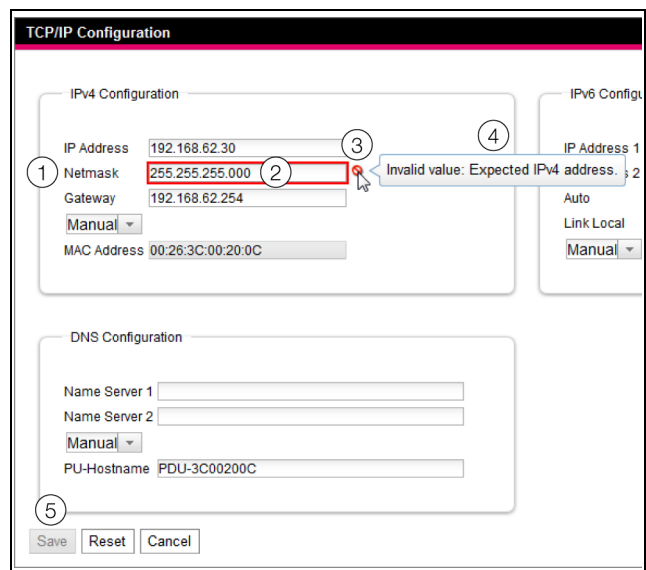


Fig. 25: Display of an incorrect entry

### Key

- 1 **Netmask** field
- 2 Incorrect entry
- 3 Prohibited symbol
- 4 Note
- 5 Inactive button

The following changes occur in case of an incorrect entry in the dialogue (illustrated here by the example of an incorrectly entered IP address):

- A red "prohibited symbol" (fig. 25, item 3) appears after the incorrect entry (fig. 25, item 2) in the **Netmask** field (fig. 25, item 1).
- By hovering over the prohibited symbol with the mouse, additional information about the error will appear (fig. 25, item 4).
- The **Save** button is deactivated (fig. 25, item 5), so that the current values cannot be saved.

Proceed as follows to rectify the error:

- Using the information provided, identify the precise nature of the incorrect entry.

In this particular example, the value entered does not comply with the format of an IP address.

- Correct the defective value, e.g. by entering the value "255.255.255.0".

The "prohibited symbol" is masked out and the **Save** button is activated.

- Save the settings by pressing the **Save** button.

### 8.2.6 Changing parameter values

Different parameters for the currently selected component are displayed in the list view of the **Monitoring** index tab. Some of these parameters can be adjusted by the operator, while others have fixed values assigned to them.

For all parameters that can be changed, an "Edit" symbol in the form of a stylised notepad and pen will appear after the respective parameter if the mouse pointer is placed in the relevant line (fig. 26, item 1).

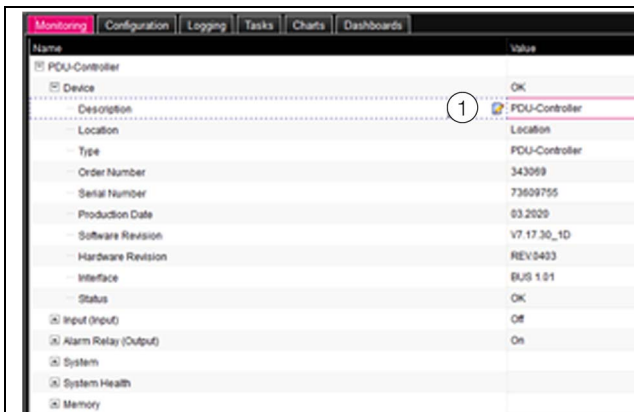


Fig. 26: Editable parameter with "Edit" symbol

#### Key

- 1 "Edit" symbol

If this symbol does not appear, the corresponding value cannot be altered.

Example:

- Select the "CMC III PU 19" Edition" entry in the navigation area.
- In the right-hand part of the screen, select the **Monitoring** index tab.
- One after the other, open the "CMC III PU 19" Edition" and "Device" entries by clicking on the "plus" symbol in front of the entry (fig. 27, item 1).

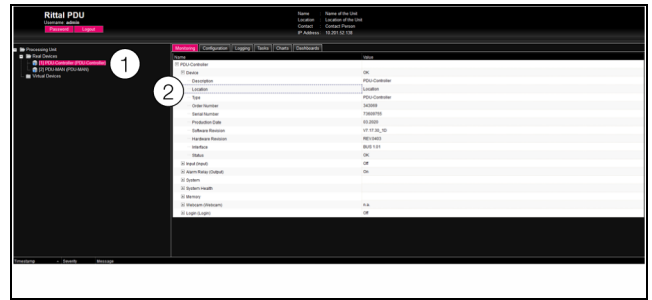


Fig. 27: Select an individual parameter

#### Key

- 1 CMC III PU 19" Edition and Device entries
- 2 "Location" parameter

- Position the mouse pointer at the end of the first column in the "Location" line (fig. 27, item 2).

An "Edit" symbol will appear, and the mouse pointer will change to a "Hand" symbol.

- Click on the "Edit" symbol.

A "Device Settings" dialogue will appear with the parameter "Device.Location".

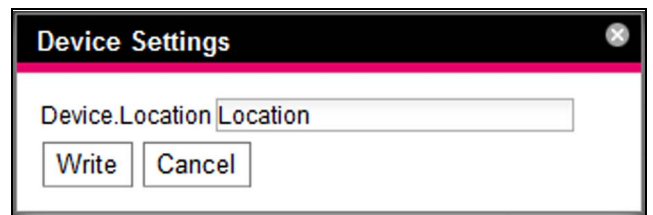


Fig. 28: "Device settings" dialogue

- Enter the location of the CMC III PU 19" Edition here, e.g. "CMC III PU server enclosure 1".

- Confirm your entry by clicking the **Write** button.

The dialogue box will close and the new value will appear in the "Location" line.

- Next, position the mouse pointer at the end of the first column in the "Type" line.

Because **no** "Edit" symbol appears, the value associated with "CMC III PU 19" Edition" cannot be changed.

You may wish to amend several values simultaneously, or may not know the exact entry under which the required parameter is stored. In such cases, you can also display all parameter values of the editable lower-level entries in a shared window.

- Simply open the "CMC III PU 19" Edition" entry by clicking on the "plus" symbol in front of that entry (fig. 29, item 1).

- Position the mouse pointer at the end of the first column in the "Device" line (fig. 29, item 2).

An "Edit" symbol will appear, and the mouse pointer will change to a "Hand" symbol.

# 8 Operating the CMC III PU 19" Edition

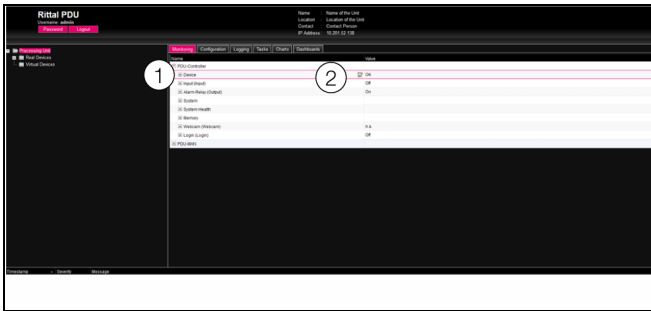


Fig. 29: Select multiple parameters

**Key**

- 1 Device entry
- 2 "Edit" symbol

- Click on the "Edit" symbol.

The "Device Settings" dialogue will appear with the two parameters "Device.Description" and "Device.Location".

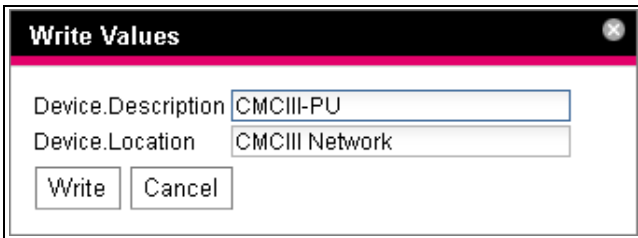


Fig. 30: "Device Settings" dialogue with multiple parameters

- Save the amended values for all required parameters.
- Confirm your entries by clicking the **Write** button.

The dialogue is closed.

- Extend the "Device" entry by clicking on the "plus" symbol in front of it.

You can now view all changed values.

The "Device Settings" dialogue shows all editable parameters below the previously selected level. For example, by clicking on the "Edit" symbol in the top level "CMC III PU 19" Edition", **all** parameters that can be changed for the entire component will be displayed.



**Note:**

If you attempt to amend too many variables, an error message will appear. In such cases, you will need to move down a level.

### 8.2.7 Undock function

For some devices, such as the Power Unit, a graphical overview is displayed on the CMC III PU 19" Edition website. This overview can be opened from the current browser window and observed in a separate window.



**Note:**

The Undock function is **not** available for Internet Explorer; this button is missing in this case.

- Select the associated device, e.g. "CMC III-POW", in the navigation area.

- Select the **Monitoring** tab in the right-hand area of the screen page.
- Expand the associated entry, e.g. "CMC III-POW", by clicking the "plus" character in front of the entry.

If, after selecting the "CMC III-POW" level, the lower-level "Device", "Total", etc. entries are displayed, switch to the graphical representation as follows:

- Click the coloured "graphic" symbol next to the "CMC III-POW" entry that resembles a stylised bar graph (fig. 31). The display switches to the graphical representation.

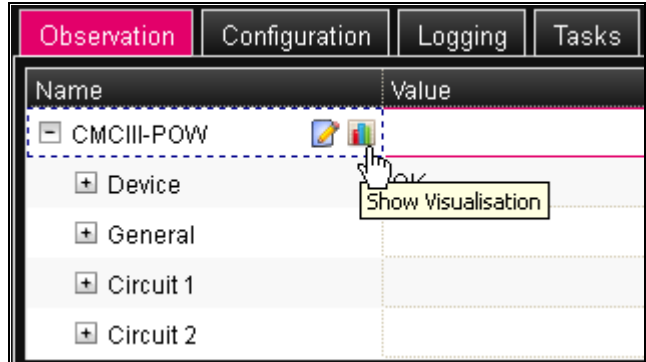


Fig. 31: „Grafic" symbol

- Click the **Undock** button in the graphical representation.

The graphical representation window is undocked from the CMC III PU 19" Edition website and the "Visualisation is undocked" message appears in the main window.

The undocked window can be moved and resized independently of the CMC III PU 19" Edition website itself. This function may be used by all connected devices, allowing you to create a complete overview on the screen of your PC.

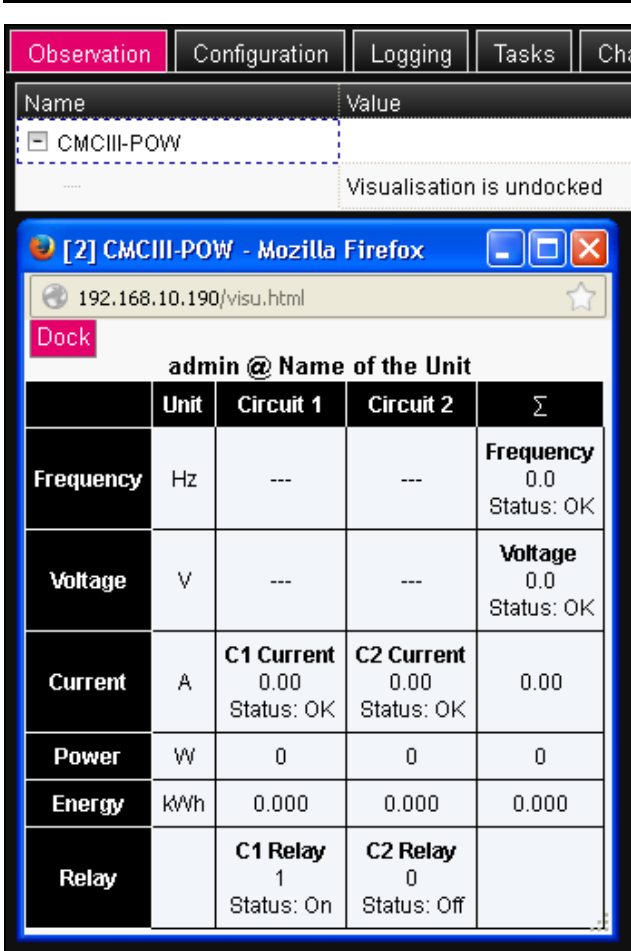


Fig. 32: Undocked window

- In the separate window, click the **Dock** button or simply close the window to display the overview in the main window again.



**Note:**

If a value in editing mode is present in the main window, all undocked windows become dark and actions can no longer be performed there.

### 8.2.8 Logging off and changing the password

For each user group (and thus also for every user), it is possible to specify a time after which the user will be logged out automatically in case of inactivity (see section 8.7 "Security"). A user can, however, also log out from the web user interface.



**Note:**

After the direct login to a dashboard, the user is not logged out automatically after the specified time. The user remains logged in to the CMC III PU 19" Edition while the dashboard is open.

- Click the **Logout** button on the top right of the screen page.

The logout occurs immediately, and the Logon window opens.

Users can also change their own password in the Web user interface.

- Click the **Password** button on the top right of the screen page. The dialogue "Set new Password for User 'XXX'" will appear.

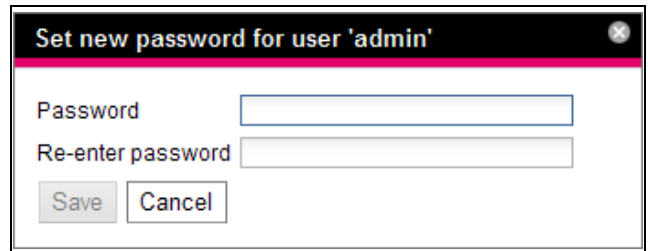


Fig. 33: Change the password

- Enter the new password in the "Password" line (at least 3 characters) and repeat it in the "Re-enter Password" line.
- Confirm your entries by clicking on **Save**. The dialogue is closed.

Provided both entries match, you will need to use the new password the next time you log into the system.



**Note:**

Independent of this change, a user with the appropriate rights can change the passwords of **all** users via the user administration (see section 8.7.2 "Users").

### 8.2.9 Reorganising the connected components

When new components are installed on the CMC III PU 19" Edition, they are inserted into the next free space in the navigation area and allocated a corresponding ID number. Particularly following multiple upgrades or changes to the order of the connected components, this can mean there is no longer any relationship between the position of the components in the CAN bus and the corresponding ID number.

The "Reorganize" function allows you to renumber all connected components,

- In the navigation area, right-click on the "Processing Unit" entry or any other connected component.
- Next, left-click on the "Reorganize" entry in the context menu.

A message appears stating that reorganisation has led to a re-indexing of components. This could cause problems when accessing these components, e.g. via SNMP, and access will need to be reconfigured. However, the "Alarm Configuration" of the individual sensors is retained.

The sensors are then registered automatically again on the CMC III PU 19" Edition.





**Note:**  
When reorganising the components, all components with the status "Lost" are removed from the navigation area.

### 8.3 Monitoring index tab

All settings for the individual system components are made in the **Monitoring** index tab, such as limits for warning and alarm messages. The display in the right-hand area of the screen page depends on which component was selected in the navigation area.

- If you select the "Processing Unit" entry (top node) in the navigation area, all "Real Devices" will be available for selection in the **Monitoring** index tab.
- If you select the "Real Devices" entry in the navigation area, only components belonging to that group are available for selection on the **Monitoring** tab.
- If you select a special component in the navigation area, such as the "CMC III PU 19" Edition" entry, only this component is available for selection on the **Monitoring** tab.



**Note:**  
It is not possible to change the parameters of different components at the same time.

The following sections 8.3.1 "Device" to 8.3.8 "Login" only provide detailed descriptions of editable parameters.

Because the "DescName" parameter can be changed in every level, other than the "Device" level, it is described only once.

Parameter	Explanation
DescName	Specific description of the selected level.

Tab. 8: Settings of the "DescName" parameter

There are also display values which are provided for information purposes only.

#### 8.3.1 Device

The general settings for the CMC III PU 19" Edition or for the associated selected component are performed at the "Device" level.

Parameter	Explanation
Description	Individual description of CMC III PU 19" Edition.
Location	Installation location of CMC III PU 19" Edition.

Tab. 9: Settings at "Device" level

Parameters that provide detailed information about the currently selected component, such as the software and hardware versions used, are also displayed. It is advisa-

ble to have such information to hand, particularly in order to ensure fast troubleshooting of queries with Rittal.

#### 8.3.2 Input

General settings for the digital input are made at the "Input" level.

Parameter	Explanation
Logic	Select a switching command of the input. The following options are available 0: Off / 1: On 0: On / 1: Off 0: OK / 1: Alarm 0: Alarm / 1: OK
Delay	Time delay after which the status message changes.

Tab. 10: Settings at the „Input“ level

The following parameters are also displayed for the digital input:

Parameter	Explanation
Value	Current value of the input.
Status	Current status of the input considering the delay value and the configured logic.

Tab. 11: Displays in the „Input“ Level

#### 8.3.3 Alarm Relay (Output)

General settings for the integral alarm relay are made at the "Alarm Relay (Output)" level.

Parameter	Explanation
Logic	Select a switching command for the alarm relay 0: Off / 1: On 0: On / 1: Off

Tab. 12: Settings at the „Alarm Relay (Output)“ level

The following parameters are also displayed for the Alarm Relay (Output):

Parameter	Explanation
Relay	Current status of the alarm (On/Off).
Status	Current status of the CMC III PU 19" Edition with regard to the Alarm Relay (Output) (On/Off).

Tab. 13: Display in the „Alarm Relay (Output)“ level

#### 8.3.4 System

The following additional information about the CMC III PU 19" Edition controller is displayed in the individual sub-levels of the "System" level.

## "V24 unit (V24 Port)" level

Information about a connected GSM or LTE unit is displayed.

Parameter	Explanation
Message	Current status of the unit. One of the messages below is displayed here, depending on the status of the unit.
Signal	Current signal strength.
Status	Current status of the unit ("OK" or "n.a." if no unit is connected). When these variables are changed (removal of a connected unit), a task can be used to send an appropriate message (e.g. by e-mail, SMS or SNMP).

Tab. 14: Displays in the „V24 unit (V24 Port)“ level

The "Message" parameter at the "V24 unit (V24 Port)" sub-level can have the following values.

Parameter	Explanation
no SMS unit found	No unit connected.
SMS unit found	SMS unit connected, unit is registered in the network.
SMS Unit o.k.	SMS unit ready.
sending SMS	SMS is being sent.
SMS unit timeout	SMS unit timeout, no connection possible.
SMS unit: PIN is missing	No PIN entered.
SMS unit: Service number missing	No service number entered.
SMS unit: wrong PIN	Incorrect PIN entered.
SMS unit: PUK needed	PUK must be entered.
SMS unit: not registered	SMS unit not registered in the network.
MSN missing	No MSN entered.

Tab. 15: Status at „V24 unit (V24 Port)“ level

## "PoE (PoE)" level

The status of the PoE is displayed at this level.

## 8.3.5 System Health

General parameters about the CMC III PU 19" Edition are displayed in the individual sub-levels of the "System Health" level.

### "System Temperature (Temperature)" level

The following parameters for the system temperature are displayed at this level:

Parameter	Explanation
Error Info	Current error message.
Status	Current status of the system temperature.

Tab. 16: Displays in the „System Temperature“ level

### "System Current" level

The following settings can be configured at this level:

Parameter	Explanation
Command	Selecting the "Reset" command switches the voltage on again after an overcurrent at the CAN and RS232 interface.

Tab. 17: Settings at „System Current“ level

The following parameters are also displayed:

Parameter	Explanation
Error Info	Current error message.
Status	Current status of the system current.

Tab. 18: Displays in the „System Current“ level

### "System Supply" level

The following parameters for the supply voltage are displayed at this level:

Parameter	Explanation
Error Info	Current error message.
Status	Current status of the power supply.

Tab. 19: Displays in the „System Supply“ level

## 8.3.6 Memory

The "Memory" level enables you to view information about a USB stick installed on the CMC III PU 19" Edition. This storage medium must have a maximum total storage space of 32 GB, must be formatted with the FAT32 file system, and is used for recording charts (see section 8.13 "Charts").

### "USB stick" level

Information about an installed USB stick is displayed here.

Parameter	Explanation
DescName	Name of USB stick. This name is also displayed directly on the "USB stick" sub-level.
Size	Total storage space on USB stick.
Usage	Used storage space on the USB stick as a percentage of the total storage space.
Command	By selecting the "Eject" command, the USB stick is logged off from the system. It can then be removed without potential loss of data.
Status	Current status of USB stick. "OK": USB stick installed and operational. "Inactive": USB stick installed but logged off. "n.a.": No USB stick installed. "High Warn": Warning message if more than 80% of the storage space has been used. "Too High": Alarm message if more than 90% of the storage space has been used.

Tab. 20: Displays in the "USB stick" sub-level

Before removing an external storage medium used to store chart data, the storage medium must first be logged off on the CMC III PU 19" Edition. Alternatively, the corresponding charts may be manually deactivated beforehand (see section 8.13.1 "Configuring a chart").



**Note:**

If an external storage medium is removed directly while charts are activated, this may lead to a loss of chart data.

### 8.3.7 Webcam

In the "Webcam" level, you can view previously created images or the live stream of a webcam from Axis that supports the "VA-PIX Version 3" API connected in the network. The appropriate access data for this webcam must have been entered previously (see section 8.6.8 "WebCam").



**Note:**

A live stream cannot be viewed with Internet Explorer. To view the live stream with Opera Browser, webcam password protection must be revoked.

You have a choice between two display options for the webcam:

- Tree representation: This allows fast, targeted access to individual parameters.
- Graphical representation: Graphical information (such as previously created images or a live stream) is displayed.



**Note:**

The switching between the two display options is described in section 8.2.7 "Undock function".

In the tree representation, the following settings for the webcam are configured:

Parameter	Explanation
DescName	Specific description of the webcam.
Command	The selection of the "Trigger" command manually initiates the creation of the individual images.

Tab. 21: Settings at „Webcam“ level

The following parameters are also displayed for the webcam:

Parameter	Explanation
Status	Current status of the webcam. "n.a.": No webcam connected or webcam not configured. "OK": A webcam is connected and operational. "Busy": The webcam creates images that were initiated by a trigger.

Tab. 22: Displays in the „Webcam“ level

The actual operation and the viewing of images are performed in the graphical representation.

- Actuate the "Selection" button.
- In the opened "Webcam Selection" window, select in the first dropdown list, whether
  - no image ("None" setting),
  - the live stream ("Live Stream" setting) or
  - a saved image of a specific date should be shown.
- If you want to view previously saved images, also select the start time of the sought image in the following dropdown list.
- Click the **OK** button to confirm the input.
- Click the **Backward** or **Forward** button to scroll between all individual images that were created by initiating a specific trigger.
- Select in the last dropdown list the resolution of the image from the specified values.

For saved images, the following supplementary information about the trigger is shown above the image:

- "Image X / Y": The number of the image and the total number of images (e.g. image no. 2 of 4 images).
- "Trigger caused by": The reason for initiating the trigger (e.g. Task 2).

Previously created images can be downloaded by FTP from the USB stick to a PC where they can be viewed and saved.



## Downloading the image files

- Use preferably the "FileZilla" program to establish an FTP connection between a PC and the CMC III PU 19" Edition (see section 9.1 "Establishing an FTP connection").
- Switch in the "FileZilla" program in the left-hand sub-window (PC) to the folder in which you want to save the image files.
- In the right-hand subwindow (CMC III PU 19" Edition), switch to the "download" folder and then the "usb-stick/records/webcam/YYYYMMDD/hhmmss" sub-folder. The "YYYYMMDD" date and the "hhmmss" timestamp represent the start time of the images.
- Right-click the required image file and select the "Download" action.

### 8.3.8 Login

The conditions for logins can be managed at this level. If all values are set to zero, password protection (Brute-Force function) is disabled.

Parameter	Explanation
DescName	Individual description of the login.
Attempts	Setting of the possible login attempts per user.
User Count	Number of users with invalid login attempts. If this number is exceeded, the system is locked for all further logins.
Delay	Period until the new login after exceeding the login attempts.
Status	Current status of the login:  Warning: Number of permitted login attempts per user has been reached. Alarm: Number of users defined at "User Count" has been reached; the system is locked for the delay time for all users.

Tab. 23: Settings at the „Login“ level

## 8.4 Configuration index tab

The content of the **Configuration** tab depends on which component was selected in the navigation area. If the complete "Processing Unit" system (top node) has been selected, the following configuration options are available:

- **Network** group box
  - TCP/IP
  - SNMP
  - HTTP
  - File transfer
  - Console
  - SMTP
  - SMS
  - Modbus/TCP
  - Server shutdown

- OPC-UA
- **System** group box
  - Syslog
  - Units and Languages
  - Details
  - Date/Time
  - General
  - Display
  - Firmware Update
  - Webcam
  - Mobile
- **Security** group box
  - Groups
  - Users
  - LDAP
  - RADIUS

These configuration options are described in detail in sections 8.5 "Network" to 8.7 "Security".

When a lower-level Real Device is selected, such as the "CMC III PU 19" Edition" device, the following configuration options are available:

- Alarm Configuration
- Device Rights Configuration

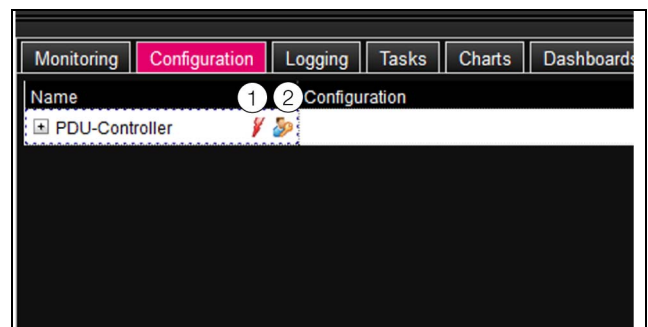


Fig. 34: Editable parameter with "Edit" symbol

### Key

- 1 "Alarm Configuration" symbol
- 2 "Device Rights Configuration" symbol

These configuration options are described in detail in sections 8.9 "Alarm configuration" and 8.8 "Device Rights".

If the complete system "Processing Unit" has been selected, the operator may display (left button fig. 35, item 1) or print (right button fig. 35, item 2) a summary of the current settings using the two buttons in the top section of the **Configuration** index tab.



Fig. 35: Summary of current settings

**Key**

- 1 Display
- 2 Print

## 8.5 Network

### 8.5.1 TCP/IP configuration

Basic network settings for the TCP/IP protocol are made in the "TCP/IP configuration" dialogue; settings are made separately for IPv4 and IPv6.

Parameter	Explanation
IP address	IP address of CMC III PU 19" Edition.
Netmask	IP subnet mask.
Gateway	IP address of router.
Dropdown	Activate ("DHCPv4" entry) or deactivate ("Manual" entry) DHCP for the automatic assignment of an IP address for a server. If the DHCP is activated, no further inputs can be performed in this group box.
MAC Address	Display of the network adaptor hardware address.

Tab. 24: IPv4 Configuration group box

Parameter	Explanation
IP address 1	First IPv6 address of CMC III PU 19" Edition
IP address 2	Second IPv6 address of CMC III PU 19" Edition
Auto	Displays an IPv6 address obtained automatically from the network.
Link Local	Displays the permanently assigned Link Local address of the CMC III PU 19" Edition.

Tab. 25: IPv6 Configuration group box

Parameter	Explanation
Dropdown	Basic settings for IPv6. "Disable": Deactivate IPv6. "Manual": Manual specification of the IPv6 addresses. "Stateless Auto Configuration": Activate the Autoconfiguration (in Linux networks). "DHCPv6": The address is assigned via DHCPv6 (in Windows networks).

Tab. 25: IPv6 Configuration group box

In addition to the CMC III PU 19" Edition's basic network settings, the address or the server name of up to two DNS servers can be entered in the **DNS Configuration** group box for name resolution.

Parameter	Explanation
Name Server	IP address or name of a server for name resolution.
Dropdown	Activate ("Automatic by DHCP" entry) or deactivate ("Manual" entry) DHCP for the automatic assignment of an IP address by the DHCP server. If DHCP is activated, no further inputs can be made in this group frame. It must, however, be activated for at least one of the IPv4 or IPv6 DHCP protocols.
PU host-name	DNS name of CMC III PU 19" Edition. If a DNS server is used for name resolution, the CMC III PU 19" Edition can also be accessed using its name rather than the IP address.

Tab. 26: DNS Configuration group box

### 8.5.2 SNMP Configuration

The "SNMP Configuration" dialogue is used to make basic settings for the SNMP protocol.

When making settings for the SNMP protocol, please observe the following:

- The MIB for the CMC III PU 19" Edition is a dynamically generated MIB, which may also change if changes are made to the sensor configuration.
- If the CMC III PU 19" Edition is incorporated into an infrastructure management system via the MIB, only the variable name may be used to identify the variables. Identification via the ObjectID is not recommended.



**Note:**

The current status of the "OID\_List.cmc3" MIB file can be saved from the CMC III PU 19" Edition onto a local PC via FTP access from the "download" folder (see section 9.4 "Saving additional information locally").

All trap receivers are entered in the **Traps** group box and are generally enabled for sending.



Note:

- All trap receivers that are not enabled in this group box ("Use" column) will not receive any traps, even if enabled in the Alarm Configuration.
- All trap receivers that are activated in this group box must additionally be activated in the Alarm Configuration (see section 8.9.3 "Trap Receivers").

Parameter	Explanation
Enable Authentication Trap	Enable or disable the Authentication Trap. Send a trap for query by an unknown community name.
Trap Receivers	Up to 16 IP addresses as possible receivers of trap messages.
Use	The following protocols can be specified: SNMPv1 Trap, SNMPv2C Trap, SNMPv2C Inform, SNMPv3 Trap.

Tab. 27: Traps group box

The **Allowed Hosts** group box can be used to define special host addresses that are able to make contact with the CMC III PU 19" Edition via SNMP.

Parameter	Explanation
Host	Up to 12 IP addresses as possible hosts that can make contact with the CMC III PU 19" Edition. If <b>no</b> IP address is entered here, <b>all</b> hosts in the network can make contact.
Use	Enable or disable individual hosts.

Tab. 28: Allowed Hosts group box



Note:

Once a host has been entered in the **Allowed Hosts** group box, any other host that is not entered there will no longer be able to query values via the SNMP protocol.

In the **SNMPv1/v2c** group box, you can define special requirements for the SNMP protocol in versions 1 and 2c.

Parameter	Explanation
Enable	Enable or disable SNMPv1 and SNMPv2c.
Read Community	Name of the community that has read access to the CMC III PU 19" Edition.
Write Community	Name of the community that has write access to the CMC III PU 19" Edition.

Tab. 29: SNMPv1/v2c group box

Parameter	Explanation
Trap Community	Name of the community with the trap receivers. Trap messages can be sent only to members of this community.

Tab. 29: SNMPv1/v2c group box

In the **SNMPv3** group box, you can define special requirements for the SNMP protocol in version 3.

Parameter	Explanation
Enable	Enable or disable SNMPv3.
SNMPv3 Username	User name for access via SNMP.
SNMPv3 Password	Associated password for access via SNMP. The password must contain at least eight characters.

Tab. 30: SNMPv3 group box

### 8.5.3 HTTP Configuration

All settings for HTTP access to the CMC III PU 19" Edition are made in the "HTTP Configuration" dialogue, subdivided into standard access **without** SSL and secure access **with** SSL.

It is also possible to specify separately for each user whether or not that user has HTTP access to the CMC III PU 19" Edition (see section 8.7.2 "Users").

Parameter	Explanation
Port	Web server port in the CMC III PU 19" Edition.
Enable	Enable or disable access via the HTTP protocol.

Tab. 31: Standard Access (without SSL) group box

Parameter	Explanation
SSL Port	Secure Web server port in the CMC III PU 19" Edition.
Enable	Enable or disable access via the HTTP protocol.

Tab. 32: Secure Access (with SSL) group frame



Note:

It is not possible to disable both forms of access, i.e. with and without SSL, from the Web user interface. This is possible only via the console menu.

### 8.5.4 File transfer configuration

All settings for access to the CMC III PU 19" Edition via FTP are made in the "File Transfer Configuration" dialogue (see section 9 "Updates and data backup").

# 8 Operating the CMC III PU 19" Edition

It is also possible to specify separately for each user whether or not that user has FTP access to the CMC III PU 19" Edition (see section 8.7.2 "Users").

Parameter	Explanation
Port	FTP server port in the CMC III PU 19" Edition.
Enable FTP Server	Enable or disable access via the FTP protocol.
Port	SFTP server port in the CMC III PU 19" Edition.
Enable SFTP Server	Enable or disable access via the SFTP protocol.

Tab. 33: "File Transfer Configuration" dialogue

### 8.5.5 Console

All settings for access via Telnet and SSH (Secure Shell) are made via the "Console Configuration" dialogue (see section 7.4 "Telnet/SSH connection").

It is also possible to specify separately for each user whether or not that user has access to the CMC III PU 19" Edition via Telnet or SSH (see section 8.7.2 "Users").

Parameter	Explanation
Port	Port for access to the CMC III PU 19" Edition via Secure Shell (SSH).
Enable	Enable or disable access via Secure Shell.

Tab. 34: SSH group box

Parameter	Explanation
Port	Port for access to the CMC III PU 19" Edition via Telnet.
Enable	Enable or disable access via Telnet.

Tab. 35: Telnet group frame

### 8.5.6 SMTP Configuration

The "SMTP Configuration" dialogue is used to make the basic settings for sending e-mails.

All settings for the mail server are specified in the **Server Parameters** group box so that the CMC III PU 19" Edition can send an appropriate e-mail when alarms are pending.

Parameter	Explanation
Server	IP address or name of mail server used to send e-mails.
Port	Port of the mail server.
Authentication	Enable or disable authentication on the mail server.

Tab. 36: Server Parameters group box

Parameter	Explanation
Username	User name for login to the mail server.
Password	Associated password for login to the mail server.
Sender Address	E-mail address of the CMC III PU 19" Edition (sender address).
Reply to Address	Reply address when a receiver answers an e-mail from the CMC III PU 19" Edition.

Tab. 36: Server Parameters group box

All receivers of e-mail messages are entered and generally enabled for sending in the **Email** group box.



Note:

- All e-mail receivers that are not enabled in this group box ("Use" column) do not receive any e-mails, even if enabled in the Alarm Configuration.
- All e-mail receivers that are activated in this group box must additionally be activated in the Alarm Configuration (see section 8.9.2 "E-mail receivers").

Parameter	Explanation
Email Address	A maximum of 16 e-mail addresses as possible receivers of e-mails from the CMC III PU 19" Edition.
Use	Enable or disable individual receivers.
Send device message	Send an e-mail when the device structure changes (e.g. a sensor is removed).

Tab. 37: Email group box

### 8.5.7 SMS Configuration

The "SMS Configuration" dialogue is used to make the basic settings for sending SMS messages.

All settings for sending via a GSM unit (DK 7030.570) or an LTE unit (DK 7030.571) are made in the **Service Parameters** group box.

Parameter	Explanation
SIM-Pin	Four-digit PIN of the general SIM card.
Service Number	SMS service number of the provider (depending on the selected SIM card / provider). For example, Deutsche Telekom D1: +491710760000
ISDN MSN	Set the MSN number of the ISDN connection. The number must be entered in the following format: +49/2772/123456

Tab. 38: Service Parameters group box

Parameter	Explanation
ISDN Pre-Dial Number	Phone number to obtain an outside line. This is necessary when the ISDN unit is connected to a phone system.
ISDN Command	An SMS must be sent once to register with the network operator. For example, Deutsche Telekom D1: "888 ANMELD"

Tab. 38: Service Parameters group box

All receivers of SMS messages are entered and generally enabled for sending in the **Known Receivers** group box.



Note:

- All SMS receivers that are not enabled in this group box ("Use" column) cannot receive SMS messages, even if enabled in the Alarm Configuration.
- All text message receivers that are enabled in this group box must also be enabled in the Alarm Configuration (see section 8.9.4 "SMS Receivers").

Five IP addresses can be entered in the **Allowed Trap Senders** group box whose SNMP traps can be forwarded via SMS.

### 8.5.8 Modbus/TCP Configuration



Note:

- The CMC III PU 19" Edition supports only the "Modbus/TCP" Modbus protocol.
- A list of all variables that can be queried via Modbus can be fetched as the "ModbusMap.cmc3" file via an FTP access from the "download/docs" folder of the CMC III PU 19" Edition and stored on a local PC (see section 9.4 "Saving additional information locally").

The "Modbus/TCP Configuration" dialogue is used to make the basic settings for the Modbus/TCP protocol. The following settings are made in the **Service Parameters** group box.

Parameter	Explanation
Enable	Enable or disable access via the Modbus/TCP protocol.
Port	Modbus server port in the CMC III PU 19" Edition. Port 502 is set as the default.

Tab. 39: Service Parameters group box

The special host addresses specified in the **Allowed Hosts** group box can be used to establish the connec-

tion to the CMC III PU 19" Edition via the Modbus/TCP protocol.

Parameter	Explanation
Host	Up to 12 IP addresses or names of possible hosts that can make contact to the CMC III PU 19" Edition. If <b>no</b> host is entered here, <b>all</b> hosts in the network can make the connection.
Access Rights	Authorisation of the associated host for access via Modbus/TCP. Possible settings are read-only access ("read" setting) or read and write access ("read/write" setting). If access via Modbus/TCP is generally disabled, this setting has no effect.

Tab. 40: Allowed Hosts group box



Note:

Once a host has been entered in the **Allowed Hosts** group box, any other host not entered there can no longer query values via the Modbus protocol.

### 8.5.9 Server Shutdown Configuration

Basic settings for the regulated shutdown of servers via a task are made in the "Server Shutdown Configuration" dialogue (see section 8.11.3 "Selecting an action"). For this purpose, an RCCMD software licence (7857.421) must be installed on each of these servers.

Parameter	Explanation
Name	Name of server.
IP Address	IP address or name of server to be shut down.
Port	Port on which the server receives the RCCMD signal. Port 6003 is set as default.
Delay	Amount of time for which the alarm must be active in order to launch the shutdown of the respective server.
Use	Enable or disable individual servers.

Tab. 41: Servers group box



Note:

- All servers that are not enabled in this group box ("Use" column) will not be shut down even if enabled in a task.
- All servers that are enabled in this dialogue must additionally be enabled in the respective task (see section 8.11.3 "Selecting an action").

## 8.5.10 OPC-UA Configuration

The OPC-UA protocol is a network management protocol that can be used in control room technology. This protocol allows data from the CMC III PU 19" Edition and from the connected sensors to be requested from the **Monitoring** tab. It does not, however, provide any access to the **Configuration**, **Logging** and **Tasks** tabs.

The "OPC-UA Configuration" dialogue is used to make the basic settings for this communications protocol.

Parameter	Explanation
Enable	Enable or disable access via the OPC-UA protocol.
Port	Port of the OPC-UA server in the CMC III PU 19" Edition. Port 4840 is set as the default.

Tab. 42: "OPC-UA Configuration" dialogue

## 8.6 System

### 8.6.1 Syslog

The "Syslog Configuration" dialogue is used to make the basic settings for sending log messages to the Syslog server.

Parameter	Explanation
Enable Syslog	Syslog can generally be enabled here and the protocol used can be specified. If TCP is used, TLS can also be enabled.
Server 1	The IP address of a server to which the alarm and event logs are sent.
Server 2	The IP address of a second server to which the alarm and event logs are sent.
Port	Port of the Syslog server. Port 514 is set as the default.
Facility	A digit between 0 and 7 (inclusive) used to specify the priority of the sent log.

Tab. 43: "Syslog Configuration" dialogue

### 8.6.2 Units and Languages

In the "Units and Language Configuration" dialogue, the **Units** group box can be used to toggle between the units "Celsius" and "Fahrenheit" for all temperature values.

Parameter	Explanation
Temperature format	Select the desired temperature unit ("Celsius" or "Fahrenheit").

Tab. 44: Units group box

- After changing the unit, check all temperature setting values (e.g. from a connected temperature sensor).

The language for the CMC III PU 19" Edition website can be selected in the **Language** group box.

- Select the required language, e.g. German, from the dropdown list.
- Next, log off from the CMC III PU 19" Edition website (see section 8.2.8 "Logging off and changing the password") then log on again.

The names of the levels and parameters will continue to be displayed in English after changing the language. However, tool tips can be displayed in your chosen language.

- Hover the mouse over the **Monitoring** tab e.g. on the entry for the "Device" level underneath the main "CMC III PU 19" Edition" level.

A tool tip with the German translation of "Device" ("Gerät") will appear.

### 8.6.3 Details

The "Details Configuration" dialogue displays detailed information about the CMC III PU 19" Edition. Specific parameters can be customised to differentiate between multiple installations.

Parameter	Explanation
Name	Name of CMC III PU 19" Edition (for more precise identification).
Location	Installation location of CMC III PU 19" Edition (for more precise identification).
Contact	Contact address, typically an e-mail address.
Hardware Revision	Display of the CMC III PU 19" Edition hardware version.
Software Revision	Display of the CMC III PU 19" Edition software version.
Serial Number	Display of CMC III PU 19" Edition serial number.

Tab. 45: "Details Configuration" dialogue

### 8.6.4 Date/Time

The "Date and Time Configuration" dialogue is used to change the system date and time of the CMC III PU 19" Edition.

Parameter	Explanation
Time Zone	Selection of the time zone. The time zone is required when an NTP server is used.

Tab. 46: Time Zone group box

Parameter	Explanation
Time	Current time.
Date	Current date.

Tab. 47: Date/Time group box





**Note:**  
Changing the system date or system time can lead to the loss of chart data (see section 8.13 "Charts").

The Network Time Protocol can be enabled in the **NTP** group box. The associated NTP server can also be defined here. These settings can be used to synchronise the local date and time setting of the CMC III PU 19" Edition with a server.

Parameter	Explanation
Use NTP	Enable or disable the NTP function for the time and date synchronisation with an NTP server.
NTP Server 1	IP address or name of the primary NTP server.
NTP Server 2	IP address or name of the secondary NTP server.

Tab. 48: NTP group box

### 8.6.5 General

Basic settings for the CMC III PU 19" Edition are made in the "General Configuration" dialogue.

Parameter	Explanation
Enable Beeper	Enable or disable the beeper installed in the CMC III PU 19" Edition.

Tab. 49: "Beeper group box" dialogue



**Note:**  
An integrated beeper disabled here cannot be enabled in the Alarm Configuration for individual alarm messages.

The basic settings for the alarm relay are specified in the **Alarm Relay** group box.

Parameter	Explanation
Alarm Relay Behavior	Behaviour of the alarm relay on occurrence of an alarm. Possible settings are open the contact ("Open on Alarm" setting) or close the contact ("Close on Alarm" setting). Alternatively, the complete alarm relay can be disabled ("Disabled" setting). If the alarm relay is disabled, this relay contact, like every other variable, can be set manually via the website, SNMP or tasks.
Switch on	Trigger the alarm relay only for warnings, only for alarms or for warnings and alarms.
Quit Alarm Relay	Switch back the alarm relay only after an alarm has been confirmed.

Tab. 50: Alarm Relay group box

Parameter	Explanation
Switch on Device Errors	Enable or disable the alarm relay when configuration changes are made to the CMC III PU 19" Edition.

Tab. 50: Alarm Relay group box



**Note:**  
An alarm relay disabled here cannot be enabled in the Alarm Configuration for individual alarm messages.

### 8.6.6 Display

The PIN for access to the **Setup** configuration menu may be set in the "Display Configuration" dialogue on the CMC III PU 19" Edition display.

Parameter	Explanation
Set new display PIN	Enter the new PIN. This must contain exactly four digits.

Tab. 51: "Display Configuration" dialogue

### 8.6.7 Firmware Update



**Note:**  
Observe the instructions for performing an update in section 9.2 "Performing an update".

The CMC III PU 19" Edition can be updated directly via the website in the "Firmware Update" dialogue. Alternatively, this can also be achieved with a USB storage medium (see section 9.2.3 "Update via USB") or via an (S)FTP connection (see section 9.2.4 "Update via FTP or SFTP").

- Click the "Disk" symbol in the "Firmware Update" dialogue.
- Navigate through the file selection dialogue to the new firmware file ending in "tar" which you need to install, and select it.  
The file name displayed in the dialogue.
- Click the **Start Update** button.

The update process starts automatically after a few seconds. This is indicated by red flashing of the multi-LED on the CMC III PU 19" Edition (so-called heartbeat, alternately long and short).

### 8.6.8 WebCam

The access to a webcam from Axis available in the network can be configured in the "WebCam Configuration" dialogue (VAPIX version 3). The webcam allows a live stream from the web user interface to be viewed or individual images for each task to be recorded or saved (see section 8.3.7 "Webcam").



**Note:**  
A live stream **cannot** be viewed with Internet Explorer. To view the live stream with Opera Browser, webcam password protection must be revoked.

The basic settings for the webcam are made in the **Network** group box.

Parameter	Explanation
Enable	Enable or disable access to the webcam.
Host	IP address or host name of the webcam.
Username	User name for access to the webcam.
Password	Associated password for access to the webcam.

Tab. 52: Network group box

The settings for creating individual images are made in the **Snapshot** group box.

Parameter	Explanation
Interval	The interval in seconds between two images.
Number of Images	Total number of images created when a trigger is initiated.
Destination	Selection of the external storage medium on which the images are stored.

Tab. 53: Snapshot group box



**Note:**  
A trigger for creating the individual images can, for example, be initiated via tasks or manually via the website.

### 8.6.9 Mobile

The representation (dashboard) displayed on a mobile terminal is specified in the **Mobile Phone** group box in the "Display Configuration" dialogue (see section 8.14 "Dashboards").

Parameter	Explanation
Dashboard	Selection of the dashboard displayed for the login with a mobile terminal.

Tab. 54: Mobile Phone group box

The representation of a dashboard on a mobile terminal normally differs from the configured representation. The title lines of the individual components of the dashboard are initially displayed stacked on a mobile terminal. Clicking a title line displays the associated content of the component (e.g. a variable list).



**Note:**  
Before selecting a dashboard for a mobile terminal, ensure that the dashboard has been configured appropriately.

## 8.7 Security

All basic settings for user groups and individual users are specified in the **Security** box frame. These settings can be changed for individual components. If the "default" standard setting is used for the individual components, the values specified here are used.

### 8.7.1 Groups

Up to 32 different user groups can be defined in the "Groups Configuration" dialogue. 33 users may be created and assigned to these groups in the "Users" dialogue (see section 8.7.2 "Users").

Parameter	Explanation
Name	Name of user group.
Description	(Detailed) description of user group.
Initial Data Rights	User group authorisation regarding the device's parameters of the type "Data" (see section 8.8.2 "Data types"). Possible settings are no rights ("no" setting), read rights only ("read" setting) and change the limit values ("read/write" setting).
Initial Config Rights	User group authorisation regarding the device's parameters of the type "Config" (see section 8.8.2 "Data types"). Possible settings are no configuration rights ("no" setting), configuration parameters can only be read ("read" setting) and parameters can be changed ("read/write" setting). The authorisations set here are automatically transferred to newly registered devices.
Admin	Show or hide the <b>Configuration</b> and <b>Tasks</b> tabs. Here too, the general information about the sensors under the "Device" point may only be edited as an administrator.
Auto Logout [sec]	The time after which a user from this group is automatically logged out from the CMC III PU 19" Edition in case of inactivity. Where the set value is "0", there is no automatic logoff for that user.

Tab. 55: "Groups Configuration" dialogue



**Note:**  
The duration specified for the "Auto Logout" parameter does not apply when a user logs in directly to a dashboard.  
The user remains logged in to the CMC III PU 19" Edition while the dashboard is open.



We recommend using the setting in the "admin" column for restricted user groups to prevent access to the **Configuration** tab (box unchecked). If this is not done, there is a possibility that users could reassign their own rights.



**Note:**  
The "admin" group cannot generally be changed.

### 8.7.2 Users

Up to 33 different users can be defined in the "Users Configuration" dialogue.

Parameter	Explanation
Enabled	Enable or disable a user.
User	User name for login to the CMC III PU 19" Edition.
Group	User group to which the user belongs.
File Transfer	User authorisation for access via FTP. Possible settings are no access ("no" setting), read-only access ("read" setting) or read and write access ("read/write" setting). If access via FTP is generally disabled (see section 8.5.4 "File transfer configuration"), this setting has no effect.
HTTP	User authorisation for access via HTTP. If the checkbox is activated, access via HTTP is possible; if the checkbox is deactivated, access via HTTP is not possible. If access via HTTP(S) is generally disabled (see section 8.5.3 "HTTP Configuration"), this setting has no effect.
Console	User authorisation for access via Telnet or SSH. If the checkbox is activated, access via Telnet or SSH is possible; if the checkbox is deactivated, access via Telnet or SSH is not possible. If access via Telnet or SSH is generally disabled (see section 8.5.5 "Console"), this setting has no effect.

Tab. 56: "Users Configuration" dialogue



**Note:**  
If the access type using a specific protocol is generally disabled, such access cannot be enabled for a single user.

Users with the appropriate access rights can use the **Set Password** button to (re)assign a password for another user. This requires preselection of the desired user, otherwise the button is disabled.

In addition, users can change their own password after they have logged in (see section 8.2.8 "Logging off and changing the password").

### 8.7.3 LDAP configuration

The "LDAP Configuration" dialogue can be used to take over user administration from an LDAP server. If access to an LDAP server is configured and enabled, the user data will always be checked first on the LDAP server during login. If it is not found there, the system will then search the local user administration in the CMC III PU 19" Edition.

The basic settings for the LDAP server are specified in the **Server** group box.

Parameter	Explanation
Enable LDAP	Enable or disable access to the LDAP server.
Host name	The IP address or name of the LDAP server.
Protocol	Select whether an insecure or secure connection is used.
Bind DN	Distinguished Name for login on the LDAP server.
Bind PW	Password for authentication on the LDAP server.

Tab. 57: Server group box

The settings for requesting the group names on the LDAP server are specified in the **Group Search** group box.

Parameter	Explanation
Search Filter	Filter for requesting the group names on the LDAP server. The expression "(&(objectClass=group)(member=%U))" is stored as standard.
Base DN	Root directory in which the information for group administration is stored.
Attribute	Attributes returned from the LDAP server for the request.

Tab. 58: Group Search group box



**Note:**  
"%U" can be used as a placeholder for the LDAP user in the aforementioned "Search Filter".

The settings for requesting the user names are specified in the same way in the **User Search** group box.

# 8 Operating the CMC III PU 19" Edition

Parameter	Explanation
Search Filter	Filter for requesting the user names on the LDAP server. The expression "(&(object-Class=user)(sAMAccountName=%L))" is stored as standard.
Base DN	Root directory in which the information for the user administration is stored.
Attribute	Attributes returned from the LDAP server for the request.

Tab. 59: User Search group box



**Note:**  
"%L" can be used as a placeholder for the login name in the aforementioned "Search Filter".

Whereas the users stored in the LDAP server need not necessarily exist in the local user administration of the CMC III PU 19" Edition, the groups must be created locally. To avoid needing to use the same group names in the LDAP server and in the CMC III PU 19" Edition, the associated names on the LDAP server can be assigned to the local group names of the CMC III PU 19" Edition in the **Group Alias Configuration** group box.

Parameter	Explanation
Group Name	Name of the group in the CMC III PU 19" Edition.
LDAP Alias	Corresponding name of the group in the LDAP server.

Tab. 60: Group Alias Configuration group box

### 8.7.4 Radius Configuration

The "Radius Configuration" dialogue performs the user administration for a Radius server. If the access to a Radius server is configured and enabled, during the login, the user data is always checked first on the Radius server. If it is not found there, the system will then search the local user administration in the CMC III PU 19" Edition. The basic settings for the Radius server are specified in the **Server** group box.

Parameter	Explanation
Enable Radius	Enable or disable access to the Radius server.
Hostname	The IP address or name of the Radius server.
Port	The port of the Radius server. Port 1812 is set as the default.

Tab. 61: Server group box

Parameter	Explanation
Secret	The password for authentication on the Radius server.
Authentication Method	Deployed encryption method.

Tab. 61: Server group box

The rights for a user stored on the Radius server for login to the CMC III PU 19" Edition are specified in the **Group Search** group box.

Parameter	Explanation
Group Selection	Assignment of the user to a group. "Manual": Each user is logged in with the user group selected in the "Group Name" field. "By Server Attribute": The user is logged in with the user group stored for the "cmc-group" attribute in the Radius server. This user group must also exist in the CMC III PU 19" Edition.
Group Name	The selection of the associated user group for all users for login via a Radius server and a manual assignment to a user group ("Manual" setting).

Tab. 62: Group Search group box

## 8.8 Device Rights

After selecting the "CMC III PU 19" Edition" component from the "Real Devices" category in the navigation area, you can specify the access rights to components for individual user groups under the **Configuration** tab.

- Select the "CMC III PU 19" Edition" entry in the navigation area.
- Select the **Configuration** tab in the right-hand area of the screen page.

The various parameters for the currently selected component are displayed in the list view of the **Configuration** index tab. Access rights to these parameters can be amended by the operator.

- Click on the "Configure Device Rights" symbol (fig. 34) The "Device Rights Configuration" dialogue will appear (fig. 36).

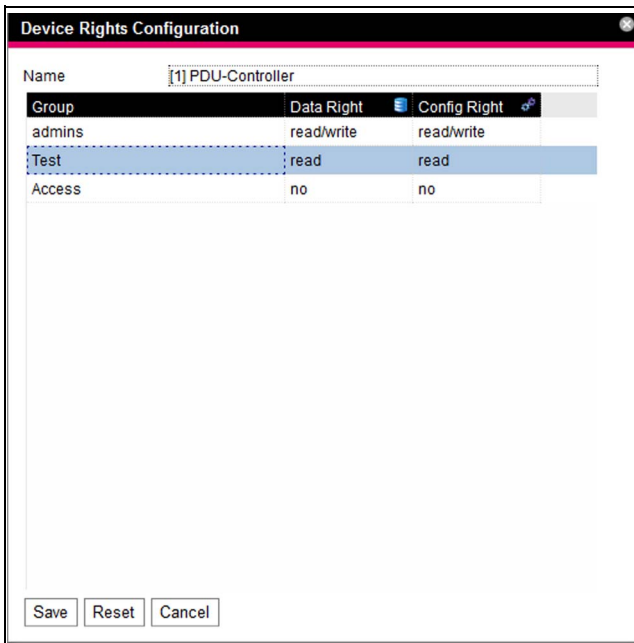


Fig. 36: "Device Rights Configuration" dialogue

The name of the device for which "Device Rights Configuration" is currently being implemented is shown above the table. The names of the user groups are shown in the "Group" column.

Parameter	Explanation
Group	Names of all user groups created previously (see section 8.7.1 "Groups").

Tab. 63: "Group" column

Access to the device's parameters of the type "Data" is defined under the **Monitoring** tab in the "Data Right" column. The assignment of parameters to the type "Data" is indicated by the "database" symbol preceding the respective parameter on the **Configuration** tab (see section 8.8.2 "Data types"). Here you can choose between the following settings:

Parameter	Explanation
no	Members of the group have neither read nor write access to parameters of the type "Data".
read	Members of the group have read access to parameters of the type "Data".
read/write	Members of the group have read and write access to parameters of the type "Data". This setting only takes effect if the software permits changes to parameters of the type "Data".

Tab. 64: "Data Right" column

Access to the device's parameters of the type "Config" is defined under the **Observation** tab in the "Config Right" column. The assignment of parameters to the type "Config" is indicated by the "gear" symbol preceding

ing the respective parameter on the **Configuration** tab (see section 8.8.2 "Data types"). Here you can choose between the following settings:

Parameter	Explanation
no	Members of the group have neither read nor write access to the limit values. If the "no" entry is also selected in the "Data Right" column, only the "Device" level can be viewed. If some other entry is selected in the "Data Right" column, the "Value" and "Status" values can be viewed in the other levels.
read	Members of the group have read access to the limit values. This means they can view the voltage limit values for alarms and warnings, for example.
read/write	Members of the group have read and write access to the limit values. This means they can view and change the voltage limit values for alarms and warnings, for example.

Tab. 65: "Config Right" column

If a field is unlabelled, the "Device Rights" at the level below this will vary (see section 8.8.1 "Inheriting Device Rights").



Note:

Generally speaking, access rights defined in this way only apply to the access to the associated component via the website.

### 8.8.1 Inheriting Device Rights

The allocation of rights for the individual sensors is structured in a parallel way to that shown on the **Monitoring** index tab. A change to one node will automatically be transferred to all variables beneath that node.

- Select the "CMC III PU 19" Edition" entry in the navigation area.
- Select the **Configuration** tab in the right-hand area of the screen page.
- After the "CMC III PU 19" Edition" entry, select the "Device Rights" symbol (fig. 34). The "Device Rights Configuration" dialogue will appear (fig. 36).

If changes are made in this dialogue and a user group is assigned a different access authorisation to the variables, that user group will have the same access rights for all variables beneath the "CMC III PU 19" Edition" node. If there is another node with different lower-level variables, the inheritance of access rights will apply here too. Any configuration changes are automatically transferred to the second node and the variables beneath it. On the other hand, if the second node is amended, the access rights will only change for all variables beneath that node.

# 8 Operating the CMC III PU 19" Edition

If you wish to amend a single lower-level parameter, this can be selected and edited individually.

- Open the entire structure by clicking on the "plus" symbol.
- Select the "Device Rights" symbol immediately after the variable you wish to edit.

If the access rights to the individual parameters in the "Device Rights Configuration" dialogue differ for one node, at this point an empty box will be displayed in the "Device Rights Configuration" for the entire sensor. By editing this empty box, the setting made there will, in turn, be adopted for all lower-level parameters.

### 8.8.2 Data types

The sensor parameters are divided into two types:

- Data
- Config

A variable of the type "Data" supplies status information and can only be amended for those sensors whose software permits it. A variable of the type "Config" contains configuration information and can be amended by users if the software permits it.

The respective type is indicated by a symbol. Parameters of the type "Data" are indicated by a "database" symbol (with stacked blue cylinders). Parameters of the type "Config" are indicated by two diagonally arranged gear wheels.

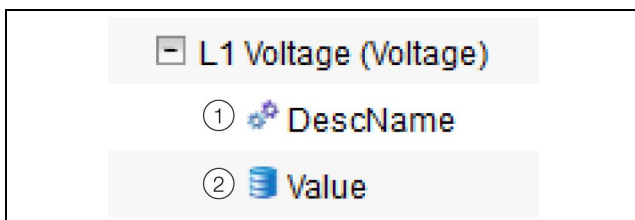


Fig. 37: Symbols for the data types

#### Key

- 1 "Gear wheel" symbol (data type "Config")
- 2 "Database" symbol (data type "Data")

The respective symbols are displayed both when selecting a sensor in the navigation area on the **Configuration** tab and opening it down to the lowest level, as well as in the "Device Rights Configuration" dialogue (fig. 36). The symbols illustrate allocation to the two data types "Data" and "Config".

### 8.9 Alarm configuration

After selecting the "CMC III PU 19" Edition" entry under "Real Device" or some other component under "Real Device", the alarm notification for each measured value may be specified individually on the **Configuration** tab.

- Select the "CMC III PU 19" Edition" entry in the navigation area.
- Select the **Configuration** tab in the right-hand area of the screen page.
- Click on the "Configure All Alarms" symbol. The "Alarm Configuration" dialogue will open.

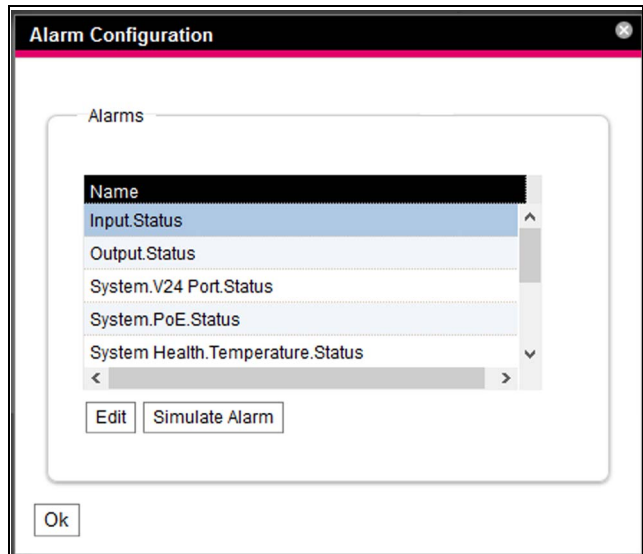


Fig. 38: "Alarm Configuration" dialogue

- In the list, click in the line of the CMC III PU 19" Edition or sensor for which you want to specify the CMC III PU 19" Edition's response.
- Click on **Edit**.  
For example, if the temperature sensor is selected, the "Alarm Configuration: Temperature.Status" dialogue will appear.

### 8.9.1 Notifications

You can make settings in the **Notifications** group box to specify the handling of active alarms.

Parameter	Explanation
Use Beeper	Enable or disable the beeper when an alarm occurs.
Use Relay	Enable or disable the alarm relay
Acknowledge required	If this setting is enabled, the alarm message remains displayed until it has been acknowledged. This means even when the source of the alarm no longer applies, for example, the power has fallen back below the switching point, the "Alarm" status will remain. Only the transition to "OK" status is blocked, i.e. other alarms and the transition to "warning" status are displayed even when this setting has been enabled.
Delay	The delay time between a measured value being exceeded and the transition to alarm or warning status. This delay time does not apply to the transition to "OK" status.

Tab. 66: Notifications group box



#### Note:

If the integrated beeper or alarm relay is generally disabled, it cannot be enabled for individual alarm messages (see section 8.6.5 "General").

## 8.9.2 E-mail receivers

Settings can be made in the **Email Receivers** group frame to specify which receivers should be sent an e-mail when an alarm occurs.

All receivers that have been created correctly will be displayed here (see section 8.5.6 "SMTP Configuration"). These receivers are **deactivated** by default.

Parameter	Explanation
Email Address	The e-mail addresses that were created in the CMC III PU 19" Edition configuration.
Use	Enable or disable the associated receiver.

Tab. 67: Email Receivers group box



**Note:**  
If an e-mail receiver was generally disabled previously, it may be enabled for individual alarm messages, but e-mail messages will still not be sent to this receiver (see section 8.5.6 "SMTP Configuration").

## 8.9.3 Trap Receivers

You can make settings in the **Trap Receivers** group box to specify which receivers should be sent a trap message.

All receivers that have been created correctly will be displayed here (see section 8.5.2 "SNMP Configuration"). These receivers are **activated** by default.

Parameter	Explanation
Trap Host	The trap receivers that were created in the CMC III PU 19" Edition configuration.
Use	Enable or disable the associated receiver.

Tab. 68: Trap Receivers group box



**Note:**  
If a trap receiver was generally disabled previously, it may be enabled for individual alarm messages, but trap messages will still not be sent to this receiver (see section 8.5.2 "SNMP Configuration").

## 8.9.4 SMS Receivers

You can make settings in the **SMS Receivers** group box to specify which receivers should be sent an SMS message.

All receivers that have been created correctly are displayed here (see section 8.5.7 "SMS Configuration"). These receivers are **disabled** by default.

Parameter	Explanation
SMS Phone Number	The phone numbers stored in the CMC III PU 19" Edition configuration.
Use	Enable or disable the associated receiver.

Tab. 69: SMS Receivers group box



**Note:**  
If an SMS receiver was generally disabled previously, it may be enabled for individual alarm messages, but text messages are still not sent to this receiver (see section 8.5.7 "SMS Configuration").

## 8.9.5 Alarm simulation

After completion of an alarm configuration, the notifications set in the "Alarm Configuration" dialogue (fig. 38) can be checked. This is done by simulating a pending alarm, i.e. the alarm status is overwritten with the selected value for the specified duration.

- Click in the listing the line of the sensor or output for which you want to simulate the alarm behaviour.
- Click the **Simulate Alarm** button.
- You specify in this dialogue which type of alarm and for how long it is to be simulated.

Parameter	Explanation
Duration	The duration for which the alarm should be simulated.
Simulation Value	Selection of the status to be simulated. The possible values depend on the type of the selected sensor or output.

Tab. 70: „Simulate Alarm“ dialogue

- Click the **OK** button to simulate the alarm and so check all settings (e.g. the correct sending of an e-mail to all stored receivers).



**Note:**  
The "Alarm simulation" entry created in the log information allows the simulation to be differentiated from an actual alarm.

- After expiration of the duration for a simulated alarm, you can simulate further alarms similarly.



**Note:**  
Only one alarm simulation can be active concurrently.

## 8.10 Logging

Log information about the CMC III PU 19" Edition may be viewed on the **Logging** tab. Because this log information has general validity, the information displayed on



# 8 Operating the CMC III PU 19" Edition

the **Logging** tab is independent of the component selected in the left-hand area of the screen page.



Note:

The current status of the log file can be saved from the CMC III PU 19" Edition onto a local PC via FTP access (see section 9.4 "Saving additional information locally").

- Select the **Logging** tab in the right-hand area of the screen page.

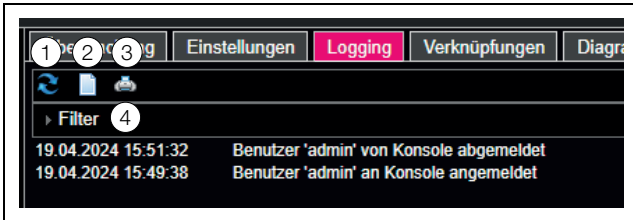


Fig. 39: Logging tab

**Key**

- 1 Reload the information
- 2 Clear the display
- 3 Print the display
- 4 Define a filter

The following options are available:

- Define a filter to display only selected events
- or
- Load the entire history with all events.

The symbols in the toolbar below the tabs can be used for this purpose.

### 8.10.1 Defining a filter

You can define a filter to obtain only selected portions of all messages.

- Click the "Filter" symbol (fig. 39, item 4).

The "Set Logging Filter" dialogue opens.

The following parameters are available:

Parameter	Explanation
Date	Messages from a specific date.
Type	Error type. For example, by selecting "Alarm", only alarm messages but no other messages from devices will be displayed.
Device Index	Messages for a specific device. The (internal) number of the device that was specified for the initial connection is selected.
User	Messages triggered by a specific user. For example, messages about when the user logged in or out are displayed.
IP Address	The messages that can be assigned to a specific IP address. All addresses from which the CMC III PU 19" Edition was accessed are listed.

Tab. 71: Settings in the "Set Logging Filter" dialogue

"All Items" is the first entry in each column. If you select this entry, the entries of the associated column are **not** filtered.

Example: All information messages issued on 19.01.2012

- Select the above date "19.01.2012" in the "Date" column.
- Select the "Info" entry in the "Type" column.
- Select the "All items" entry in each of the following three columns.
- Click on **OK**.

The filter is applied and only those messages that satisfy the above criteria will appear in the list.



Note:

Multiple entries can be marked in the individual columns by clicking with the "Ctrl" key held down.

### 8.10.2 Refreshing the view

After defining a filter, all messages stored until this time that satisfy the filter criterion are displayed. There is no automatic refresh of the display when new messages arrive, i.e. the display must be refreshed manually.

- Click on the first symbol from the left (fig. 39, item 1). It takes a moment until all events have been reloaded from the CMC III PU 19" Edition. The refreshed list with all events is then displayed.



Note:

After each refresh, only those messages that satisfy the currently specified filter criterion will be displayed.

### 8.10.3 Printing the display

The entire history, or events selected by a filter, may be printed.

- First define a suitable filter to only display a selected portion of all events (see section 8.10.1 "Defining a filter").
- Click on the third symbol from the left (fig. 39, item 3). Once again, it will take a moment until all events have been reloaded from the CMC III PU 19" Edition. The refreshed list with all events is then displayed in a separate window, and a "Print" dialogue will open.
- Print the display, or if applicable, save it as a PDF file.

### 8.10.4 Clearing the display

You can clear the current display at any time.

- Click on the second symbol from the left (fig. 39, item 2). All entries are cleared from the display.



Note:

Only the entries in the display are cleared; the log file remains unchanged.

## 8.11 Tasks

Tasks can be used to poll and logically link the status of the CMC III PU 19" Edition and all connected components. Additionally, date values may also be incorporated into the links. In the event of a status change to the trigger expression (see section 8.11.2 "Defining the trigger expression"), various actions may then be activated. For example, in the event of an alarm message on a certain day of the week, a corresponding e-mail may be sent. The current status of a task cannot be queried via SNMP.

Tasks have general validity. For this reason, the information displayed on the **Tasks** index tab is independent from the components selected in the left-hand section of the screen.

### 8.11.1 Tasks tab

The following information for as many as 32 different tasks is displayed on this tab:

Parameter	Explanation
ID	Unique ID of the task. This ID is defined by the system and cannot be changed.
Name	Name of task.
Description	(Detailed) description of the task.
Enabled	"Yes" or "No" display indicating whether the associated task is enabled, i.e. whether or not the assigned action is performed.

Tab. 72: Tasks tab

The settings for the individual tasks can be changed in the "Task Configuration" dialogue by clicking on **Edit**.

### 8.11.2 Defining the trigger expression

- Click on the **Edit** button of the task whose configuration you want to change or create.

The "Task Configuration" dialogue opens.

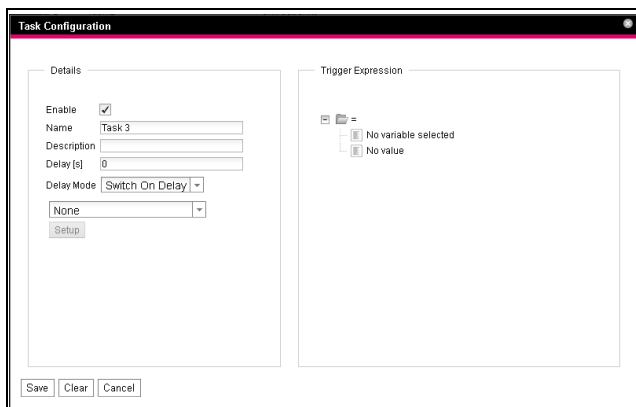


Fig. 40: "Task Configuration" dialogue

### Details group box

Make the following settings in the left-hand **Details** group box:

Parameter	Explanation
Enable	Enable or disable the task.
Name	Name of task.
Description	(Detailed) description of the task.
Delay	Delay time for a task in seconds. If the value "0" is entered here, no delay will occur, irrespective of the selected "Delay Mode".
Delay Mode	Type of delay
Dropdown list	Select an action to be performed when the associated expression is "true". Alternatively, a parameter value may be set.
Setup	Definition of the action to be performed.

Tab. 73: Details group box

### Delaying a task

A task may additionally be controlled with a delay time. This delay time is defined via the parameter "Delay [s]" and may be selected individually between 0 and 9999 seconds.

The type of delay is configured via the dropdown list of the "Delay Mode" parameter.

Parameter	Explanation
Switch On Delay	ON delay. When the corresponding expression is "true", the system will first wait for the defined "Delay" time before executing the set action.
Switch Off Delay	OFF delay If the corresponding expression is "true", the set action is executed immediately. If a status subsequently changes and the expression becomes "false", the system will first wait for the defined "Delay" time before reversing the set action.
Pulse	Pulse. When the corresponding expression is "true", the system will first execute the set action over the duration of the defined "Delay" time. Once this period has expired, the action will be discontinued and reset to the original status.

Tab. 74: Selection list to delay a task



#### Note:

Generally speaking, the chosen action is only executed if the "Trigger Expression" still applies following expiry of the delay time. On the other hand, if a value has changed during the delay time and the "Trigger Expression" no longer applies, the chosen action will not be executed.

### Trigger Expression group box



# 8 Operating the CMC III PU 19" Edition

EN

The expression to be checked is specified in the right-hand **Trigger Expression** group box. Various variables can be linked with each other using the Boolean operators "Or" ("|"), "And" ("&"), "Not-Or" ("~|"), "Not-And" ("~&"), "Equal to" ("=") and "Not equal to" ("<>").

Parameter	Explanation
Operator Type	The Boolean operator used to link subordinate expressions and check the variables.
Nature	Select "Time" for checking a specified time or "Variable" for checking a variable value.
Device	Select the device for which a value should be checked.
Variable	The variable whose value is to be checked. This list shows only those variables available for the previously selected device.
Value	Value against which the variable is to be checked. This list shows only those values available for the previously selected variable.

Tab. 75: Trigger Expression group box

The dropdown lists for selection of the various setting options are displayed after clicking one of the predefined values "=", "No Variable Selected" or "No Value".

The "=" and "<>" operators can be used to check variables of the CMC III PU 19" Edition itself or its connected devices for a specific status. As an alternative, date details (day of week) can be checked.

The "|" and "&" operators can be used to link subordinate expressions with each other.

Proceed as follows to define an expression:

- When several expressions are to be checked: First specify whether the two subordinate expressions must both return the "true" value ("&" operator) or whether just one value is sufficient to initiate the action ("|" operator).
- Specify separately for all subordinate expressions whether they return the value "true" when the variable or the date matches the value ("=" operator) or not ("<>" operator).

### 8.11.3 Selecting an action

Finally, from the dropdown list assign an action to the task which is to be performed when the complete expression returns the value "true".



Note:

The action stored for a task is only ever executed following a status change. If the definition of a task changes, such as the logic of the switch output, the output is not switched directly following acceptance of the change, but only when the status of an input changes.

You can choose between the following settings:

Parameter	Explanation
Send Status Email	Send a status e-mail.
Send Status SMS	Send a status SMS.
Suppress Alarm Email	Suppress the sending of e-mails to selected receivers.
Suppress Alarm SMS	This setting has no effect.
Suppress Alarm Trap	Suppress the sending of traps to selected receivers.
Suppress Alarm Message	Suppress the alarm message for the selected status variable.
Set Variable Value	Set a variable value.
Shutdown Server	Regulated shutdown of a server.

Tab. 76: Details group box

After selecting your required action, it must be configured appropriately.

#### ■ Click on **Setup**.

Depending on the previously selected action, in the appropriate dialogue you can specify, for example, who should be sent a status e-mail ("Send Status Email" action), for which status an alarm message should be suppressed ("Suppress Alarm Message" action), etc.

#### "Set Variable Value" action

For selection of the "Set Variable Value" action, "switchable" variables (such as the digital outputs of a connected IO unit) can be set.



Note:

A device with a switchable variable must first be selected from the "Device" dropdown list so that the associated selection options are displayed in the fields below.

After clicking on **Setup**, the "Configure Set Variable Value" dialogue will appear.

Parameter	Explanation
Device	Device on which the variable is to be set.
Variable	Variable to be set.
Value on True	Value of the variables if the expression previously defined in the <b>Trigger Expression</b> group box has the value "true".

Tab. 77: "Configure Set Variable Value" dialogue

Parameter	Explanation
Value on False	Value of the variables if the expression previously defined in the <b>Trigger Expression</b> group box has the value "false".

Tab. 77: "Configure Set Variable Value" dialogue

**Note:**

In all cases, it is important to ensure that **different** values have been selected in the two dropdown lists "Value on True" and "Value on False". Otherwise, the variable will retain this value even if the value of the expression in the **Trigger Expression** group box changes.

**Grouping outputs**

The assignment of an output to a group allows a single task or switching command via the website, Telnet or SNMP to switch several outputs (also different components) in the same manner. This means it is not necessary to create a separate task for each of these outputs. Therefore, if you have assigned the same group number to multiple outputs, selecting **one** of these outputs will also switch all the other outputs in this group correspondingly.

**"Shutdown Server" action**

If the "Shutdown Server" action is selected, servers with a corresponding RCCMD software licence installed will be shut down in a regulated manner (see section 8.5.9 "Server Shutdown Configuration").

After clicking on the **Setup** button, the "Shutdown Server" dialogue will appear.

- In the "Use" column, activate the servers you wish to shut down if the expression previously defined in the **Trigger Expression** group box has the value "true".

**8.11.4 Example of creating a task**

You want to define a task that sends a status e-mail when an enclosure is opened at the weekend.

- Click the "=" operator displayed by default in order to display the "Operator Type" dropdown list.
- Select the "&" operator in this dropdown list in order to link the "weekend" and "door open" events with each other.
- Click the "No Variable Selected" entry below the first "=" operator.
- Select the "Time" entry in the "Nature" dropdown list.
- Click the first entry, "Never".
- Select the "Saturday" entry in the "Day of Week" list box.
- While keeping the "Ctrl" key held down, also select the "Sunday" entry in this list.
- Click the "No Variable Selected" entry below the second "=" operator.

- Select the "Variable" entry (preselected by default) in the "Nature" dropdown list.
- Select the "[1] CMCIII-PU" entry in the "Device" dropdown list.
- Select the "Access.Status" entry in the "Variable" dropdown list.
- Click the "Closed" entry below the "[1] Access.Status" variable.
- Select the "Open" entry in the "Value" dropdown list.
- Now select the "Send Status Email" entry as an action in the dropdown list in the **Details** group box.
- Click on **Setup** to specify the desired receivers for the status e-mail via activation in the "Use" column.
- Check that the "Enable" checkbox is activated.

**8.11.5 Deactivating or deleting a task**

A task that is not required may be deactivated or deleted.

- Open the configuration menu for the respective task.

**Deactivating a task**

- Deactivate the "Enable" checkbox.
- Save the configuration by clicking on **Save**.

**Deleting a task**

- Click the **Clear** button.  
This will reset the task's settings to their default values.
- Save the configuration by clicking on **Save**.

**8.12 Virtual Devices**

The so-called "Virtual Devices" are displayed below the "Real Devices" in the left-hand area of the screen, i.e. the devices actually connected to the CMC III PU 19" Edition. They must first have been created on the right-hand side by clicking the **Configuration** tab.

Sensors and output devices can be coupled to form a new, predefined type of "virtual device". For example, when a specified temperature measured with the integrated temperature sensor is overshoot, a fan connected to a Power Unit (7030.050) will be switched on.

A virtual device is treated as a dedicated component, for which, for example, the status can also be queried via SNMP. Although such a status query is not possible for a task, tasks can be configured to a greater extent (see section 8.11 "Tasks").

**8.12.1 Types of virtual devices**

You can select the following types as virtual device:

- Two-Level Controller
- Access Controller

**Two-Level Controller**

Such a controller can be used to switch an output on or off (e.g. an output of a connected IO unit) using a specified (threshold) value (e.g. a limit temperature). The above-mentioned (threshold) value is specified directly in the virtual device and is independent of the limit values defined in the actual sensor.

In contrast to a task, a two-level controller cannot evaluate the status of the assigned sensor. This is possible only with a task (see section 8.11 "Tasks") for which combinations of status and time conditions can be set and one or more actions performed.

### Access Controller

An access controller can be used to switch a switchable output using a reader (transponder reader or number-combination lock). This allows, for example, a room access door to be monitored and opened.

#### 8.12.2 Creating a virtual device

You create a virtual device on the **Configuration** tab. To do this:

- Select the "Virtual Devices" entry in the navigation area of the screen.
- Click the **Configuration** tab in the right-hand area of the screen.
- Click the **New** button in the **List of Virtual Devices** group frame.
- Select the desired type of the virtual device in the "Virtual Device Type" dropdown list in the "Create new Virtual Device" dialogue (e.g. "Two-Level Controller").
- Click the OK button to confirm the selection.

The configuration change causes the list of all devices to be reloaded automatically. A new component, e.g. the above-mentioned "Two-Level Controller", marked with a small green "+" character appears in the navigation area under the "Virtual Devices". The multi-LED of the CMC III PU flashes cyclically green – orange – red.

- Confirm the message for the configuration change (see section 6.4 "Acknowledging messages").  
The device list is reloaded automatically. The entry under the "Virtual Devices" now has a yellow background and the LED of the CMC III PU illuminates orange continuously provided no other alarm is pending.
- Then specify the input and output of the virtual device.  
Depending on the virtual device type, the output of the virtual device can only be specified.  
The device list is then reloaded automatically. A blue "information" symbol is displayed in the entry under the "Virtual Devices" and the LED of the CMC III PU illuminates green continuously provided no other alarm is pending.
- Then configure all settings on the **Monitoring** tab (see section 8.12.3 "Configuring a virtual device").

#### 8.12.3 Configuring a virtual device

- Select the appropriate "Virtual Devices" in the navigation area of the screen.
- Click the **Monitoring** tab to perform the settings.

On the "Device" level, general settings for the virtual device are performed or parameters displayed that provide detailed information about the virtual device (see section 8.3.1 "Device"). The "Production Date" parameter

shows the calendar week in which the Virtual Device was created in the CMC III PU 19" Edition. Depending on the virtual device type, various parameters are displayed on the "Virtual Device" level.

### Two-Level Controller

Parameter	Explanation
DescName	Individual description of the virtual device.
InputValue	Current value of the virtual-device input.
OutputValue	Current value of the output taking account of the settings for "OutputValueOnStatusOn" or "OutputValueOnStatusOff".
Setpoint	Switching point of the input for a status change of the output.
Hysteresis	Required percentage deviation for undershooting or overshooting the switching point for a status change (see section 14 "Glossary").
OutputValueOnStatusOn	Value of the output when the input value lies above the switching point ("On" status).
OutputValueOnStatusOff	Value of the output when the input value lies below the switching point ("Off" status).
Status	Current status of the two-level controller. Status "On": Input value lies above the switching point. Status "Off": Input value lies below the switching point.

Tab. 78: "VirtualDevice" level for a two-level controller

### Access Controller

Parameter	Explanation
DescName	Individual description of the virtual device.
Command	The selection of the "Switch" command switches the output of the virtual device. It then switches for the duration stored in the "Delay" field the status stored in the "AccessLogic" field.
OutputValue	The current value of the switchable output that has been assigned to the access controller ("On" or "Off").
Delay	Duration for which the output of the virtual device changes its status. After expiration of this time, the output switches back to its original status. This parameter acts only when the "Toggle Output" entry is <b>not</b> selected in the "AccessLogic" dropdown list.

Tab. 79: "VirtualDevice" level for an access controller

Parameter	Explanation
AccessLogic	Status to which the output of the virtual device switches for permitted access. "Delayed On": Activate the output. "Delayed Off": Deactivate the output. "Toggle Output": Switch the output to the other status (from "On" to "Off" and vice versa).
Status	Current status of the access controller.

Tab. 79: "VirtualDevice" level for an access controller

Ensure that the configuration of an access controller has the following sequence:

- Select the status in the "AccessLogic" dropdown list into which the access controller should switch, e.g. "Delayed Off".
- Create with the "Delay" parameter the duration with which the output is switched into the previously selected status.
- Activate the "Switch" entry in the "Value" dropdown list.  
The access controller switches for the entered duration into the previously selected status, e.g. "Off", and then into the other status, e.g. "On".
- Specify in the access configuration with which access codes or which transponder cards the access controller can be activated.

### 8.12.4 Deleting a virtual device

A virtual device is deleted on the **Configuration** tab. To do this:

- Select the "Virtual Devices" entry in the navigation area of the screen.
- Click the **Configuration** tab in the right-hand area of the screen.
- Select in the **List of Virtual Devices** group frame the virtual device to be deleted.
- Select with pressed "Ctrl" key other virtual devices that you also want to delete.
- Click the **Delete** button.  
A prompt appears as to whether the virtual device should actually be deleted.
- Confirm this by clicking the **OK** button or terminate the action by clicking the **Cancel** tab.
- Then confirm the message for the configuration change (see section 6.4 "Acknowledging messages").

## 8.13 Charts

Up to 16 diagrams may be generated on the **Charts** tab, showing the development over time of up to 6 variable values in each case. The data from these diagrams may be downloaded as CSV files for separate evaluation (e.g. using a spreadsheet program like Excel) (see section 8.13.3 "Evaluating the CSV files").

- Select the **Charts** tab in the right-hand area of the screen page.

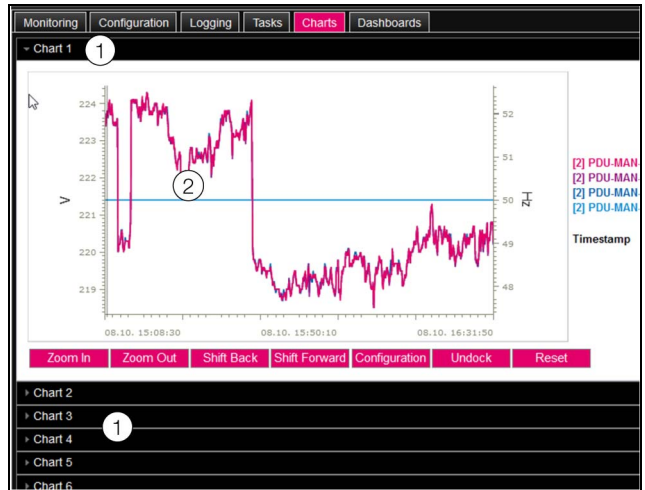


Fig. 41: Charts tab

### Key

- 1 Title bars
- 2 Superimposed diagram

- Click on the title bar of the respective chart to show or hide the corresponding diagram and the configuration buttons.

### 8.13.1 Configuring a chart

In order to record the variable values, each chart first needs to be configured and activated (once only).

- If the buttons for configuration and navigation of the diagram are not displayed, please click on the title bar. The diagram will then drop down and can be configured (e.g. "Chart 1").
- Click the "Configuration" button.  
The "Chart Configuration" dialogue opens.

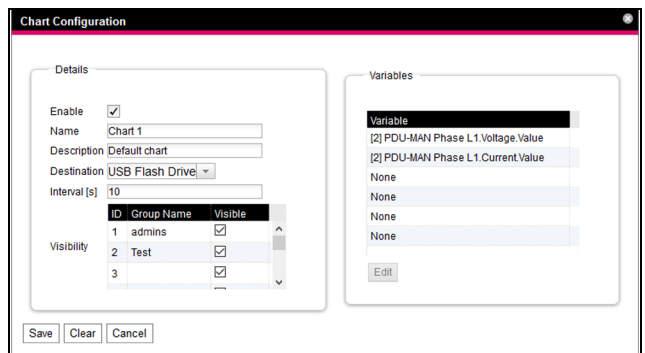


Fig. 42:

"Chart Configuration" dialogue

Make the following settings in the left-hand **Details** group box:

Parameter	Explanation
Enable	Enable or disable the chart.
Name	Name of chart. This name is displayed in the title bar of the chart.
Description	Description of chart.

Tab. 80: Details group box

Parameter	Explanation
Destination	Displays the external storage medium on which the chart data is saved (USB flash drive).
Interval	Time interval in seconds in which the current value is saved.
Visibility	Activation of user groups who may view and configure the respective chart.

Tab. 80: Details group box

Before removing an external storage medium on which chart data is stored, the corresponding charts must first be deactivated. Otherwise, the files containing the chart data could become damaged. Alternatively, the external storage medium may also be logged off from the system prior to removal (see section 8.3.6 "Memory"). This will deactivate the charts automatically.



**Note:**  
If an external storage medium is ejected directly, this may lead to a loss of chart data.

Up to 6 variables per chart are indicated in the right-hand group box **Variables** and their values displayed in graphical form.



**Note:**  
Changing the settings of existing diagrams may lead to a loss of data. If applicable, the corresponding CSV files should be saved beforehand (see section 8.13.3 "Evaluating the CSV files").

- Select one of the 6 lines.  
If the entry "None" appears in one line, this variable is already assigned to the chart
- Click the **Edit** button.  
The "Variable Selection" dialogue opens.  
The following parameters are available:

Parameter	Explanation
Device	Select the device from which a value is to be recorded.
Variable	The variable whose value is to be recorded. In this list, only the available variables for the previously selected device are displayed.

Tab. 81: Variables group box

- Click on **OK** to accept your chosen settings, or cancel the operation by clicking the **Cancel** button.  
The "Chart Configuration" dialogue will open again.
- If necessary, insert other variables into the chart in the same way.

- Click on the **Save** button to save the diagram with your chosen settings.
- Alternatively, click **Clear** to reset all diagram settings to their default values. All previously saved chart values will then be deleted.

If variables with different units are assigned to one diagram (for example, current in A and voltage in V), multiple y-axes will be created.

### 8.13.2 Diagram view

The left-hand limit of the x-axis is preset to the time when the chart was activated. The right-hand limit will "grow" each time the chart is refreshed following the time entered in the "Interval" parameter. Similarly, the y-axes will be adapted to allow all measurements to be displayed. To the right of the diagram, the values of all displayed variables are by default displayed as per the activation date of the diagram and the corresponding time stamp (date and time).

#### Displaying measurements at a specific time

As long as the chart is activated, you can display the precise measurements at a given time.

- Place the mouse cursor in the diagram.  
A vertical line will appear.

To the right of the diagram, the values of all displayed variables are displayed as per the marked date in plain language and the corresponding time stamp.

#### Adapting the displayed date range

Additionally, the displayed date range can be reduced, for example in order to monitor development over a specific period in greater detail.

- Click the **Zoom In** button.  
The entire development, from activation of the diagram to the current date, is no longer displayed. Each time you click on this button, the displayed date range gets smaller.
- Click on the **Shift Forward** button to shift the start date of the displayed range forwards to the current date.
- To shift the start date of the displayed range back to the chart's activation date, click on the **Shift Back** button.
- In the same way, click on the **Zoom Out** button to enlarge the displayed date range.
- Clicking the **Reset** button resets the zooming, i.e. the standard view is displayed.

#### Undocking the charts from the browser window

By default, the charts are displayed directly in the browser window underneath the relevant title bar. Alternatively, each chart can also be displayed in a separate window.





**Note:**  
Decoupling from the website is **not** available for Internet Explorer. This button is missing in such cases.

- Click on the **Undock** button for the required chart. The chart will now be displayed in a separate window, and the message "Chart is undocked" will appear in the main window underneath the title.



Fig. 43: Undocked chart

The separate windows of the charts can be moved and resized independently of the CMC III PU 19" Edition website itself. This function may be used for multiple charts, allowing you to create a complete overview on the screen of your PC.

- In a separate window, click on the **Dock** button or simply close the window to display the chart underneath the title bar in the main window once again.

### 8.13.3 Evaluating the CSV files

The diagrams are generated from the data from CSV files. This data may be downloaded from the CMC III PU 19" Edition via FTP and then evaluated separately (e.g. using a spreadsheet program like Excel).

The maximum size of a CSV file is 4 GB. Once this limit has been reached, the CSV file is saved as a backup file, and a new CSV file is automatically created. Once this second file too reaches the 4 GB limit, the first backup file is deleted when a new backup file is generated.

#### Downloading the CSV files

- Establish a connection between a PC and the CMC III PU 19" Edition (see section 9.1 "Establishing an FTP connection").
- In the left-hand subwindow (PC), switch to any folder in which you want to store the CSV files.
- In the right-hand subwindow (CMC III PU 19" Edition), switch to the "download" folder and then the sub-folder "usb-stick/records".
- Right-click the required CSV file and select "Download".

The CSV files are named according to the convention "chart.##.json.csv" whereby "##" is the number of the respective chart ("01" to "16").

#### Reading the CSV files into Excel

Below, we describe how a CSV file can be read for evaluation in Excel.



**Note:**  
In principle, the CSV files could also be read in another spreadsheet program. However, the procedure may vary.

- First generate an empty spreadsheet in Excel.
- In Excel, select the CSV file you wish to read by clicking on **Data > From text** and then follow the Text Import Wizard.
- Please note the following settings:

##### Step 1 of 3:

- Data type: Delimited
- Start import at row: 1
- File origin: Windows (ANSI)

##### Step 2 of 3:

- Delimiters: Tab

##### Step 3 of 3:

- Column data format: Standard

- In step 3 of 3, click on the **Other...** button to define the decimal separators (Setting "Dot") and thousands separators (setting "Comma") used in the CSV file. Depending on the country-specific settings, these may already be preset by default.



**Note:**  
If other separators are set for the numerical data, the time specified in column 2 may not be converted correctly later.

Display of the CSV files is subdivided into three zones:

- **Zone 1:** Line 1 displays general information about the chart as per the configuration (e.g. name of chart, description, start date).
- **Zone 2:** Separated by an empty line, from line 3 onwards, information about the variables recorded in the chart is given. The first two columns are particularly important in this connection.
  - Column 1:** Name of variable. These names are used as the "Title" in zone 3.
  - Column 2:** Precise description of the measurements recorded.
- **Zone 3:** Again separated by an empty line, finally, the time stamp and all recorded measurements are given.
  - Column 1 (Time0):** Unix time (number of seconds that have elapsed since 1 January 1970). This time cannot be used in Excel (or at least not easily).
  - Column 2 (Time1):** Time specification that may be used in Excel.

# 8 Operating the CMC III PU 19" Edition

EN

– **Columns 3 to max. 8:** The actual measurements are given in these columns.

The time specified in column 2 must be formatted as follows in order to convert it into a readable format:

- Highlight all the times in column 2.
- Right-click the highlighted range, and in the context menu select the entry "Format cells".
- In the "Format cells" dialogue, on the "Numbers" tab in the "Category" column, and select the entry "Special".
- Enter the number format "DD.MM.YYYY hh:mm:ss" in the "Type" box.

The time stamp will then be output as a date and time and can therefore be used, for example, in a diagram.

## 8.14 Dashboards



Note:

Changes made in the dashboards described below can be made only by users who belong to the "admins" user group.

As many as 12 flexibly configurable websites can be created on the **Dashboards** tab. This makes it possible to define different views for different purposes and display only the required information.



Note:

After the **direct** login to a dashboard, the user is **not** logged out automatically after the specified time. The user remains logged in to the CMC III PU 19" Edition while the dashboard is open.

### 8.14.1 Basic settings

- Select the **Dashboards** tab in the right-hand area of the screen page.

The following information is displayed:

Parameter	Explanation
Name	Dashboard name.
Description	Extended description of the dashboard.
Enabled	Flag whether the dashboard can be enabled ("Yes") or not ("No").

Tab. 82: Dashboards tab

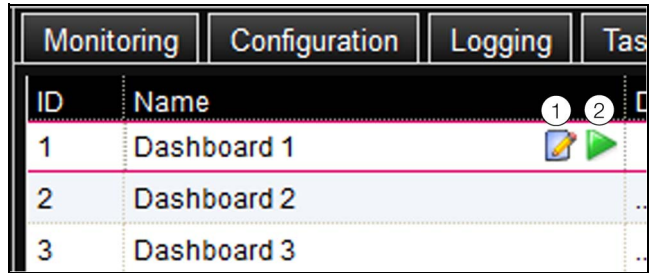


Fig. 44: Calling the "Dashboard Configuration" dialogue

#### Legend

- 1 "Edit" symbol
- 2 "Start" symbol

The above information can be changed in the "Dashboard Configuration" dialogue.

- Move the mouse cursor to the line of the dashboard whose information you want to change.

An "Edit" symbol appears at the end of the "Name" column and the cursor changes to the "Hand" symbol. If the dashboard can be enabled (the "Enabled" parameter has the value "Yes"), the green "Start" symbol suffixed to the "Edit" symbol can be used to enable the dashboard.

- Click the "Edit" symbol.  
The "Dashboard Configuration" dialogue opens.
- Enter the required values for the named parameters.
- Confirm your entry by clicking the **Save** button.  
Clicking the **Clear** button resets all inputs to their default values.

### 8.14.2 Configuring a dashboard

The contents of a dashboard must be configured (once). This requires that the dashboard is first enabled and then started.

- Check whether the "Yes" entry is displayed in the "Enabled" column for the dashboard to be configured.
- If this is not the case, first enable this setting in the "Dashboard Configuration" dialogue (see section 8.14.1 "Basic settings").
- Move the mouse cursor to the line of the dashboard to be configured.  
A "Start" symbol appears next to the "Edit" symbol at the end of the "Name" column and the cursor changes to a "Hand" symbol.
- Click the "Start" symbol.  
The "Auto-Logout is Enabled" dialogue opens.
- Read the notification text and click the **OK** button to confirm.  
A new browser window opens with the actual dashboard. The dashboard is empty for the first call because no boards have yet been selected.



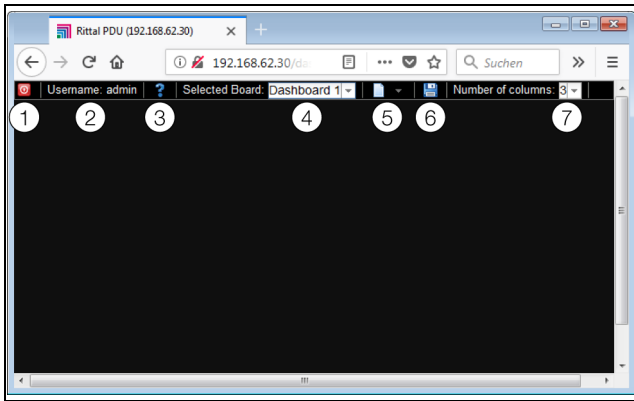


Fig. 45: Dashboard header line

**Legend**

- 1 **Logout** button
- 2 "Username" column
- 3 Call the "Board Details" dialogue
- 4 Dashboard selection
- 5 "Edit" symbol for selecting a dashboard component
- 6 "Save" symbol
- 7 Number of columns



**Note:**  
The **Logout** button is displayed only when the login is made directly to a dashboard (see section 8.14.4 "Calling a dashboard").

The following information is displayed in the header line:

Parameter	Explanation
Username	Name of the user currently logged in.
"?"	Open the "Board Details" dialogue in which the basic settings of the dashboard are displayed.
Selected Board	Select the dashboard from a dropdown list. The names of the dashboards that can be enabled are displayed.
"Edit" Symbol	Select the components to be displayed on the dashboard.
"Save" Symbol	Save the dashboard. The configured components and the window layout are displayed for each login as they were configured at the time of saving. The actual display in a window is not saved.
Number of Columns	The number of columns in which the information to be displayed can be assigned (maximum nine columns).

Tab. 83: Dashboard header line

**Selectable representations**

The representations to be displayed on the dashboard are selected with the "Edit" symbol. The following representations can be selected (depending on the type

and number of components connected to the CMC III PU 19" Edition).

Parameter	Explanation
Visualizations	Graphical representations, such as the live stream of a connected webcam.
Device Tree	Navigation area with all connected components (see section 8.2.2 "Left-hand navigation area").
Logging View	<b>Logging</b> tab (see section 8.10 "Logging").
Message View	Currently pending messages (see section 8.2.4 "Message display").
Charts	Created charts (see section 8.13 "Charts").
Variable List	Current value of individual variables, such as the status of the digital input.

Tab. 84: Selectable representations

**Adding representations to a dashboard**

- Ensure that the dashboard to which you want to add information is selected in the "Selected Board" column.
- Select in the "Number of Columns" column the number of columns into which the dashboard should be divided.



**Note:**  
The number of columns can also be increased later. To reduce the number of columns, the columns to be deleted must not contain any representations (e.g. in column 3 when the dashboard should be reduced to two columns).

- Click the "Edit" symbol and select successively all representations to be displayed on the dashboard. Each representation newly added to the dashboard is initially always added at the end of the first column. It can be moved from there to another location within the dashboard.

**Moving representations on a dashboard**

Representations are moved with the "drag-and-drop" principle.

- Place the mouse cursor on the title line of a representation. The mouse cursor changes to a cross arrow.
- Press the left mouse key, keep it pressed and drag the representation to the required position, e.g. into a different column.

Before being stored, the position is shown with a dashed line; the other representations are moved down correspondingly.

It is not possible to place a representation totally free on the dashboard. If a representation is set at the lower

# 8 Operating the CMC III PU 19" Edition

EN

edge of a column, it will be moved automatically as far as possible upwards, to the upper edge of the dashboard or to the lower edge of a representation already placed there.

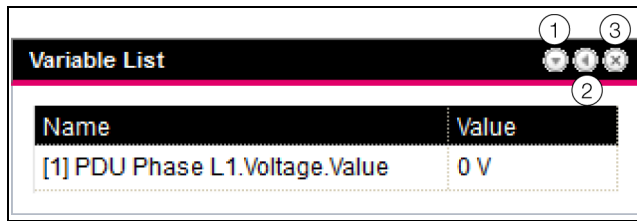


Fig. 46: Symbols in representations

### Legend

- 1 Open and close representations
- 2 Adapting a list with variables
- 3 Removing representations

### Expanding and collapsing representations

Every representation can be expanded and collapsed via the title line. The representation, however, remains available, only the details are hidden.

- Click the "Collapse" symbol in the title line of a representation.  
The representation on the title line is reduced.
- To redisplay the representation: Click the "Expand" symbol in the title line.  
The representation reappears with all information; representations below on the dashboard are moved correspondingly.

### Adapting a list with variables

Multiple, separate representations with individual variables can be created. Alternatively, multiple variables can also be displayed in a representation.

- Click the "C" symbol in the title line of a "Variable List" type representation.  
The "Select Variables" dialogue is displayed.
- Enter a meaningful name for the variable list in the "Title" field.
- To change or delete an existing variable, click the line in which it is listed.  
The "Variable Selection" dialogue is displayed.
- Select in the "Device" field the component whose variable value you want to display.
- Select in the "Variable" field the variable you want to display.
- Alternatively, select the "None" entry in the "Device" field if you want to delete the variable from the representation.
- To add another variable, click the line with the "None" entry.  
The "Variable Selection" dialogue also opens in which you can select the variable to be displayed.
- Finally, click the "OK" button in the "Select Variables" dialogue to transfer the variable list to the representation.



### Note:

Changeable variable values can also be changed directly from the dashboards, provided you have the appropriate user rights.

### Changing the column widths

Within certain limits, the width of the individual columns can be changed. In particular for graphical representations, a minimum width is prescribed for the columns.

- Place the mouse cursor between two columns.  
The mouse cursor changes to a double arrow and the separator line between the columns is represented with a line.
- Press the left mouse key, keep it pressed and drag the separator line to the required position.  
If the minimum column width is undershot, the width is automatically changed appropriately.

### Removing representations

Every representation can be removed completely from the dashboard via the title line.

- Click the "X" symbol at the far right in the title line of a representation.  
The representation is removed directly from the dashboard without a prompt.

### 8.14.3 Saving a dashboard

To retain all changes permanently to a dashboard in accordance with section 8.14.2 "Configuring a dashboard", the current view must be saved.

- Click the "Save" symbol in the header line of the dashboard.  
The "Success" dialogue appears when the dashboard has been saved.
- Click the "OK" button in the "Success" dialogue.  
The previously saved dashboard is displayed again.



### Note:

- The current display of the individual components is not saved when a dashboard is saved. For example, the "Device Tree" initially appears collapsed for each call down to the "Real Devices" level.
- When a dashboard is saved, all other dashboards are also saved automatically.
- If (even different) dashboards are being edited concurrently by multiple users, the changes of all other users will be lost when saved (on all dashboards).

### 8.14.4 Calling a dashboard

After a login, similarly to configuring, a dashboard can be called on a website (see section 8.14.2 "Configuring a dashboard"). In this case, the dashboard is opened in an **additional** browser window; the actual website remains open, even leaving the dashboard. The **Logout** button is then **not** displayed in the header line.

Alternatively, the login can be made directly to a dashboard when establishing an HTTP connection (see section 7.3.2 "Establishing the connection via Standard-IP").

- After entering the login information, click the **Login to Dashboard** button.

The dashboard view consisting only of the header line is displayed in the browser window.

- Select in the "Select Dashboard" field the dashboard to be displayed.

The "Select Dashboard" column can be used to switch at anytime between the dashboards that can be enabled. If changes have been made to the most recently selected dashboard that have not yet been saved, the "Dashboard was Modified" dialogue opens when the dashboard is switched.

- Click the **Yes** button if you do not want to save the changes and switch directly to the newly selected dashboard.
- Click the **No** button to return to the still unsaved dashboard and then save it (see section 8.14.3 "Saving a dashboard").

#### 8.14.5 Calling the website via a mobile terminal

The dashboard stored in the configuration is used to represent the website of the CMC III PU 19" Edition on a mobile terminal (see section 8.6.9 "Mobile").

- Call in the browser of your mobile terminal the address of the CMC III PU 19" Edition, similarly as for a PC (see section 7.3.2 "Establishing the connection via Standard-IP").
- Login with your user data.

The dashboard that was stored for the mobile terminals opens.



#### Note:

- If multiple variable lists with many variables are defined on the dashboard, delays when calling the mobile website can occur. This is independent of the mobile terminal power.
- If a dashboard is changed, all users logged in via a mobile terminal will be logged out automatically.

#### 8.14.6 Exiting a dashboard

A dashboard is exited by closing the browser window. If the dashboard view was enabled directly during the login by clicking the **Login to Dashboard** button, the **Logout** button is shown at the left of the "Username" column in the header line.

- Click the **Logout** button to log out completely from the CMC III PU 19" Edition.  
To prevent an inadvertent logout from the website, this is not possible when the dashboard view was called similarly to configuring a dashboard.

## 9 Updates and data backup

FTP or SFTP access to the CMC III PU 19" Edition is required in order to perform software updates and for data backup. For this reason, FTP /SFTP access should be blocked as a general rule and only briefly activated to perform these tasks (see section 8.5.4 "File transfer configuration").

### 9.1 Establishing an FTP connection

To establish an FTP connection, you will need the IP address of the CMC III PU 19" Edition. If this address is not known, because, for example, the DHCP function is activated, the IP address may be displayed directly on the CMC III PU 19" Edition display (see section 7.2 "Operating using the control components on the front"). An appropriate FTP client program is also required to establish an FTP connection (or SFTP connection). Rittal recommends the use of FileZilla.

- Install an FTP client program on the computer you wish to use to establish the FTP connection to the CMC III PU 19" Edition.
- Establish the network connection between the CMC III PU 19" Edition and the computer.
- Ensure that the CMC III PU 19" Edition and the computer have the same address range.
- Enter the appropriate access data in the FTP program. The following access data is stored by default:
  - IP address: 192.168.0.200
  - Username: admin
  - Password: admin
  - Port: 21 (FTP) or 22 (SFTP)
- Start the connection between the computer and the CMC III PU 19" Edition, remembering to activate the setting: "Bypass proxy settings".

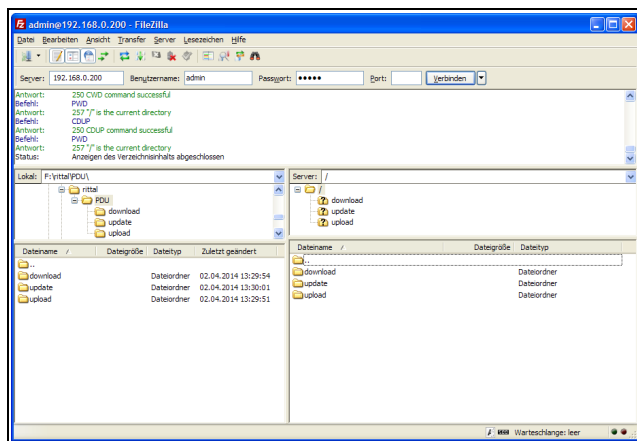


Fig. 47: FileZilla

The left-hand subwindow now shows the folder structure and the content of the PC; the right-hand subwindow contains the equivalent content of the CMC III PU 19" Edition.

## 9.2 Performing an update

### 9.2.1 Notes for performing an update

Observe the following security notes for performing an update.



Note:

The user is responsible for performing the update in the associated network environment.

Before starting an update, ensure that the security application connected to the CMC III PU 19" Edition can be interrupted for the duration of the update.

Ensure that you have access to the CMC III PU 19" Edition, because, for example, you will need to check the current status on-site when carrying out the update.

During the update process, the power supply to the CMC III PU 19" Edition must not be interrupted under any circumstances.

If the update is performed using the USB connection, under no circumstances must the USB device be removed during the update process.

None of the connected components may be disconnected from the CMC III PU 19" Edition during the update process.

Under some circumstances, an update can reset the CMC III PU 19" Edition settings to their factory state.

Alongside the two options for performing an update via USB or via (S)FTP described in this section, it can also be implemented via the website of the CMC III PU 19" Edition (see section 8.6.7 "Firmware Update").

### 9.2.2 Downloading the software update

A software update for the CMC III PU 19" Edition can be downloaded from the Internet address specified in section 15 "Customer service addresses". The update will be provided as a tar archive.

- Download the current software version from the website and save it on your computer.

### 9.2.3 Update via USB

Observe the following notes for updating the CMC III PU 19" Edition via USB:

- The USB storage medium used for the update must be formatted as FAT.
- In addition to the file for the software update, any other data may be present on the USB storage medium.

Proceed as follows to perform the update:

- Copy the downloaded tar file into the root directory of the USB storage medium.
- Start the CMC III PU 19" Edition if necessary.
- Wait until the multi-LED on the front is continuously illuminated green, orange or red or is flashing.
- Then insert the USB storage medium into the appropriate USB slot on the front of the CMC III PU 19" Edition.

The update process starts automatically after a few seconds. This is indicated by a red flashing of the multi-LED (so-called heartbeat, alternately long and short).

If the current software version (or a later version) is already installed on the CMC III PU 19" Edition, no update will be performed.

Depending on the number of connected sensors that are also updated, the complete update process takes approx. 15 minutes.

### 9.2.4 Update via FTP or SFTP

Proceed as follows to perform the update:

- Establish a connection between a PC and the CMC III PU 19" Edition (see section 9.1 "Establishing an FTP connection").
- Switch to the "update" folder in the right-hand subwindow (CMC III PU 19" Edition).
- In the left-hand subwindow (PC), switch to the folder in which you stored the update file previously.
- Right-click the update file and select the "Upload" action.

The update process starts automatically after a few seconds. This is indicated by red flashing of the multi-LED (so-called heartbeat, alternately long and short).

### 9.2.5 Finalizing the update

The system reboots automatically when the CMC III PU 19" Edition update has finished. On completion of booting, the LED on the front indicates the CMC III PU 19" Edition status: green, orange or red.

This may be followed by an update of the connected sensors. During this operation, the status LED of the sensors flashes fast, while the status LED of the CMC III PU 19" Edition flashes white. The sensor currently being updated also flashes purple.



Note:

Under no circumstances may the sensors be disconnected from the CMC III PU 19" Edition during the update.

The update of the CMC III PU 19" Edition is complete when the following conditions have been fulfilled:

1. The LED on the front of the CMC III PU 19" Edition is illuminated according to its status: green, orange or red.
2. The LEDs on the bus connection of the sensors are illuminated green.

3. The multi-LEDs of the sensors behind the front cover flash blue.

The progress of the update is logged in the "\*.status" file. Depending on the type of update process, this file is located either in the root directory of the USB storage medium or in the Update folder of the CMC III PU 19" Edition. The status file is a text file that can be opened with an editor or a text processing program.

- For an update via (S)FTP or via the website: Transfer this file using an FTP connection from the Update folder of the CMC III PU 19" Edition to a PC.
- For an update via USB: Copy instead from the USB storage medium to a PC.
- Open the file with an editor and check whether the update was performed successfully or whether error messages have been issued.



Note:

Finally, press "Ctrl"+"F5" in the browser to reload the complete website from the CMC III PU 19" Edition. All the changes will now be effective.

### 9.3 Performing a data backup

Rittal recommends regular data backups of the CMC III PU 19" Edition configuration.

Proceed as follows to perform a data backup:

- Establish an FTP connection between a PC and the CMC III PU 19" Edition (see section 9.1 "Establishing an FTP connection").
- In the left-hand subwindow (PC), switch to any folder in which you want to store the data backup.
- Switch to the "download" folder in the right-hand subwindow (CMC III PU 19" Edition).
- Right-click the "cmcllsave.cfg" file (from software version V3.11.00 onwards) and select the "download" action.

The settings and configurations of all connected components as displayed currently for the individual sensors on the **Monitoring** (see section 8.3 "Monitoring index tab") and **Configuration** (see section 8.4 "Configuration index tab") tabs are stored in this file.

For a second CMC III PU 19" Edition, this configuration file can likewise be dragged to the upload directory in the same way. All general settings (other than the TCP/IP settings) are then taken from this file. If the same sensors, etc. are also installed in the same sequence on the second CMC III PU 19" Edition, all limit values of these sensors are also transferred.



Note:

It is not possible to transfer a configuration file that was saved from a CMC III PU 19" Edition with an older software version to a CMC III PU 19" Edition with a newer software version.

## 9.4 Saving additional information locally

### "Download" folder

Just as with a data backup, further files can be downloaded onto a PC from the "download" folder. These are text files with the following content:

1. "Devices.cmc3": The configurations of all connected components as displayed for the individual sensors on the **Monitoring** (see section 8.3 "Monitoring index tab") and **Configuration** (see section 8.4 "Configuration index tab") tabs.
2. "Logging.cmc3": Complete, i.e. unfiltered log information for the CMC III PU 19" Edition (see section 8.9.4 "SMS Receivers").
3. "cmcllsave.cfg": Settings and configurations for all connected components (see section 9.3 "Performing a data backup").
4. "syslog.cmc": File for transferring the syslog information.

■ If necessary, rename the files on the PC after downloading, to uniquely identify the various different file versions.

### "Download/docs" folder

Further files can be downloaded from the "download/docs" folder. Text files are also involved:

1. "Configuration.cmc3": Configuration of the complete "Processing Unit" system as can also be displayed on the **Configuration** tab (see section 8.4 "Configuration index tab").
2. "Configuration.cmc3.history": List of all configuration changes. Every change is identified with the revision version as well as with the date and time of the predecessor version and the current version.
3. "OID\_List.cmc3": List of all OIDs of the variables of the CMC III PU 19" Edition and connected components as required for polling via SNMP.
4. "OID\_List.changes": List of changes to all OIDs during the last update.
5. "OID\_List.old": List of changes to all OIDs before the last update.
6. "sysinfo.txt": Information about the software versions of both file systems in the CMC III PU 19" Edition, and which of the two file systems is active.
7. "system.log": Log information about all system actions such as configuration changes.
8. "ModbusMap.cmc3": List of all variables that can be queried via Modbus.

### "Download/docs/Configuration.cmc3.repository" folder

This folder additionally contains individual files for all the configuration changes implemented (patch files).

### "Download/docs/lists" folder

The "download/docs/lists" folder contains CSV files, which may be viewed after downloading, e.g. with a spreadsheet program such as Excel:

1. "cmcllDevList.csv": List of all sensors and units connected to the system.
2. "cmcllVarList.csv": List of all variables provided by the system.

### "Download/usb-stick" folder

If you have connected an external storage medium (USB stick) to the CMC III PU 19" Edition, the data from charts (see section 8.13 "Charts") will be recorded there.

■ Download the data from these directories for further evaluation.

## 10 Inspection and maintenance

### 10.1 Safety instructions

- Prior to performing any work on the CMC III PU 19" Edition, the unit must be disconnected from the power supply and protected against being switched on again.
- The unit does not need to be opened and this is therefore prohibited.

### 10.2 Required work

#### 10.2.1 Inspection

The CMC III PU 19" Edition must be checked regularly for complete and correct functioning. Rittal recommends a regular function test when required, but at least once a year.

#### 10.2.2 Servicing

Because the unit is largely maintenance-free, maintenance of the unit is limited to the "inspection" and "cleaning" tasks.



# 11 Storage and disposal

---

EN

## 11 Storage and disposal

### 11.1 Storage

If the device is not used for a long period, Rittal recommends that you disconnect it from the mains power supply and protected from damp and dust.

### 11.2 Disposal

Since the CMC III PU 19" Edition consists primarily of an aluminium section plus electronics (circuit board, cabling), the device must be passed on to the electronic waste recycling system for disposal.

## 12 Technical specifications

### 12.1 General technical specifications

Technical specifications		
Input voltage range (L – N)	230 V AC, 50...60 Hz	
No. of phases	1	
Inherent supply	Integral long-range SMPS	
Power consumption	approx. 10 W	
Redundant power supply via PoE	Yes, only on the ETH 1-connection	
Connector, input	IEC 60 320: C14	
Length of connection cable	2 m	
Connection cable type	H05-VV	
Dimensions (width x height x depth)	450 mm x 44 mm x 144 mm	
Material	Aluminium, anodised in RAL 9005 (black)	
Operating hours meter	Yes	
Display	TFT-Display, RGB 128 x 128 pixels	
Network interface	2 x RJ 45, integral Web server	
Supported protocols	HTTP, HTTPS, SSL, SSH, NTP, Telnet, TCP/IP v4 and v6, DHCP, DNS, NTP, Syslog, SNMP v1, v2c and v3, FTP/SFTP (update/file transfer), e-mail forwarding (SMTP), LDAP, OPC-UA, Modbus/TCP, RCCMD (Server Shutdown)	
User administration including rights management	Yes	
LDAP(S)/Radius/Active Directory connection	Yes	
USB port for firmware update and data logging functions	Yes	
CAN bus interface	RJ 45, for connecting sensors	
CAN sensor types	see section 13 "Accessories"	
Max. number of sensors	up to 16 sensors	
Plug & play drivers in the Rittal RiZone DCIM software	Yes	
Conformity	CE	
Standards	Safety	EN 62 368
	EMC	EN 55 022/B, EN 61 000-4-2, EN 61 000-4-3, EN 61 000-6-2, EN 61 000-6-3
Low Voltage Directive	2014/35/EU	
EMC Directive	2014/30/EU	
MTBF (at 40 °C)	70,000 hours	
Protection category	IP 20 (IEC 60 529)	
Protection category	1	
Overvoltage category	II	

Tab. 85: General technical specifications

# 12 Technical specifications

EN

<b>Technical specifications</b>	
Contamination level	2
Storage temperature	-20 °C...+70 °C
Ambient temperatures	+5 °C...+45 °C
Ambient humidity	10...95% rel. humidity, non-condensing
Warranty	24 months

Tab. 85: General technical specifications

## 13 Accessories

Additional sensors may be connected to the CMC III PU 19" Edition for monitoring the ambient conditions in the IT rack, so that alarms can be triggered if limits are exceeded. The following list shows all available sensors with the relevant Model No. Regardless of the sensor type, the maximum number of sensors is limited to sixteen per CMC III PU 19" Edition. Apart from the sensor itself, a sensor connection cable is also required and must be ordered separately. This is available in various lengths.

Model No. DK	Accessories
7030.110	Temperature sensor
7030.111	Temperature/humidity sensor
7030.120	Infrared access sensor
7030.130	Vandalism sensor
7030.140	Analogue airflow sensor
7030.150	Analogue differential-pressure sensor
7030.190	Universal sensor
7030.400	Smoke detector
7030.430	Leak sensor
7030.440	Leak sensor, 15 m
7030.100	CAN bus sensor
7030.200	CAN bus access
7030.202	Access control
7030.500	Door control module
7030.040	I/O unit
7030.050	Power unit
7030.571	CMC III LTE unit
7338.121	DET AC Plus III master extinguisher system
7338.321	DET-AC III slave extinguisher system
7338.221	EFD III early fire detection
7859.050	PSM measurement bar 2 x 16 A
7859.053	PSM measurement bar 1 x 32 A
7859.410	PSM measurement module 8 x C13
7859.420	PSM measurement module 4 x C19/2 x C13
7859.430	PSM measurement module 4 x earthing pin / 2 x C13

Tab. 86: Accessories

The following CAN bus connection cables from the CMC III accessories range may be used:

Model No. DK	Accessories
7030.090	CAN Bus cable (2 x RJ 45) Length: 0,5 m
7030.091	CAN Bus cable (2 x RJ 45) Length: 1 m
7030.092	CAN Bus cable (2 x RJ 45) Length: 1,5 m
7030.093	CAN Bus cable (2 x RJ 45) Length: 2 m
7030.094	CAN Bus cable (2 x RJ 45) Length: 5 m
7030.095	CAN Bus cable (2 x RJ 45) Length: 10 m

Tab. 87: CAN Bus connection cable

## 14 Glossary

### Hysteresis:

If one of the upper limit values is exceeded (SetPtHigh) or one of the lower limit values is undercut (SetPtLow), a warning or an alarm is issued **immediately**. For a hysteresis of x%, the warning or the alarm will not clear until an upper limit value is undercut or a lower limit value is exceeded by a difference of  $x/100 * \text{limit value}$  to the limit value.

### MIB (Management Information Base):

The MIB was developed for reading and editing network elements. The MIB for SNMP was defined in RFC 1157; the MIB-II for TCP/IP was defined in RFC 1213. The MIBs are registered as OID with the IANA (Internet Assigned Numbers Authority). Once an object has been assigned to an OID, the meaning may no longer be changed. Any overlapping with other OIDs is prohibited.

### SNMP (Simple Network Management Protocol):

The SNMP is a simple network management protocol based on TCP/IP. It was developed to allow network components to be monitored and controlled at a central management station.

### Trap:

Trap is the unrequested sending of SNMP messages.

### Trap receiver:

The trap receiver is the recipient of SNMP messages.

## **15 Customer service addresses**

For technical queries, please contact:

Tel.: +49(0)2772 505-9052

E-mail: [info@rittal.com](mailto:info@rittal.com)

Homepage: [www.rittal.com](http://www.rittal.com)

For complaints or service requests, please contact:

Tel.: +49(0)2772 505-1855

E-mail: [service@rittal.de](mailto:service@rittal.de)

# Rittal – The System.

Faster – better – everywhere.

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

You can find the contact details of all Rittal companies throughout the world here.



[www.rittal.com/contact](http://www.rittal.com/contact)

RITTAL GmbH & Co. KG  
Auf dem Stuetzelberg · 35745 Herborn · Germany  
Phone +49 2772 505-0  
E-mail: [info@rittal.de](mailto:info@rittal.de) · [www.rittal.com](http://www.rittal.com)

03.2023 / D-0000-00003195-00-EN

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP

