


# System accessories

## Base

### Base/plinth components, front and rear / Base/plinth trim panels, side

Stainless steel for TS, CM Catalogue 33, page 543/544

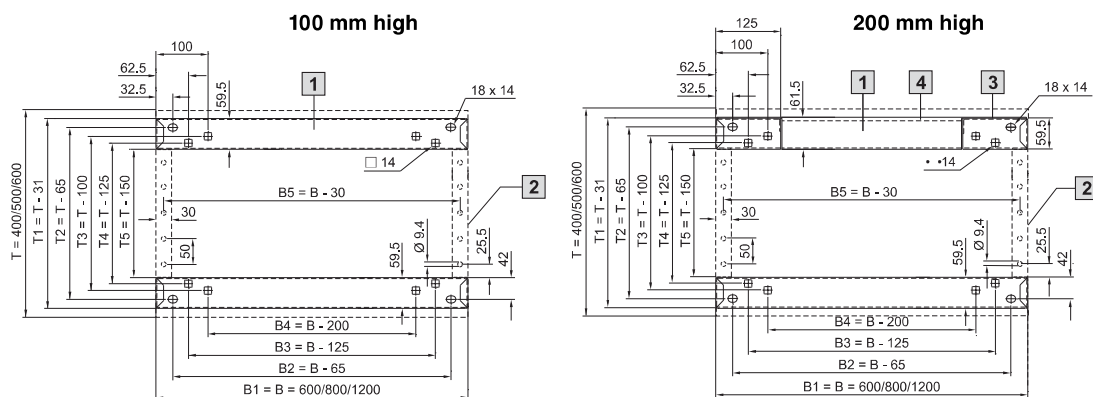

**1** Base/plinth components front/rear

**2** Base/plinth trim panel, side

**3** Base/plinth corner piece

**4** Trim panel, removable

Description of the hole patterns

B/T = Enclosure dimensions

B1/T1 = External dimensions

B2/T2 = For screw-fastening in the thread of the enclosure corner piece from below

B3/T3 = For screw-fastening with captive nuts to the enclosure base from below or above


All holes (B2 – B4/T2 – T4) may be used for screw-fastening to the base.

B = Width

T = Depth

### Base/plinth, complete


Sheet steel for AE, TP, ES Catalogue 33, page 551

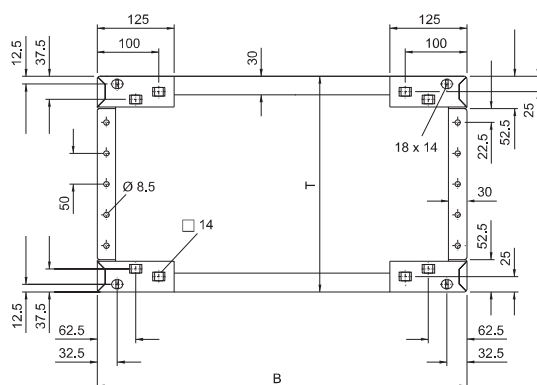

#### Base/plinth, 100 mm high



#### Base/plinth, 200 mm high

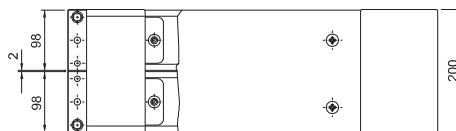

#### AE

T = Enclosure depth – 21 mm

B = Enclosure width

#### TP, ES

T = Enclosure depth – 50 mm

B = Enclosure width