



TS SLIDE-IN PARTITION WALL INSTALLATION INSTRUCTIONS

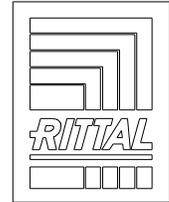


PARTITION WALL INSTALLATION

- 1) INSTALL THREE BAYING BRACKETS, P/N 8800.490 (NOT INCLUDED), ON THE VERTICAL FRAME MEMBERS AT THE REAR OF THE CABINET.
- 2) PLACE TOP FLANGE OF PARTITION WALL ON FLAT SURFACE OF THE FRAME DIRECTLY BELOW THE ANGLED LEGS. SEE DETAIL A
- 3) SLIDE PARTITION WALL THE FULL LENGTH BETWEEN THE FRAMES
- 4) INSTALL REMAINING BAYING BRACKETS ON THE VERTICAL FRAME MEMBERS AT THE FRONT OF THE CABINET TO CAPTURE PARTITION WALL.

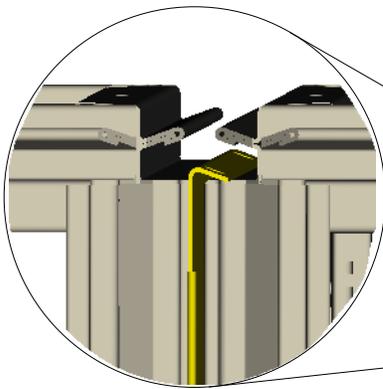

DETAIL A

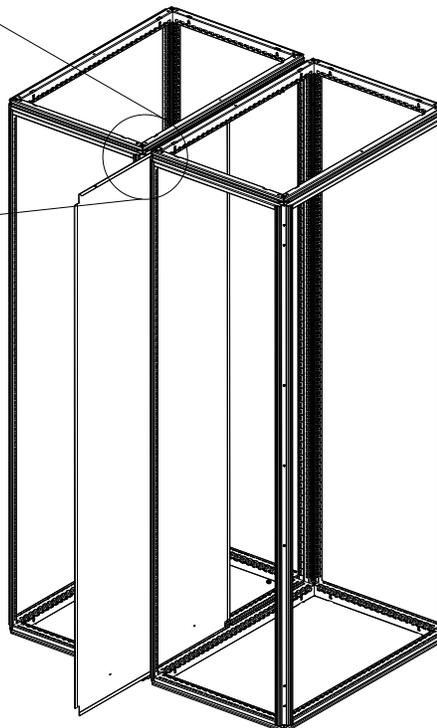

DETAIL B


INSTALLING PARTITION WALL FOR SHIPMENT ON ENCLOSURE

LOOKING AT THE FRONT OF THE ENCLOSURE, THE PARTITION WALL MUST BE INSTALLED ON THE LEFT SIDE


- 1) USING DIMENSIONS IN TABLE 1, LOCATE RETAINER ON DEPTH FRAME MEMBERS. USING A T25 TORX BIT, FASTEN RETAINER TO TOP AND BOTTOM FRAME MEMBERS USING THE SUPPLIED M5.5 X 13 TAP SCREWS. SEE DETAIL E
- 2) INSTALL PARTITION WALL ON FRAME. REFER TO DETAIL A
- 3) USING A T30 TORX BIT, FASTEN PARTITION WALL TO RETAINER USING SUPPLIED M6X10 CAP SCREW. SEE DETAIL F

TABLE 1

CABINET DEPTH	A	
900	394.5 MM	15.5 IN
1000	444.5 MM	17.5 IN
1050	469.5 MM	18.5 IN
1200	544.5 MM	21.5 IN

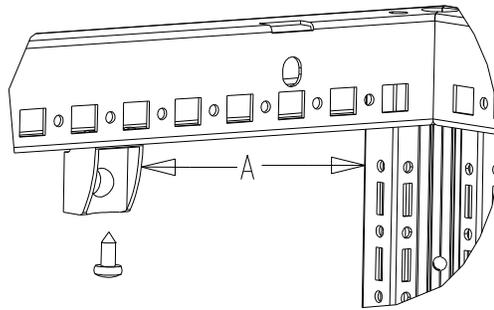


TOP
RETAINER

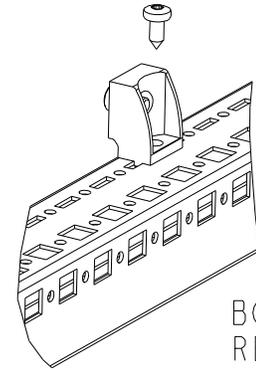


BOTTOM
RETAINER

DETAIL E

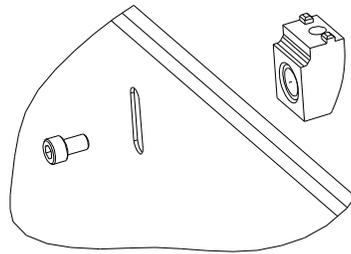

TOP
RETAINER

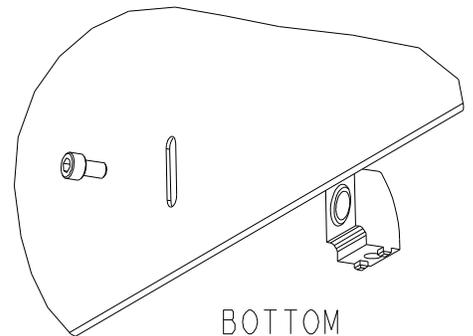

BOTTOM
RETAINER

DETAIL F

GROUNDING COMPONENTS	
QTY	DESCRIPTION
1	5.5 X 13 TORX PAN HD TAP SCR
1	M6 PAINT CUTTING WASHER
1	WASHER, M6.4 FLAT
1	M8 X 16 SOC HD SCREW
1	M8 PAINT CUTTING WASHER
1	WASHER, M8.2 FLAT
1	M8 CAPTIVE CLIP NUT
1	GROUND STRAP M6-M8
2	GROUNDING LABEL

GROUNDING INSTRUCTIONS

1. FIT THE M6 PAINT CUTTING WASHER, THE M6 RING TERMINAL END OF THE GROUND WIRE AND THE M6 FLAT WASHER ON THE M5 SCREW.
2. USING A T25 TORX BIT, INSTALL THE M5 SCREW IN ONE OF THE 4.5MM DIA HOLES AT THE BOTTOM OF THE PARTITION WALL.
3. INSTALL THE SUPPLIED CAGE NUT IN ONE OF THE RECTANGULAR OPENINGS IN THE FRAME.
4. FIT THE M8 PAINT CUTTING WASHER, THE M8 RING TERMINAL END OF THE GROUND WIRE AND THE M8 FLAT WASHER ON THE M8 SCREW.
5. USING A 5MM ALLEN BIT, INSTALL THE M8 SCREW IN THE CAGE NUT.
6. APPLY THE GROUNDING LABELS TO THE PARTITION WALL AND FRAME NEXT TO THE CONNECTIONS.