



Import VX25-files at Perforex-Machines

1. Select Input and choose ASCII-Import

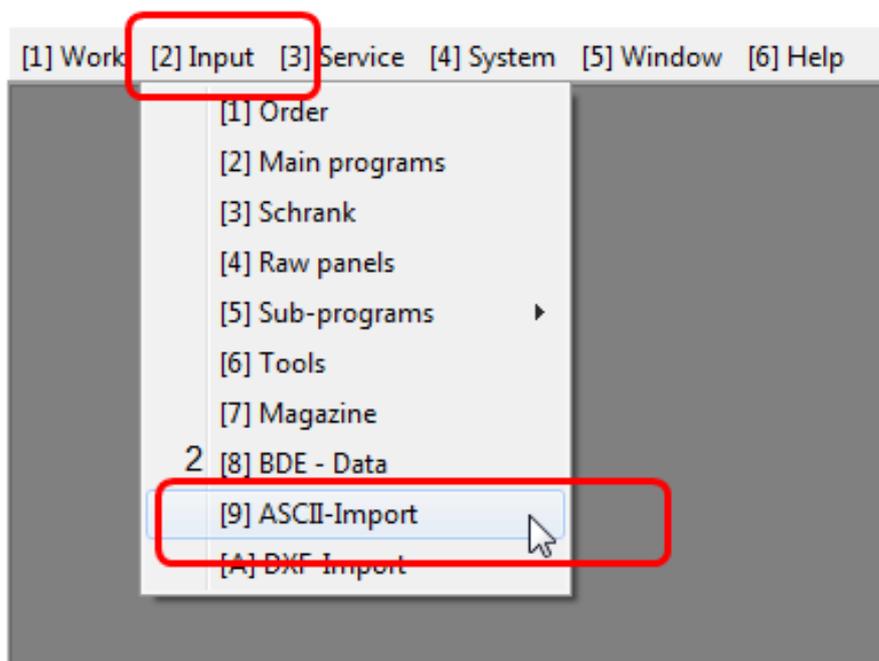


2. Change the conversion kind of „Import single files“. Select register with click on the button with the two points --> A new window opens.

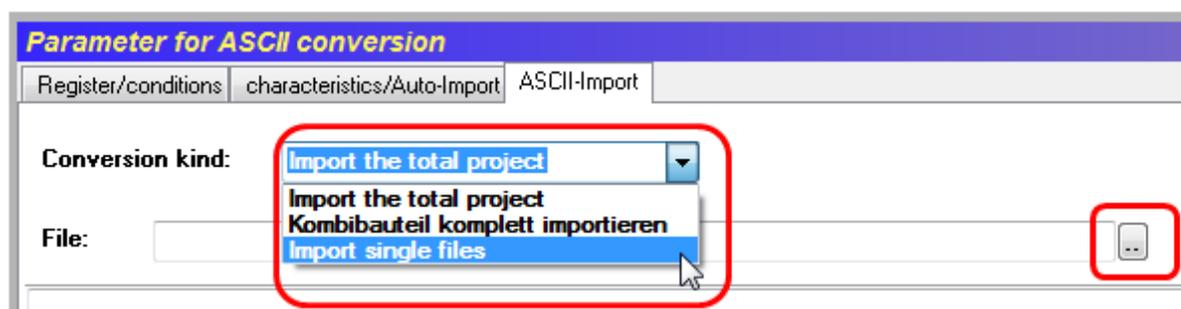

Import VX25-Dateien an Perforex-Maschinen

Choose the directory where the VX25.PRP file is stored

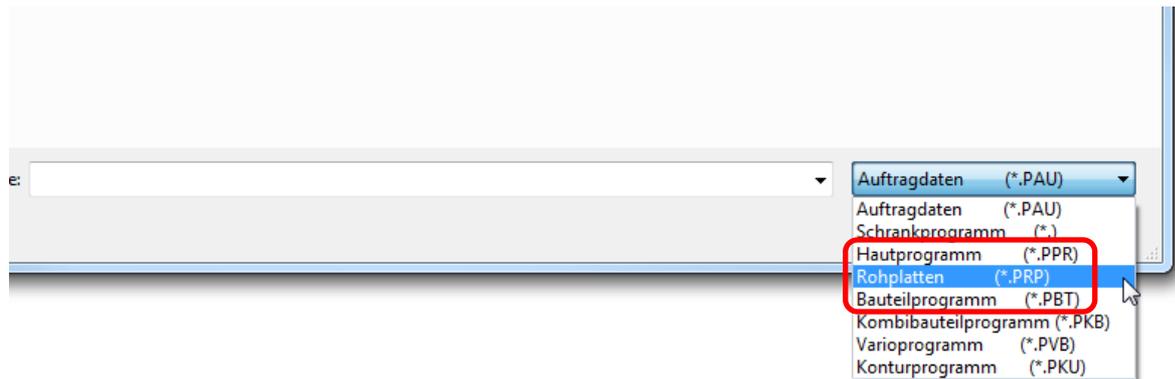

3. Choose „Rohplatten (*.PRP)“. After that you can select the VX25.PRP file
4. With the „START“ button the import transaction will be released.
After the import transaction is ended, the menu could be closed with „OK“.



Stand 03/2018